



IDEAL NETWORKS



LanTEK IV

Software Update Procedure
Systems currently running version 3.x

Depend on us




LanTEK IV Series Software 4.1.5 Update Package
(Version 3.x currently installed)

[Download Software](#)





**8-32GB
FAT32 Format**


1. Download the update file and copy to a USB flash drive.
2. Click Extract All.

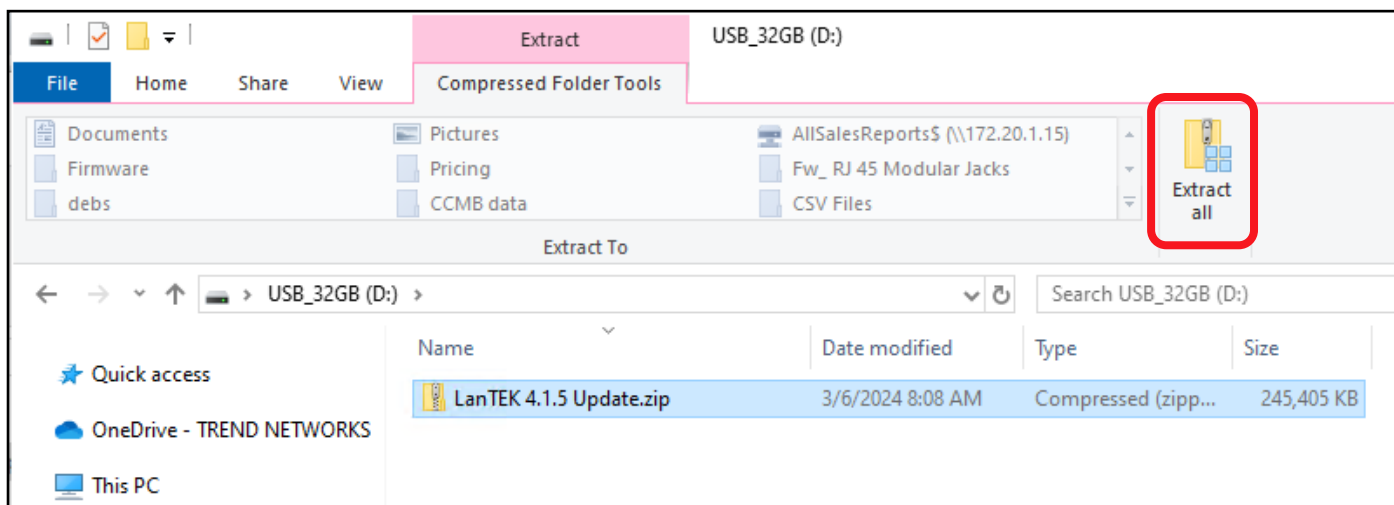

3. Change the extraction location so only the drive letter is shown, example D:\
4. Click Extract.

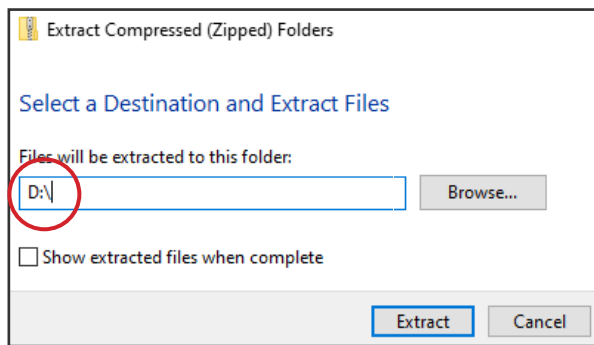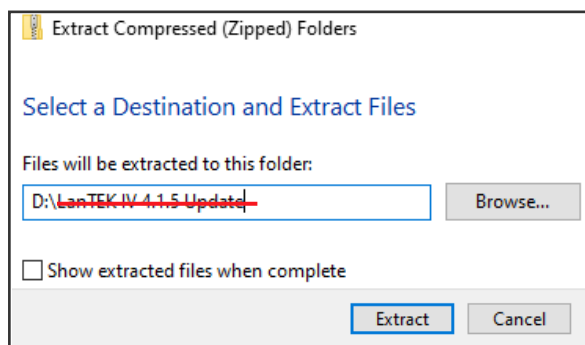

5. A folder named “debs” will be extracted to the root of the USB drive as shown below.

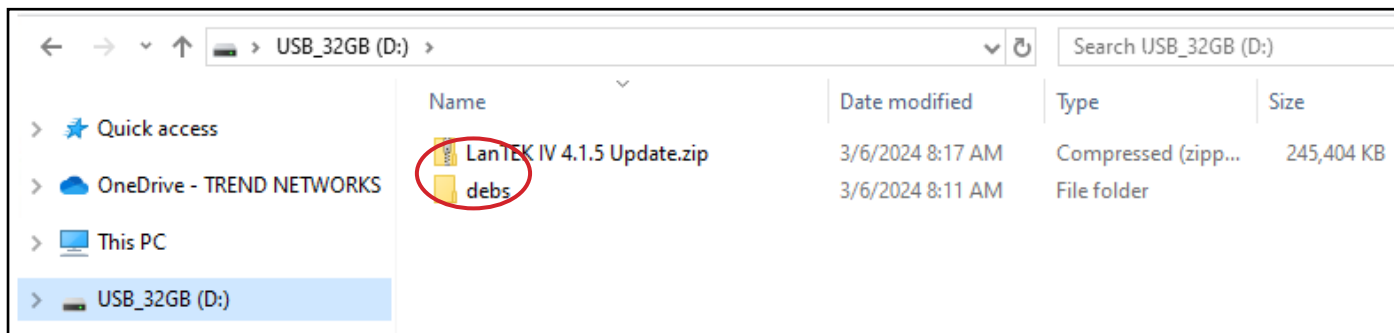



Update Main Handset

1. Power on the LanTEK.
2. Insert the USB drive.
3. Press the Settings icon at the upper-right of the home screen.





4. Press System Settings.
5. Press Software Update.
6. Press YES when prompted to update the software.

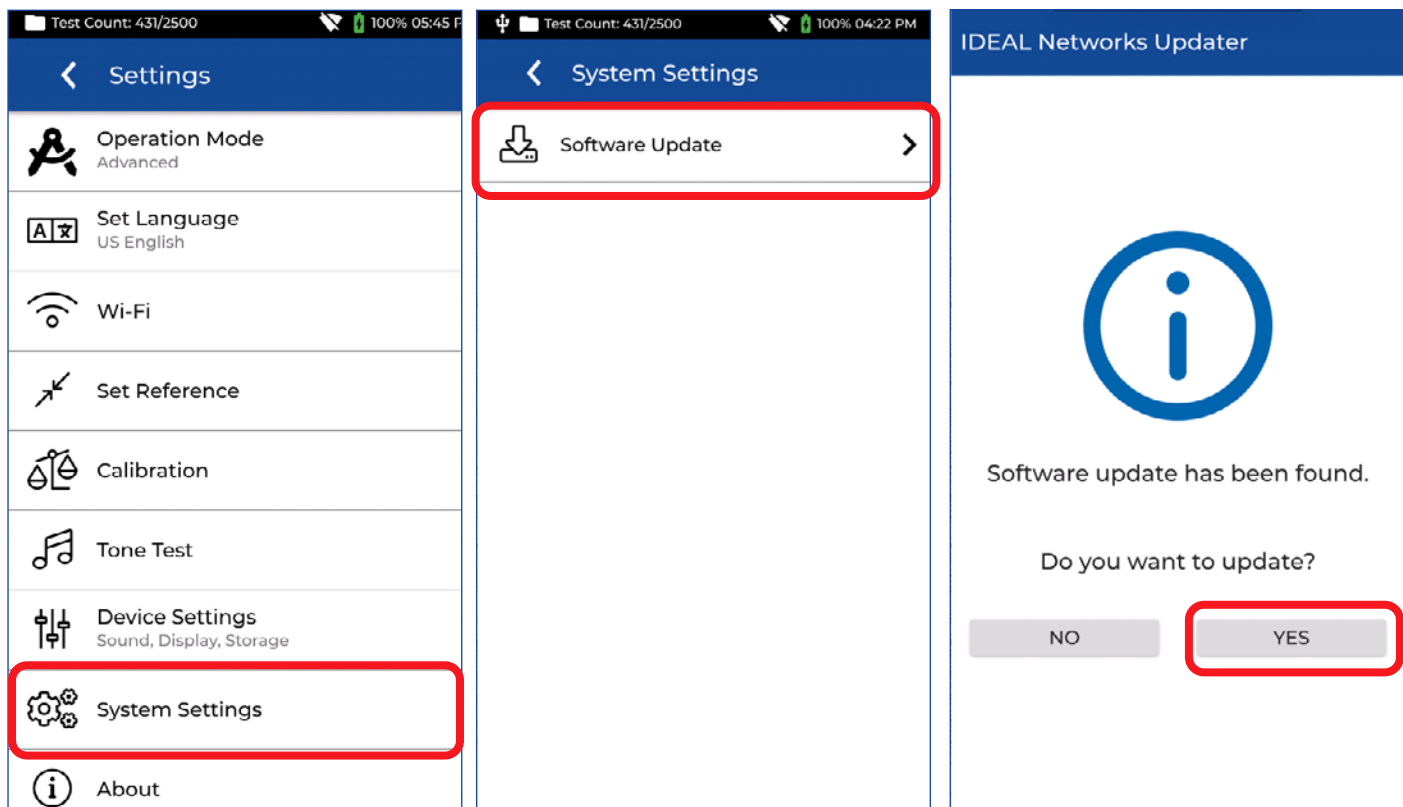

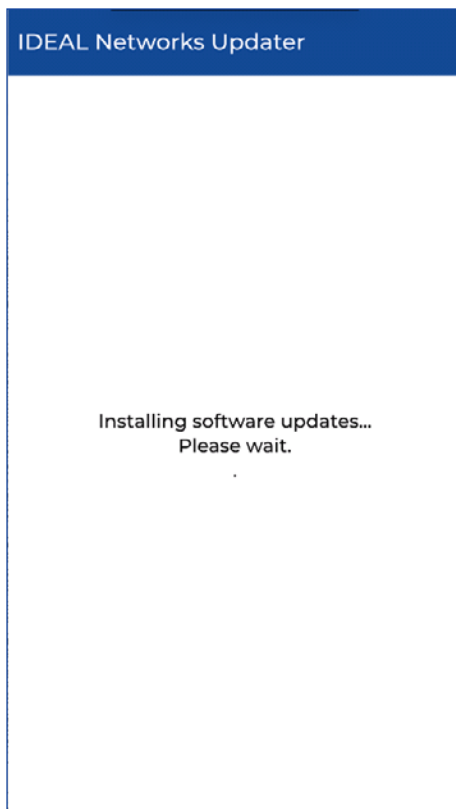


10-20 min.

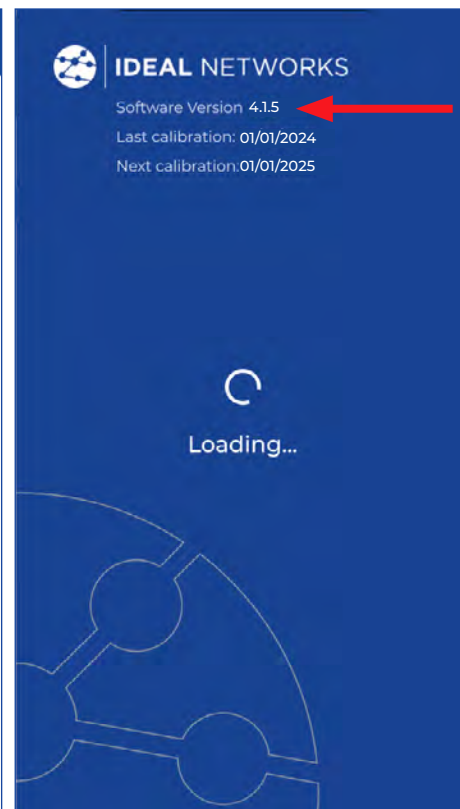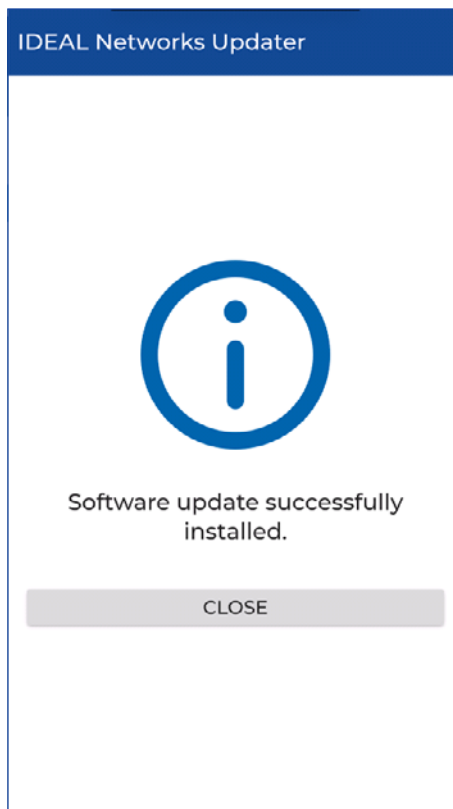


**The main handset is updated and ready for use.
The new version is displayed when the LanTEK IV is rebooted.**

Update the Remote Handset

1. Connect the power supply and turn the remote handset ON.
2. Insert the USB drive.
3. Wait for the Main and Remote indicators to light blue.

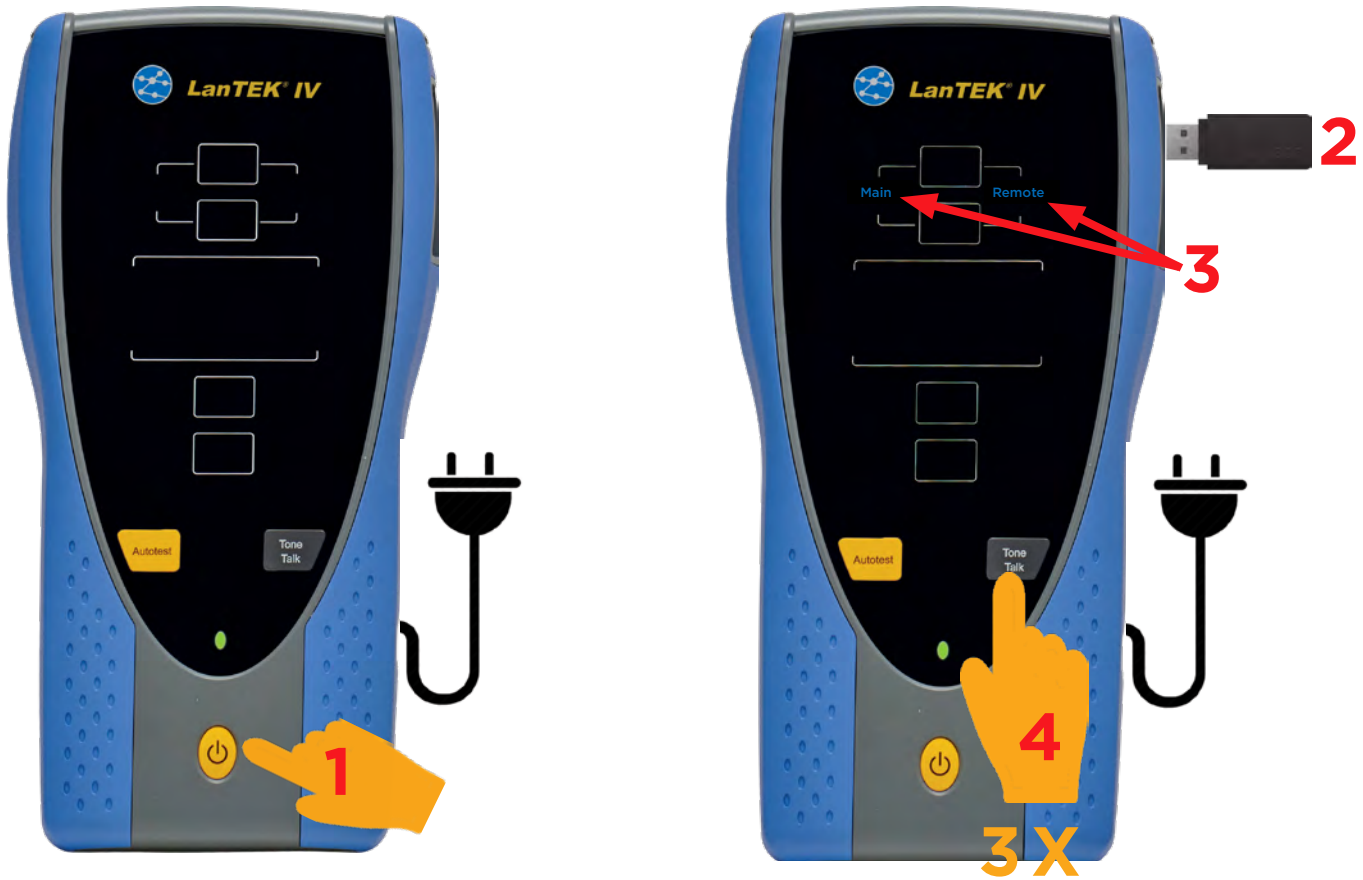

4. Press the Tone|Talk button **3 times** when the Main and Remote indicators are lit.
5. The Main and Remote indicators will alternately flash during the update.


10-20 min.



The Pass indicator will light green when the update is complete.
The LanTEK IV is ready for use.




(Optional) For optimal accuracy perform a Set Reference when the software update is complete.

1. Connect the handsets with a Permanent Link adapter and Channel adapter, or two Channel Adapters with a **2m (6.5ft)** patch cord



OR



2. Press Preferences  from the Home screen then select Set Reference.
3. Press Set Reference on the diagram.
4. Press OK when the process is finished.
5. The LanTEK IV is ready for use.

