

Manufacturing Plant:

SMARTS AMC

AREA MONITOR COMPACT

User's Manual

EQUIPMENT SERIAL NUMBER

You can find the Serial Number on the rear panel of the main unit and on the side of the wall support bracket.

Serial Number is in the form: 0000X00000.

The first four digits and the letter are the Serial Number prefix, the last five digits are the Serial Number suffix. The prefix is the same for identical instruments, it changes only when a configuration change is made to the instrument.

The suffix is different for each instrument.

NOTE:

® Names and Logo are registered trademarks of Narda Safety Test Solutions GmbH – Trade names are trademarks of the owners.



If the instrument is used in any other way than as described in this User's Manual, it may become unsafe.

Before using this product, the related documentation must be read with great care and fully understood to familiarize with all the safety prescriptions.

To ensure the correct use and the maximum safety level, the User shall know all the instructions and recommendations contained in this document.




This product is a **Safety Class III** instrument according to IEC classification and has been designed to meet the requirements of EN61010-1 (Safety Requirements for Electrical Equipment for Measurement, Control and Laboratory Use).







In accordance with the IEC classification, the power supply of this product meets requirements **Safety Class II** and **Installation Category II** (having double insulation and able to carry out mono-phase power supply operations).

It complies with the requirements of **Pollution Class II** (usually only non-conductive pollution). However, occasionally it may become temporarily conductive due to condense on it.


The information contained in this document is subject to change without notice.


EXPLANATION OF ELECTRICAL AND SAFETY SYMBOLS :


 You now own a high-quality instrument that will give you many years of reliable service. Nevertheless, even this product will eventually become obsolete. When that time comes, please remember that electronic equipment must be disposed of in accordance with local regulations. This product conforms to the WEEE Directive of the European Union (2002/96/EC) and belongs to Category 9 (Monitoring and Control Instruments). You can return the instrument to us free of charge for proper environment friendly disposal. You can obtain further information from your local Narda Sales Partner or by visiting our website at www.narda-sts.it.


	Warning, danger of electric shock		Earth
	Read carefully the Operating Manual and its instructions, pay attention to the safety symbols.		Unit Earth Connection
	Earth Protection		Equipotential

EXPLANATION OF SYMBOLS USED IN THIS DOCUMENT :

 The **DANGER** sign draws attention to a serious risk to a person's safety, which, if not avoided, will result in death or serious injury. All the precautions must be fully understood and applied before proceeding.

 The **WARNING** sign indicates a hazardous situation, which, if not avoided, could result in death or serious injury. All the precautions must be fully understood and applied before proceeding.

 The **CAUTION** sign indicates a hazardous situation, which, if not avoided, could result in minor or moderate injury.

 The **NOTICE** sign draws attention to a potential risk of damage to the apparatus or loss of data.

 **NOTE** The **NOTE** sign draws attention to important information.

Contents

Safety recommendations and instructions.....	VIII
EC Declaration of Conformity SMARTS AMC/00	IX
EC Declaration of Conformity SMARTS AMC/01	X

1 General information	Page
1.1 Documentation.....	1-1
1.2 Introduction.....	1-1
1.3 Standard accessories	1-3
1.4 Optional accessories.....	1-3
1.5 Main specifications.....	1-4
1.6 AMC Main unit.....	1-5
1.7 AMC/00 Wall support bracket and Interface	1-5
1.7.1 DB-15 User's Port and application example.....	1-6
1.8 AMC/01 Wall support bracket and Interface	1-7
1.9 Field Probes.....	1-8

2 Installation and use	Page
2.1 Introduction.....	2-1
2.2 Preliminary inspection.....	2-1
2.3 Working environment.....	2-1
2.4 Return for repair.....	2-1
2.5 Instrument cleaning.....	2-2
2.6 Installation and use.....	2-2
2.6.1 Wall mounted Installation.....	2-3
2.6.2 Tripod mounted installation.....	2-8
2.6.3 Ceiling mounted installation by Bracket.....	2-11
2.6.4 Ceiling mounted installation by Tripod AMC	2-11
2.6.5 Example of installation.....	2-12
2.6.6 Use with Power Over Ethernet (optional).....	2-14
2.7 Visual Led status, Manual button, Buzzer, Accelerometer, GSP.	2-15
2.7.1 Visual Led status.....	2-15
2.7.2 Manual button.....	2-16
2.7.3 Buzzer.....	2-16
2.7.4 Accelerometer.....	2-16
2.7.5 GSP.....	2-16
2.8 Power supply and battery recharging.....	2-17

3 Narda Probes Manager Software installation	Page
3.1 Introduction.....	3-1
3.2 Hardware requirements.....	3-1
3.3 Installation.....	3-1

4 Narda Probes Manager Operating instruction	Page
4.1 Introduction.....	4-1
4.2 Probe manager control window.....	4-6
4.2.1 Languages.....	4-7
4.2.2 Release.....	4-7
4.2.3 About.....	4-7
4.2.4 Serial number.....	4-7
4.2.5 Calibrations sensor.....	4-8
4.2.5.1 Altimeter.....	4-8
4.2.5.2 Compass.....	4-9
4.2.5.3 Date&Time.....	4-9
4.2.6 Appearance.....	4-10
4.2.7 Wireless connection.....	4-11
4.2.7.1 Wifi connection.....	4-11
4.2.7.2 Bluetooth connection.....	4-13
4.2.8 Standard (for EHP-2B probes only).....	4-14
4.2.9 Alarm Main unit and AMC Module.....	4-15
4.2.9.1 EHP-2B Alarms and Dual Standard alarm mode.....	4-17
4.2.10 Averaging Period.....	4-18
4.2.11 Battery voltage.....	4-18
4.3 Display Live measurements on the main window.....	4-19
4.3.1 Sample.....	4-22
4.3.2 Reading Rate.....	4-22
4.3.3 Correction Frequency, Correlated unit and Show limits graph..	4-23
4.3.4 Video Averaging.....	4-26
4.3.5 Max Hold.....	4-27
4.3.6 Minimized UI.....	4-27
4.3.7 Hold/Run.....	4-27
4.3.8 Device OFF.....	4-27
4.3.9 Exit.....	4-27
4.4 Saving Live measurements.....	4-28
4.4.1 Auto save txt.....	4-28
4.5 Display Live measurements on the graph (Plot).....	4-30
4.5.1 Settings.....	4-31
4.5.2 Hold/Run.....	4-31
4.5.3 Reset.....	4-31
4.5.4 Marker.....	4-32
4.5.5 Scale.....	4-32
4.5.6 Save.....	4-34
4.5.7 Exit.....	4-34
4.6 Storing measurements on LR-01 memory (Logger).....	4-35
4.6.1 Logger acquisition.....	4-35
4.6.2 Logger saving.....	4-36
4.6.3 Only press button.....	4-37
4.6.4 Time based (Every).....	4-37
4.6.5 Log format.....	4-38
4.6.6 Start Log.....	4-38
4.6.7 Stop Log.....	4-38
4.6.8 Only the first function and Download Log button.....	4-39
5 SMARTS AMC Management software instruction	Page
5.1 Introduction.....	5-1
5.2 Hardware requirements.....	5-2
5.3 Installation and use.....	5-2
5.3.1 MySQL Installation and configuration.....	5-3
5.3.2 SMARTS AMC Management software Installation.....	5-11
5.3.3 SMARTS AMC Management	5-14
Admin section.....	5-15
SMTP section.....	5-16
System section.....	5-16
Add station.....	5-16
Local Area Network	5-17
Remote Area Network.....	5-19
Settings and Calendar.....	5-19
Display and Export measurements.....	5-21
6 Update firmware	Page
6.1 Update Firmware.....	6-1
7 Uninstalling driver and software	Page
7.1 Uninstalling driver for the USB-OC.....	7-1
7.2 Uninstall Narda Probes Manager.....	7-2

8 LR01 Manager APP Operating instruction	Page
8.1 Introduction.....	8-1
8.2 Installation.....	8-1
8.3 LR01 Manager Main window.....	8-2
8.3.1 Menu.....	8-3
8.3.1.1 Settings.....	8-3
8.3.2 Technical data.....	8-4
8.3.3 Live Measurements.....	8-5
8.3.4 Logger and Save measurements.....	8-6
8.3.5 Info	8-7
9 Using of LR-01 with WearOS (Smartwatch)	Page
9.1 Introduction.....	9-1
9.2 Installation.....	9-1
9.3. Operations.....	9-2
9.3.1 Live Measurements.....	9-2
9.3.2 Technical data.....	9-3
9.3.3 Settings.....	9-4
9.4 Close the App.....	9-5
10 Command protocol	Page
10.1 Introduction.....	10-1
10.2 List of commands.....	10-3
10.3 Query commands.....	10-5
10.4 Settings commands	10-22
10.5 Log file.....	10-33
10.5.1 Log file data	10-34
10.5.1.1 Passive Probes Structure description.....	10-34
10.5.1.2 Single/Three Bands Probes Structure description.....	10-34
10.5.1.3 4-Bands Probes Structure description.....	10-35
10.5.1.4 EHP2B Active Probe Structure description.....	10-35
10.5.2 Field data	10-36
10.5.3 Additional GPS Structure description.....	10-38
10.5.3.1 Position Information.....	10-39
11 Accessories	Page
11.1 Introduction.....	11-1
11.2 Preliminary inspection.....	11-1
11.3 Work environment.....	11-1
11.4 Return for repair	11-1
11.5 Cleaning.....	11-1
11.6 USB-OC Optical USB Converter	11-2
11.6.1 Introduction.....	11-2
11.6.2 Installation.....	11-2
11.7 TR-02A Tripod.....	11-3
11.7.1 Introduction.....	11-3
11.8 AC/DC USB Power Supply and battery charger	11-5
11.8.1 Introduction	11-5
11.9 Carrying case.....	11-6
11.9.1 Introduction	11-6
11.10 PoE Injector (for SMARTS AMC/00 only).....	11-7
11.10.1 Introduction.....	11-7
12 Service	Page
12.1 Miscellaneous messages.....	12-1
12.2 Initial diagnostic	12-2

Figures

Figure		Page
1-1	Top panel.....	1-5
1-2	AMC/00 Wall support bracket and Interface (top view).....	1-5
1-3	AMC/00 Interface Connectors detail (bottom view).....	1-5
1-4	Programmable User's Port HD-15 female connector pinout.....	1-6
1-5	User's Port application example.....	1-6
1-6	AMC/01 Wall support bracket and Interface (top view).....	1-7
1-7	AMC/01 Interface Connectors detail (bottom view).....	1-7
1-8	EP-1B-09 Probe.....	1-9
1-9	EP-1B-10 Probe.....	1-10
1-10	EP-1B-11 Probe.....	1-11
1-11	EP-1B-12 Probe.....	1-12
1-12	EHP-2B-05 Shaped Probe	1-13
1-13	EHP-2B-06 Shaped Probe	1-14
1-14	EHP-2B-07 Shaped Probe	1-15
1-15	EHP-2B-08 Shaped Probe	1-16
2-1	AMC - Wall mounted.....	2-7
2-2	AMC on TR-02A.....	2-10
2-3	AMC on ceiling by Bracket.....	2-11
2-4	AMC on ceiling by Tripod AMC support.....	2-11
2-5	AMC in a multi-probe configuration.....	2-12
2-6	AMC link with Wi-Fi communication.....	2-12
2-7	AMC link with Bluetooth communication by smartwatch.....	2-13
2-8	AMC link with Bluetooth communication by mobile device.....	2-13
2-9	AMC Typical Immunity test irradiation configuration.....	2-13
2-10	AMC with Power Over Ethernet.....	2-14
2-11	Accelerometer axes orientation.....	2-16
11-1	USB-OC adapters.....	11-2
11-2	TR-02A Tripod	11-3
11-3	AMC on the TR-02A Tripod	11-4
11-4	AC/DC Power Supply and battery charger	11-5
11-5	USB Cable – USB(A)/USB(C).....	11-5
11-6	Carrying case.....	11-6
11-7	PoE Injector.....	11-7
11-8	TL-POE150S Front panel.....	11-7
11-9	TL-POE150S Rear panel.....	11-7

Tables

Table		Page
1-1	Main specifications	1-4
1-2	SMARTS AMC Area Monitor Compact Field Probes	1-8
2-1	Visual Led status.....	2-15
2-2	Visual Led status in Loggermode.....	2-15
2-3	Manual Log Button status.....	2-16
2-4	Buzzer status.....	2-16
2-5	Accelerometer axes orientation.....	2-16
10-1	Query commands list	10-3
10-2	Setting commands list.....	10-4
10-3	Query commands meaning.....	10-5
10-4	Setting commands meaning.....	10-22
11-1	Technical specifications of the USB-OC.....	11-2
11-2	Technical specifications of the TR-02A Tripod.....	11-3
11-3	Technical specifications of the AC/DC Power Supply	11-5
11-4	Technical specifications of the USB(A)/USB(C) Cable.....	11-5
11-5	Technical specifications of the Carrying case.....	11-6
11-6	Technical specifications of the PoE Injector	11-7

⚠ WARNING

SAFETY RECOMMENDATIONS AND INSTRUCTIONS

This product has been designed, produced and tested in Italy, and it left the factory in conditions fully complying with the current safety standards. To maintain it in safe conditions and ensure correct use, these general instructions must be fully understood and applied before the product is used.

- When the device must be connected permanently, first provide effective grounding;
- If the device must be connected to other equipment or accessories, make sure they are all safely grounded;
- In case of devices permanently connected to the power supply, and lacking any fuses or other devices of mains protection, the power line must be equipped with adequate protection commensurate to the consumption of all the devices connected to it;
- In case of connection of the device to the power mains, make sure before connection that the voltage selected on the voltage switch and the fuses are adequate for the voltage of the actual mains;
- Devices in Safety Class I, equipped with connection to the power mains by means of cord and plug, can only be plugged into a socket equipped with a ground wire;
- Any interruption or loosening of the ground wire or of a connecting power cable, inside or outside the device, will cause a potential risk for the safety of the personnel;
- Ground connections must not be interrupted intentionally;
- To prevent the possible danger of electrocution, do not remove any covers, panels or guards installed on the device, and refer only to NARDA Service Centers if maintenance should be necessary;
- To maintain adequate protection from fire hazards, replace fuses only with others of the same type and rating;
- Follow the safety regulations and any additional instructions in this manual to prevent accidents and damages.

Dichiarazione di Conformità *EU Declaration of Conformity*



In accordo alla Decisione 768/2008/EC, conforme alle direttive RED 2014/53/UE, EMC 2014/30/UE, Bassa Tensione 2014/35/UE e RoHS 2011/65/UE, ed anche alle norme ISO/IEC 17050-1 e 17050-2.

In accordance with the Decision 768/2008/EC, compliant to the Directives RED 2014/53/EU, EMC 2014/30/EU, Low Voltage 2014/35/EU and RoHS 2011/65/EU, also compliant to the ISO/IEC standard 17050-1 and 17050-2.

Il costruttore
The manufacturer

narda Safety Test Solutions S.r.l. Socio Unico

Indirizzo
Address

Via Benessea, 29 / B; I-17035 Cisano sul Neva (SV) - Italy

**sulla base delle seguenti norme europee armonizzate, applicate con esito positivo:
*based on the following harmonized European Standards, successfully applied:***

EMC:
EMC: **EN 301 489-1 (V2.2.3); EN 301 489-17 (V3.2.4); IEC EN 61326-1 (2021)**

Sicurezza:
Safety: **IEC EN 62368-1 (2020); EN 61010-1 (2010)**

Radio:
Radio: **EN 300 328 (V2.2.2)**

Salute:
Health: **IEC EN 62311:2020; IEC EN 62479:2010**

**dichiara, sotto la propria responsabilità, che il prodotto:
*declares, under its sole responsibility, that the product:***

Descrizione
Description **STAZIONE DI MONITORAGGIO COMPATTA
*AREA MONITOR COMPACT***

Modello
Model **SMARTS AMC/00**

**è conforme ai requisiti essenziali delle seguenti Direttive:
*conforms with the essential requirements of the following Directives:***

Apparecchiature Radio <i>RED</i>	2014/53/EU	Compatibilità Elettromagnetica <i>EMC</i>	2014/30/EU
Bassa Tensione <i>Low Voltage</i>	2014/35/EU	RoHS <i>RoHS</i>	2011/65/EU

Cisano sul Neva, 01 February 2024

**Egon Stocca
General Manager**

EC Conformity

IX

Dichiarazione di Conformità *EU Declaration of Conformity*

In accordo alla Decisione 768/2008/EC, conforme alle direttive RED 2014/53/UE, EMC 2014/30/UE, Bassa Tensione 2014/35/UE e RoHS 2011/65/UE, ed anche alle norme ISO/IEC 17050-1 e 17050-2.

In accordance with the Decision 768/2008/EC, compliant to the Directives RED 2014/53/EU, EMC 2014/30/EU, Low Voltage 2014/35/EU and RoHS 2011/65/EU, also compliant to the ISO/IEC standard 17050-1 and 17050-2.

Il costruttore
The manufacturer **narda Safety Test Solutions S.r.l. Socio Unico**

Indirizzo
Address **Via Benessea, 29 / B; I-17035 Cisano sul Neva (SV) - Italy**

sulla base delle seguenti norme europee armonizzate, applicate con esito positivo:
based on the following harmonized European Standards, successfully applied:

EMC:
EMC: **EN 301 489-1 (V2.2.3); EN 301 489-17 (V3.2.4); IEC EN 61326-1 (2021)**

Sicurezza:
Safety: **IEC EN 62368-1 (2020); EN 61010-1 (2010)**

Radio:
Radio: **EN 300 328 (V2.2.2)**

Salute:
Health: **IEC EN 62311:2020; IEC EN 62479:2010**

dichiara, sotto la propria responsabilità, che il prodotto:
declares, under its sole responsibility, that the product:

Descrizione
Description **STAZIONE DI MONITORAGGIO COMPATTA
AREA MONITOR COMPACT**

Modello
Model **SMARTS AMC/01**

è conforme ai requisiti essenziali delle seguenti Direttive:
conforms with the essential requirements of the following Directives:

Apparecchiature Radio <i>RED</i>	2014/53/EU	Compatibilità Elettromagnetica <i>EMC</i>	2014/30/EU
Bassa Tensione <i>Low Voltage</i>	2014/35/EU	RoHS <i>RoHS</i>	2011/65/EU

Cisano sul Neva, 01 February 2024

Egon Stocca
General Manager



X

Safety considerations

1 – General information

1.1 Documentation

The following documents are included in this Manual:

- A questionnaire to be sent to NARDA together with the apparatus should service be required.
- A checklist of the accessories included in the shipment.

1.2 Introduction

The Area Monitor Compact SMARTS AMC/00 and SMARTS AMC/01 are a flexible and modern solution for continuous monitoring system. The AMC are designed to maintain compact dimensions, so that it is possible to install it almost everywhere; the SMARTS AMC/01 model is a rated IP65 product, suitable for outdoor use.

The SMARTS AMC Area Monitor Compact is also an ideal solution for EMC applications, in chambers and TEM/GTEM cells, and in EMF applications.

Both SMARTS AMC models with internal Wi-Fi module disabled (Radio free) are also available on the market.

The AMC performs live measurements and programmable operations (Logger), records and plots the results, and provides on-board acoustic, visual and vibration alarms; the SMARTS AMC/00 also allows optocoupled or relays through DB-15 connector.

The AMC consists of a protective case made of material that is transparent to electromagnetic fields and designed to house the main unit and its probe. The cylindrical-shaped diffuser ensures uniform distribution light on indoor and outdoor environments when the station is on or in alarm.

The Area Monitor Compact is equipped with a series of electric and magnetic field probes in the frequency range from 100 kHz to 60 GHz. The probe is connected to the main unit by a dedicated heavy-duty connector, which features excellent shielding properties and can therefore be used at very high field strengths without interference (see §1.9).

The AMC main unit has an internal rechargeable battery and connected to a round shaped base that encloses an USB-C and RP02 connector. The SMARTS AMC/00 interface also provides an RJ45 connector for Ethernet LAN with PoE if necessary, a programmable DB-15 User's Port for external devices or trigger measurements under specific conditions, and a buzzer to increase the range of the sound signal (see §1.6, §1.7, §1.7.1).

The AMC is connected to a PC via fiber optic cable (through USB-OC adapter) or wired USB or Wi-Fi connection with Probe Manager (see Chapter 3, 4 and 6) or SMARTS AMC Management software (see Chapter 5); the SMARTS AMC/00 can also be connected via Ethernet cable.

The Bluetooth connection is available for Android and iOS device through LR-01 Manager App (see Chapter 8 and 9).

In addition to the software delivered with the AMC, the communication and control protocol is freely provided so users can fully control the Area Monitor Compact with their usual test software (see Chapter 10).

The MAC address assigned by the manufacturer is located externally on one side of the Wall bracket

The Area Monitor Compact can be installed wall mounted by bracket or suitable for ground installation with the provided Tripod AMC support and the option TR-02A or upside-down if ceiling mounted (see Chapter 2).

The below examples show the SMARTS AMC/00 model only.



1.3 Standard accessories

Standard accessories included with SMARTS AMC/00:

- Main unit
- USB Cable – USB(A)/USB(C), 2 m long
- AC/DC Converter with plug adapters
- RP-02/10 Fiber Optic cable, 10 m long
- USB-OC Optical Converter
- AMC Interface
- Wall support bracket
- Radome AMC
- Tripod AMC support
- 2.5mm and 3mm Allen Key
- Tool Kit of screws and washers
- Expansion plugs
- Software Media including User's Manual
- Certificate of Calibration

Standard accessories included with SMARTS AMC/01:

- Main unit
- USB Cable – USB(A)/USB(C), 2 m long
- AC/DC Converter with plug adapters
- Sealing insert 1x4/1x7mm
- FO-AMC01/10 Fiber Optic cable, 10 m long
- USB-OC Optical Converter
- AMC Interface
- Wall support bracket
- Radome AMC
- Tripod AMC support
- 2.5mm and 3mm Allen Key
- Tool Kit of screws and washers
- Expansion plugs
- Software Media including User's Manual
- Certificate of Calibration

1.4 Optional accessories

Accessories supplied separately (on charge):

- Cable, DB15(m)/DB15(m), 1,8 m (for AMC/00 only)
- Ethernet cable, 5 m (for AMC/00 only)
- Power Over Ethernet injector (for AMC/00 only)
- RP-02/20 Fiber Optic cable, 20 m long (for AMC/00 only)
- RP-02/40 Fiber Optic cable, 40 m long (for AMC/00 only)
- FO-AMC01/20 Fiber Optic cable, 20 m long (for AMC/01 only)
- FO-AMC01/40 Fiber Optic cable, 40 m long (for AMC/01 only)
- TR-02A Tripod complete with joint
- Carrying case
- EP-1B-09 E-Field Probe
- EP-1B-10 E-Field Probe
- EP-1B-11 E-Field Probe
- EP-1B-12 E-Field Probe
- EHP-2B-05 E and H-Field Shaped Probe
- EHP-2B-06 E and H-Field Shaped Probe
- EHP-2B-07 E and H-Field Shaped Probe
- EHP-2B-08 E and H-Field Shaped Probe

1.5 Main specifications

When not differently specified, the following specifications refers to an operating ambient temperature of 23°C and relative humidity of 50%.

Table 1-1 Technical specifications	
Interfaces	Optical (RP-02), USB-C, WiFi (802.11 b/g/n) ⁽⁷⁾ , Bluetooth (5.0) ⁽⁷⁾ , Ethernet 10/100 BaseT (PoE) ⁽⁶⁾ , User's Port ⁽⁶⁾
Optical fiber connection	Serial Optical Interface 115200 Baud RP02 connector up to 40 m (USB-OC)
Sampling time	Automatic from 0.3 s
Internal log interval	Settable from 1 s to 1 hour, manually triggered, on adjustable threshold
Max data storage capability	Up to 250000 points ⁽¹⁾
Probe depending specifications	Frequency range, Frequency flatness, Dynamic range, Resolution, Sensitivity, Accuracy, Overload, Measurement units, Detector, Sampling rate, Acquisition method
GPS module	GNSS module Satellite System GPS + QZSS + GLONASS + GALILEO
Supplementary data Battery voltage and capacity Data & Time Temperature Humidity (relative) Pressure GPS coordinates Altitude Compass Speed Acceleration	Internal sensor for reporting and logging
Warnings and Alarms notifications	Field, Probe, Temperature, Humidity, Battery, Communications
Alarms indication	Acoustic, Visual, Vibration, Data log
Sound pressure level (SPL) @ 10cm	95 dBA
Internal memory	256 Mb
Calibration ⁽²⁾	internal E ² PROM
Internal battery	3.7 V / 1320 mAh Li-Ion, rechargeable
Operating time ⁽³⁾	Stand alone mode up to 100 hours Optical mode ⁽⁴⁾ up to 60 hours BT mode ⁽⁴⁾ up to 20 hours WiFi mode ⁽⁴⁾ up to 10 hours
Recharging time	< 2.5 hours
External power supply	5 VDC, I _{max} 2A
Firmware updating	Through the optical link
Self test	Automatic at power on
Operating temperature	-20 to +55 °C
Storage temperature	-30 to +75°C
Operating relative humidity ⁽⁵⁾	5 to 95 %
Ingress protection	Up to IP42 (SMARTS AMC/00) Up to IP65 (SMARTS AMC/01)
Dimensions	Ø 86mm, Height 306mm (SMARTS AMC/00) Ø 70mm, Height 370mm (SMARTS AMC/01) Wall distance 93mm with support Bracket
Weight	350g only the AMC Wall support bracket and Interface. 800g total weight.

Specification are subject to change without notice

- (1) In logger mode extended format
- (2) Recommended re-calibration interval 24 month
- (3) Operating time depends on the driven probe, measure setting, and communication channel
- (4) Continuous communication worst case
- (5) Without condensation
- (6) For SMARTS AMC/00 model only
- (7) Disabled on Radio free model

1.6 AMC Main unit

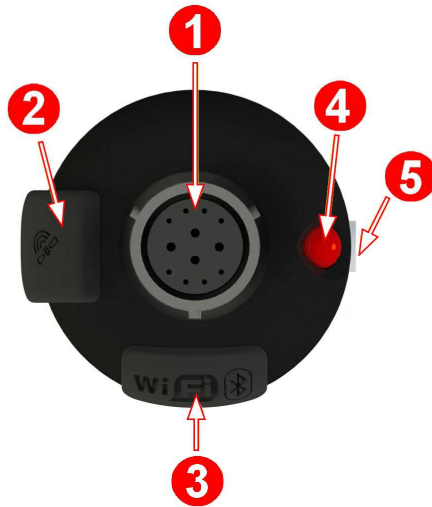


Fig. 1-1 Top panel

Legend:

1. Robust bayonet connector
2. GPS antenna
3. Wireless antennas
4. Visual Led (see §2.7)
5. Manual log button

1.7 SMARTS AMC/00 Wall support bracket and Interface

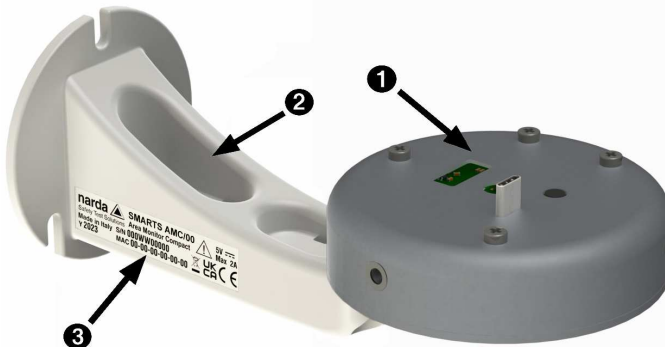


Fig. 1-2 Wall support bracket and AMC Interface (top view)

Legend:

1. AMC Interface
2. Wall bracket
3. Identification label with Serial number, MAC address and safety note

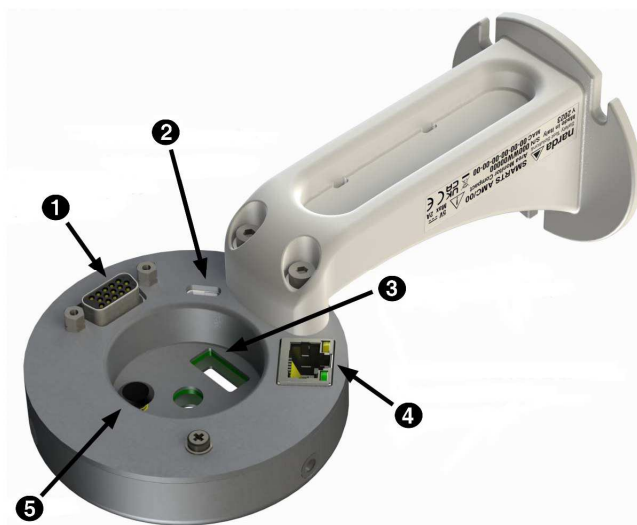


Fig. 1-3 AMC Interface Connectors detail (bottom view)

Legend:

1. User Port (see upcoming paragraph)
2. USB-C connector
3. Fiber Optic window
4. Ethernet 10/100 BaseT RJ45 connector (PoE ready)
5. ON/OFF button

1.7.1 DB-15 User's Port and application example (for SMARTS AMC/00)

The SMARTS AMC Area Monitor Compact is also equipped with DB-15 (HD-15) connector for the Programmable User's Port.

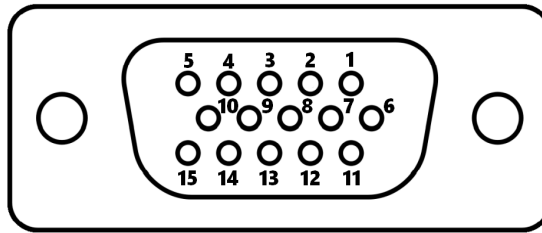


Fig. 1-4 Programmable User's Port HD-15 female connector pinout

1 GND	6 +5 Volt power out	11 OUT2 Emitter
2 OUT4 N.C Relay	7 OUT2 Collector	12 OUT1 Emitter
3 OUT4 Com. Relay	8 OUT1 Collector	13 N.A
4 OUT4 N.O. Relay	9 N.A	14 N.A
5 OUT3 Com. Relay	10 OUT3 N.C Relay	15 N.A

There are two optocoupled outputs (OUT1 and OUT2) and two relais output (OUT3 and OUT4).

Then there is a +5 V, 150 mA max protected output supply, and a ground pin.



Please, refer to the ?AMCk* and SAMCk para* command on the chapter 10 of this manual for the status and settings of the DB-15 User's port.

Input and output signals of the User's Port are optocoupled or relais protected and can be used to control external devices or to trigger measurements under specific conditions.

When the command **SAMCR para*** is enabled in presence of an alarm the port OUT3 (pin 5 and 10) and port OUT4 (pin2 and 3) of relay are normally closed. The pin 3 and 4 (OUT4) shows a normally open contact of the same relay.

Port OUT1 (pin 8 and 12) and OUT2 (pin7 and 11) are connected to the collector and emitter of the BJT of optocoupler. When the command **SAMC1 para*** is enabled in presence of an alarm the port OUT1 (pin 8 and 12) are closed in the same way the command **SAMC2 para*** close the port OUT2 (pin 7 and 11).

Typical examples are when interfacing: position sensors, movement sensors, interlock etc. Another example could be the activation of an external powerful alarm siren.

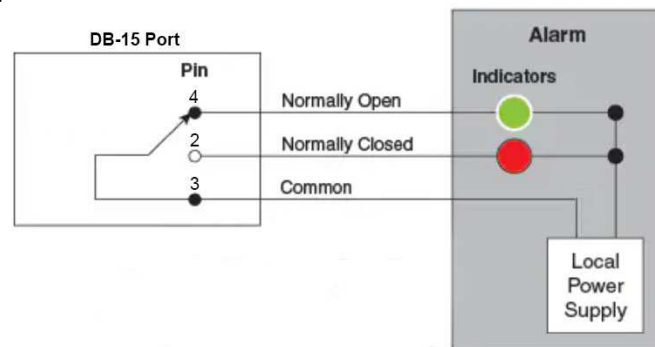


Fig. 1-5 User's Port application example

1.8 SMARTS AMC/01 Wall support bracket and Interface

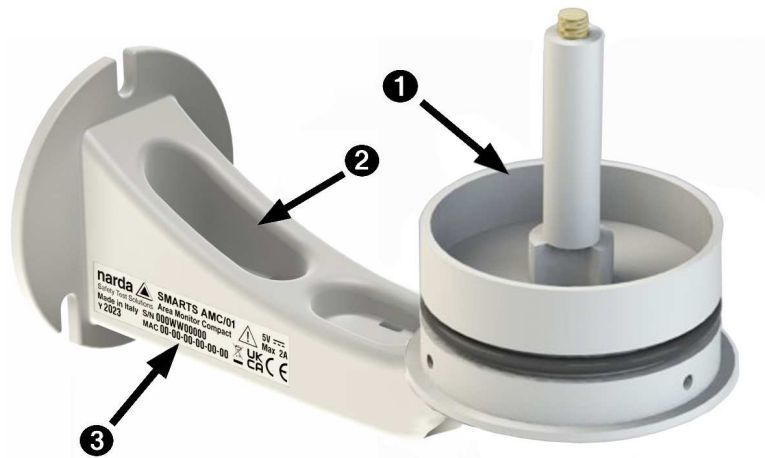


Fig. 1-6 Wall support bracket and AMC Interface (top view)

Legend:

1. AMC Interface
2. Wall bracket
3. Identification label with Serial number, MAC address and safety note



Fig. 1-7 AMC Interface Connectors detail (bottom view)

Legend:

1. Gland for USB-C cable only or Gland for both USB-C and FO-AMC01 Fiber optic cable

1.9 Field Probes

The following list shows the Field probes designed for SMARTS AMC Area Monitor Compact

TABLE 1-2 Technical Specifications of SMARTS Area Monitor Compact Field Probes		
Field Probe	Range of frequency	Reading
ELECTRIC FIELD PROBE EP-1B-09	100 kHz – 8 GHz	0.2 – 200 V/m
ELECTRIC FIELD PROBE EP-1B-10	300 kHz – 40 GHz	0.5 – 800 V/m
ELECTRIC FIELD PROBE EP-1B-11	100 kHz – 12.5 GHz	0.2 – 200 V/m
ELECTRIC FIELD PROBE EP-1B-12	300 kHz – 18 GHz	0.5 – 800 V/m
ELECTRIC AND MAGNETIC FIELD SHAPED PROBE EHP-2B-05	E: 500 kHz – 9.25 GHz H: 20 MHz – 1 GHz	E: 0.1 (0.5) – 1000 % H: 0.3 (1.5) – 1000 %
ELECTRIC AND MAGNETIC FIELD SHAPED PROBE EHP-2B-06	E: 500 kHz – 60 GHz H: 20 MHz – 1 GHz	E: 0.1 (0.5) – 1000 % H: 0.3 (1.5) – 1000 %
ELECTRIC AND MAGNETIC FIELD SHAPED PROBE EHP-2B-07	E: 1.34 MHz – 9.25 GHz H: 1 MHz – 1 GHz	E: 0.1 (0.5) – 1000 % H: 0.3 (1.5) – 1000 %
ELECTRIC AND MAGNETIC FIELD SHAPED PROBE EHP-2B-08	E: 1.34 MHz – 60 GHz H: 1 MHz – 1 GHz	E: 0.1 (0.5) – 1000 % H: 0.3 (1.5) – 1000 %

With EHP-2B shaped models of field probes, after selecting the desired limit, the Area Monitor Compact gives the percentage of level referred to it.

Probes belonging to this group allow measurements compensation based on frequency.

If the frequency of the signal (applicable only for single-tone) to be measured is known, it is possible to apply an automatic flatness correction, and the AMC is also able to properly switch between linear (electric and magnetic field) and quadratic (power density) detection according to the standard and frequency. In other words, the field level evaluation becomes linear under 10 MHz (for both standard ICNIRP98 and SC6) or 30 MHz (for ICNIRP2020).



These probes are designed to achieve compact dimensions, useful for area monitoring, therefore resulting a good compromise between size and performance.



To use the EP-1B-09, EP-1B-10, EP-1B-11 and EP-1B-12 with SMARTS AMC Area Monitor Compact it's necessary the Firmware release 1.28 or higher.

ELECTRIC FIELD PROBE EP-1B-09

Frequency range	0.1 MHz – 8 GHz
Level range	0.2 – 200 V/m
Overload	600 V/m
Linearity ⁽¹⁾	+/- 0.5 dB (+/- 0.3 dB typical)
Dynamic range	> 60 dB
Resolution	0.01 V/m
Sensitivity	0.2 V/m
Frequency flatness (typical)	0.1 – 0.2 MHz +/-4 dB 0.2 – 4000 MHz +/- 1.5 dB 4000 – 8000 MHz +3.5/-1.5 dB
Anisotropy @ 6 V/m ⁽²⁾	+/- 0.8 dB (+/- 0.6 dB typical)
Temperature error	0.03 dB/°C
Temperature sensor	On board
Field sensor	Triaxial orthogonal dipoles
A/D conversion	On board
Calibration ⁽³⁾	internal E ² PROM
Operating temperature	-20 to +55 °C
Operating relative humidity ⁽⁴⁾	5 to 95 %
Storage temperature	-30 to +75°C
Dimensions	165 mm length, 54mm diameter
Weight	100 g

Specification are subject to change without notice

When not differently specified the following specifications are referred to operating ambient temperature 23°C and relative humidity 50%.

Note (1): At 50 MHz on related level range 6dB above the noise floor

Note (2): At 50 MHz

Note (3): Recommended re-calibration interval 24 month

Note (4): Without condensation



Fig. 1-8 EP-1B-09 probe



To use the EP-1B-09 with LR-01 Logger Repeater it's necessary the Firmware release 1.28 or higher.

ELECTRIC FIELD PROBE EP-1B-10

Frequency range	0.3 MHz – 40 GHz
Level range	0.5 – 800 V/m
Overload	1200 V/m
Linearity ⁽¹⁾	+/- 0.5 dB (+/- 0.3 dB typical)
Dynamic range	> 64 dB
Resolution	0.01 V/m
Sensitivity	0.5 V/m
Frequency flatness (typical)	0.3 – 4000 MHz +/- 1.5 dB 4 – 30 GHz +3.5/-2 dB 30 – 40 GHz +3.5/-3 dB
Anisotropy @ 6 V/m ⁽²⁾	+/- 0.8 dB (+/- 0.5 dB typical)
Temperature error	0.03 dB/°C
Temperature sensor	On board
Field sensor	Triaxial orthogonal dipoles
A/D conversion	On board
Calibration ⁽³⁾	internal E ² PROM
Operating temperature	-20 to +55 °C
Operating relative humidity ⁽⁴⁾	5 to 95 %
Storage temperature	-30 to +75°C
Dimensions	165 mm length, 54mm diameter
Weight	100 g

Specification are subject to change without notice

When not differently specified the following specifications are referred to operating ambient temperature 23°C and relative humidity 50%.

Note (1): At 200 MHz on related level range 6dB above the noise floor

Note (2): At 930 and 1800 MHz

Note (3): Recommended re-calibration interval 24 month

Note (4): Without condensation



Fig. 1-9 EP-1B-10 probe



To use the EP-1B-10 with LR-01 Logger Repeater it's necessary the Firmware release 1.28 or higher.

ELECTRIC FIELD PROBE EP-1B-11

Frequency range	0.1 MHz – 12.5 GHz
Level range	0.2 – 200 V/m
Overload	600 V/m
Linearity ⁽¹⁾	+/- 0.5 dB (+/- 0.3 dB typical)
Dynamic range	> 60 dB
Resolution	0.01 V/m
Sensitivity	0.2 V/m
Frequency flatness (typical)	0.1 – 0.2 MHz +/-4 dB 0.2 – 4000 MHz +/- 1.5 dB 4000 – 12500 MHz +3.5/-1.5 dB
Anisotropy @ 6 V/m ⁽²⁾	+/- 0.8 dB (+/- 0.6 dB typical)
Temperature error	0.03 dB/°C
Temperature sensor	On board
Field sensor	Triaxial orthogonal dipoles
A/D conversion	On board
Calibration ⁽³⁾	internal E ² PROM
Operating temperature	-20 to +55 °C
Operating relative humidity ⁽⁴⁾	5 to 95 %
Storage temperature	-30 to +75°C
Dimensions	165 mm length, 54mm diameter
Weight	100 g

Specification are subject to change without notice

When not differently specified the following specifications are referred to operating ambient temperature 23°C and relative humidity 50%.

Note (1): At 50 MHz on related level range 6dB above the noise floor

Note (2): At 50 MHz

Note (3): Recommended re-calibration interval 24 month

Note (4): Without condensation



Fig. 1-10 EP-1B-11 probe



To use the EP-1B-11 with LR-01 Logger Repeater it's necessary the Firmware release 1.28 or higher.

ELECTRIC FIELD PROBE EP-1B-12

Frequency range	0.3 MHz – 18 GHz
Level range	0.5 – 800 V/m
Overload	1200 V/m
Linearity ⁽¹⁾	+/- 0.5 dB (+/- 0.3 dB typical)
Dynamic range	> 64 dB
Resolution	0.01 V/m
Sensitivity	0.5 V/m
Frequency flatness (typical)	0.3 – 4000 MHz +/- 1.5 dB 4 – 18 GHz +3.5/-2 dB
Anisotropy @ 6 V/m ⁽²⁾	+/- 0.8 dB (+/- 0.5 dB typical)
Temperature error	0.03 dB/°C
Temperature sensor	On board
Field sensor	Triaxial orthogonal dipoles
A/D conversion	On board
Calibration ⁽³⁾	internal E ² PROM
Operating temperature	-20 to +55 °C
Operating relative humidity ⁽⁴⁾	5 to 95 %
Storage temperature	-30 to +75°C
Dimensions	165 mm length, 54mm diameter
Weight	100 g

Specification are subject to change without notice

When not differently specified the following specifications are referred to operating ambient temperature 23°C and relative humidity 50%.

Note (1): At 200 MHz on related level range 6dB above the noise floor

Note (2): At 930 and 1800 MHz

Note (3): Recommended re-calibration interval 24 month

Note (4): Without condensation



Fig. 1-11 EP-1B-12 probe



To use the EP-1B-12 with LR-01 Logger Repeater it's necessary the Firmware release 1.28 or higher.

DUAL-BAND ELECTRIC AND MAGNETIC SHAPED FIELD PROBE EHP-2B-05 **For ICNIRP 1998 and SC6 2015**

		Electric Field	Magnetic Field
Frequency range	ICNIRP 1998	Occupational General Public	20 – 1000 MHz
	SC6 2015	Controlled Uncontrolled	
Level range ⁽¹⁾	Occupational / Controlled		0.1 – 1000 %
	General Public / Uncontrolled		0.5 – 1000 %
Overload		2000 %	
Linearity ⁽²⁾		+/- 0.5 dB	
Power (Amplitude) dynamic range	Occupational / Controlled		40 (80) dB
	General Public / Uncontrolled		33 (66) dB
Resolution		0.01 %	
Sensitivity	Occupational / Controlled		0.1 %
	General Public / Uncontrolled		0.5 %
Frequency flatness ⁽³⁾ (typ)	ICNIRP 1998	Occupational	20 – 1000 MHz +/-3 dB
		General Public	
	SC6 2015	Controlled	
		Uncontrolled	
Anisotropy ⁽⁴⁾		+/- 0.5 dB	
Temperature error ⁽⁴⁾		0.03 dB/°C	0.01 dB/°C
Temperature sensor		On board	
Field sensor		Triaxial orthogonal dipoles	Triaxial orthogonal loops
A/D conversion		On board	
Calibration ⁽⁵⁾		internal E ² PROM	
Operating temperature		-20 to +55 °C	
Operating relative humidity ⁽⁶⁾		5 to 95 %	
Storage temperature		-30 to +75°C	
Dimensions		165 mm length, 54mm diameter	
Weight		100 g	

Specification are subject to change without notice

When not differently specified the following specifications are referred to operating ambient temperature 23°C and relative humidity 50%.

Note (1): Power density referred.

Note (2): At 50 MHz on related level range 6dB above the noise floor

Note (3): Relative to 10% of the standard limit

Note (4): At 50 MHz / 10% of the standard limit

Note (5): Recommended re-calibration interval 24 month

Note (6): Without condensation

(*) All probes include on board A/D conversion, calibration factors on E₂PROM, and temperature sensor



Fig. 1-12 EHP-2B-05 probe

DUAL-BAND ELECTRIC AND MAGNETIC SHAPED FIELD PROBE EHP-2B-06
For ICNIRP 1998 and SC6 2015

		Electric Field	Magnetic Field
Frequency range	ICNIRP 1998	0.5 MHz – 60 GHz	20 – 1000 MHz
	Occupational General Public		
	SC6 2015	3 MHz – 60 GHz	
	Controlled Uncontrolled		
Level range ⁽¹⁾	Occupational / Controlled	0.1 – 1000 %	0.3 – 1000 %
	General Public / Uncontrolled	0.5 – 1000 %	1.5 – 1000 %
Overload	2000 %		
Linearity ⁽²⁾	+/- 0.5 dB		
Power (Amplitude) dynamic range	Occupational / Controlled	40 (80) dB	35 (70) dB
	General Public / Uncontrolled	33 (66) dB	28 (56) dB
Resolution	0.01 %		
Sensitivity	Occupational / Controlled	0.1 %	0.3 %
	General Public / Uncontrolled	0.5 %	1.5 %
Frequency flatness ⁽³⁾ (typ)	ICNIRP 1998	Occupational	20 – 1000 MHz +/-3 dB
		General Public	
	SC6 2015	Controlled	
		Uncontrolled	
Anisotropy ⁽⁴⁾	+/- 0.5 dB		
Temperature error ⁽⁴⁾	0.03 dB/°C		0.01 dB/°C
Temperature sensor	On board		
Field sensor	Triaxial orthogonal dipoles		Triaxial orthogonal loops
A/D conversion	On board		
Calibration ⁽⁵⁾	internal E ² PROM		
Operating temperature	-20 to +55 °C		
Operating relative humidity ⁽⁶⁾	5 to 95 %		
Storage temperature	-30 to +75°C		
Dimensions	165 mm length, 54mm diameter		
Weight	100 g		

Specification are subject to change without notice

When not differently specified the following specifications are referred to operating ambient temperature 23°C and relative humidity 50%.

Note (1): Power density referred.

Note (2): At 50 MHz on related level range 6dB above the noise floor

Note (3): Relative to 10% of the standard limit

Note (4): At 50 MHz / 10% of the standard limit

Note (5): Recommended re-calibration interval 24 month

Note (6): Without condensation

(*) All probes include on board A/D conversion, calibration factors on E₂PROM, and temperature sensor



Fig. 1-13 EHP-2B-06 probe

DUAL-BAND ELECTRIC AND MAGNETIC SHAPED FIELD PROBE EHP-2B-07
For ICNIRP 2020 and FCC 96-326*

			Electric Field	Magnetic Field
Frequency range	ICNIRP 2020	Occupational General Public	5 – 9250 MHz	1 – 1000 MHz
	FCC 96-326	Occupational General Pop.	2 – 9250 MHz 1.34 – 9250 MHz	2 – 1000 MHz 1 – 1000 MHz
Level range ⁽¹⁾	Occupational		0.1 – 1000 %	0.3 – 1000 %
	General P.		0.5 – 1000 %	1.5 – 1000 %
Overload			2000 %	
Linearity ⁽²⁾			+/- 0.5 dB	
Power (Amplitude) dynamic range	Occupational		40 (80) dB	35 (70) dB
	General P.		33 (66) dB	28 (56) dB
Resolution			0.01 %	
Sensitivity	Occupational		0.1 %	0.3 %
	General P.		0.5 %	1.5 %
Frequency flatness ⁽³⁾ (typ)	ICNIRP 2020	Occupational	5 – 9250 MHz +/-2 dB	1 – 200 MHz +3.5/-1 dB
		General Public		200 – 1000 MHz +3.5/-4 dB
	FCC 96-326	Occupational	2 – 9250 MHz +/-3 dB	2 – 1000 MHz +/-3 dB
		General Pop.	1.34 – 9250 MHz +/-3 dB	1 – 1000 MHz +/-3 dB
Anisotropy ⁽⁴⁾			+/- 0.5 dB	
Temperature error ⁽⁴⁾			0.03 dB/°C	0.01 dB/°C
Temperature sensor			On board	
Field sensor			Triaxial orthogonal dipoles	Triaxial orthogonal loops
A/D conversion			On board	
Calibration ⁽⁵⁾			internal E ² PROM	
Operating temperature			-20 to +55 °C	
Operating relative humidity ⁽⁶⁾			5 to 95 %	
Storage temperature			-30 to +75°C	
Dimensions			165 mm length, 54mm diameter	
Weight			100 g	

Specification are subject to change without notice

When not differently specified the following specifications are referred to operating ambient temperature 23°C and relative humidity 50%.

FCC 96-326 considers the terms general population/uncontrolled and occupational/controlled.

Note (1): Power density referred.

Note (2): At 50 MHz on related level range 6dB above the noise floor

Note (3): Relative to 10% of the standard limit

Note (4): At 50 MHz / 10% of the standard limit

Note (5): Recommended re-calibration interval 24 month

Note (6): Without condensation

(*) All probes include on board A/D conversion, calibration factors on E2PROM, and temperature sensor



Fig. 1-14 EHP-2B-07 probe

DUAL-BAND ELECTRIC AND MAGNETIC SHAPED FIELD PROBE EHP-2B-08
For ICNIRP 2020 and FCC 96-326*

		Electric Field		Magnetic Field
Frequency range	ICNIRP 2020	Occupational	5 MHz – 60 GHz	1 – 1000 MHz
		General Public		
	FCC 96-326	Occupational	2 MHz – 60 GHz	2 – 1000 MHz
		General Pop.	1.34 MHz – 60 GHz	1 – 1000 MHz
Level range ⁽¹⁾	Occupational		0.1 – 1000 %	0.3 – 1000 %
	General P.		0.5 – 1000 %	1.5 – 1000 %
Overload			2000 %	
Linearity ⁽²⁾			+/- 0.5 dB	
Power (Amplitude) dynamic range	Occupational		40 (80) dB	35 (70) dB
	General P.		33 (66) dB	28 (56) dB
Resolution			0.01 %	
Sensitivity	Occupational		0.1 %	0.3 %
	General P.		0.5 %	1.5 %
Frequency flatness ⁽³⁾ (typ)	ICNIRP 2020	Occupational	5 – 18000 MHz +3/-2 dB	1 – 200 MHz +3.5/-1 dB
		General Public	18 – 60 GHz +8/-1 dB	200 – 1000 MHz +3.5/-4 dB
	FCC 96-326	Occupational	2 – 18000 MHz +/- 3 dB	2 – 1000 MHz +/- 3 dB
		General Pop.	1.34 – 18000 MHz +/- 3 dB	1 – 1000 MHz +/- 3 dB
Anisotropy ⁽⁴⁾			+/- 0.5 dB	
Temperature error ⁽⁴⁾			0.03 dB/°C	0.01 dB/°C
Temperature sensor			On board	
Field sensor			Triaxial orthogonal dipoles	Triaxial orthogonal loops
A/D conversion			On board	
Calibration ⁽⁵⁾			internal E ² PROM	
Operating temperature			-20 to +55 °C	
Operating relative humidity ⁽⁶⁾			5 to 95 %	
Storage temperature			-30 to +75°C	
Dimensions			165 mm length, 54mm diameter	
Weight			100 g	

Specification are subject to change without notice

When not differently specified the following specifications are referred to operating ambient temperature 23°C and relative humidity 50%.

FCC 96-326 considers the terms general population/uncontrolled and occupational/controlled.

Note (1): Power density referred.

Note (2): At 50 MHz on related level range 6dB above the noise floor

Note (3): Relative to 10% of the standard limit

Note (4): At 50 MHz / 10% of the standard limit

Note (5): Recommended re-calibration interval 24 month

Note (6): Without condensation

(*) All probes include on board A/D conversion, calibration factors on E2PROM, and temperature sensor



Fig. 1-15 EHP-2B-08 probe

2 - Installation and use

2.1 Introduction

This section provides the information required for installing and using the SMARTS AMC Area Monitor Compact. Information is included regarding initial inspection, power requirements, interconnections, work environment, assembly, cleaning, storage and shipment.

2.2 Preliminary inspection

Inspect the packaging for any damage.

NOTICE

If the packaging or anti-shock material have been damaged, check that the contents are complete and that the repeater has not suffered electric or mechanical damage.

Check that all the Accessories are there against the checklist found with the apparatus.

Inform the carrier and NARDA of any damage that has occurred.

2.3 Work environment

The work environment of the Accessories, must come within the following conditions:

- Temperature From -20° to +55° C (0°C to 40°C for Battery Charger)
- Humidity < 95% relative

The Area Monitor Compact must be stored in a clean and dry environment, free from acid dusts and humidity.

The storage environment must come within the range of the following conditions:

- Temperature From -30° to + 75° C (-20°C to 60°C for Battery Charger)
- Humidity < 95% relative

2.4 Return for repair

When the Area Monitor Compact needs to be returned to NARDA for repair, please complete the questionnaire appended to this User's Manual, filling in all the data that will be useful for the service you have requested.

For reducing the period of time required for the repairs, it is necessary to be as specific as possible in describing the problem. If the problem only occurs in certain circumstances, please describe in detail how it happens.

If possible it is better to reuse the original packaging; making sure that the apparatus is wrapped in thick paper or plastic.

Otherwise, use strong packaging by using a sufficient quantity of shock absorbent material around all sides of the repeater to ensure that it is compact and does not move around inside the package.

In particular, take every precaution to protect the front and rear Main unit panels, Wall support bracket, Interface and Radome.

Finish the package by sealing it up tightly.

Apply a FRAGILE label to the package to encourage greater care in its handling.



Nowadays there are restrictions on the shipment of hazardous materials, eg. some types of lithium batteries.

Please, check the proper, safe, shipping mode, with the help of your courier, in the case the product is equipped with batteries.

2.5 Instrument cleaning

Use a dry, clean and non-abrasive cloth for cleaning the Area Monitor Compact.

NOTICE

Do not use solvents, acids, turpentine, acetone or other similar products for cleaning the repeater in order to avoid damaging it.

2.6 Installation and use

This section provides the information necessary to install and use the SMARTS AMC Area Monitor Compact in different configuration:

- Area Monitor Compact Wall mounted (see §2.6.1)
- Area Monitor Compact on TR-02A (option) by Tripod support (see §2.6.2)
- Area Monitor Compact on ceiling by Wall bracket (see §2.6.3)
- Area Monitor Compact on ceiling by Tripod AMC support (see §2.6.4)



For further information about the use of AMC with Probes Manager software, please refer to the chapter 3, 4 and 6.



For further information about the use of AMC with SMARTS AMC Management software, please refer to the chapter 5 .



The BLE connection is available for Android and iOS device through the LR-01 Manager App. For further information see Chapter 8 and 9. To active the Bluetooth communication on the AMC the user must connect the Area Monitor to Narda Probe Manager software and enable the BLE function (see §4.2.7.2 Bluetooth connection).



The SMARTS AMC can be update via Fiber Optic connection only.

Correct readings may be conditioned by the nature of the places in which the AMC is installed.

The field sensor is affected by huge metallic masses or other objects that may reflect the signal, if located in the vicinity of the Area Monitor.

NOTICE

Whenever possible, it is a good rule to install the AMC at some distance from walls, high voltage pylons, buildings and other obstacles that could affect the field measuring and the wireless signals reaching the WiFi device.

NOTICE

When measuring fields from transmitting aerials, it is important to place the probe with the supporting handle in line with the polarity of the aerial. This is to avoid any interference with the reading, especially when analysing signals of the megahertz range.

NOTICE

The probe used with the AMC has highly sensitive components. Do not insert the probe in fields which exceed the maximum limit allowed.

NOTICE

In order to avoid interference and the risk of influencing measurements with internal RF module signals (BLE and Wi-Fi), the AMC has been specially designed so that detections are taken when these devices are not radiating.



Prior to installing AMC where the WiFi connection is planned to be used, make sure that the point at which the Area Monitor will be placed is adequately covered by the WiFi network.


The signal strength can be checked using any smartphone capable of indicating the intensity of the WiFi signal. It is also advisable to look for the point at which the signal shows its maximum and, eventually, rotate the AMC along its vertical axis to face the Antenna toward to the point self.

2.6.1 Wall mounted Installation


Follow the instructions below:

- (For SMARTS AMC/00/01)

Fix the provided three expansion plugs to the wall; for a correct installation refers to the following hole diameter and distance:

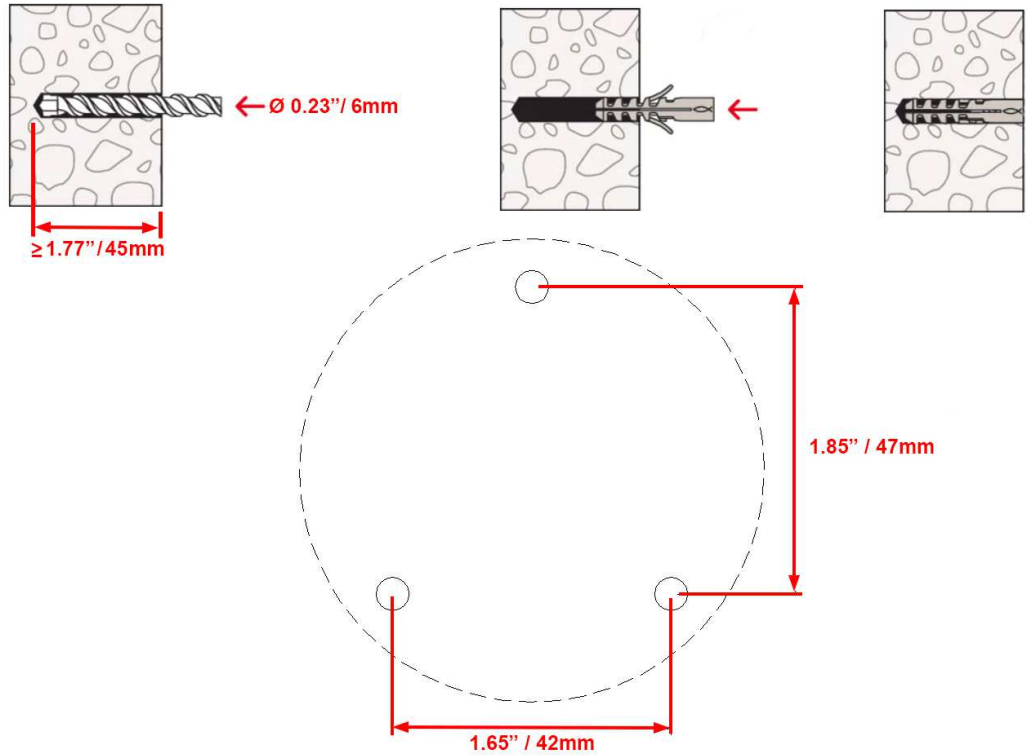

- Install the AMC to the wall by bracket using the provided 3 pcs. screws 4.5x40mm.

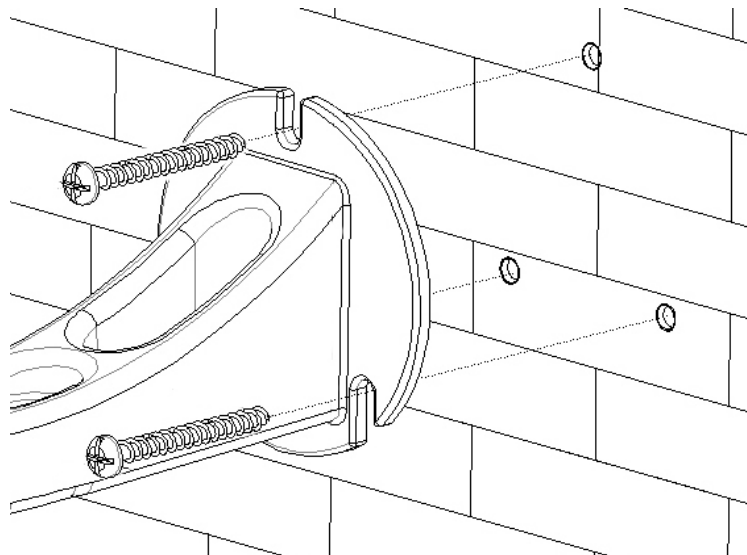


- (For SMARTS AMC/01 only)

Remove the protective cover from the baseplate using Allen key 2.5mm.

Make sure the unit is switched OFF.


Remove the sealing nut and insert standard slit from the body gland located on the bottom of the AMC/01 Interface.

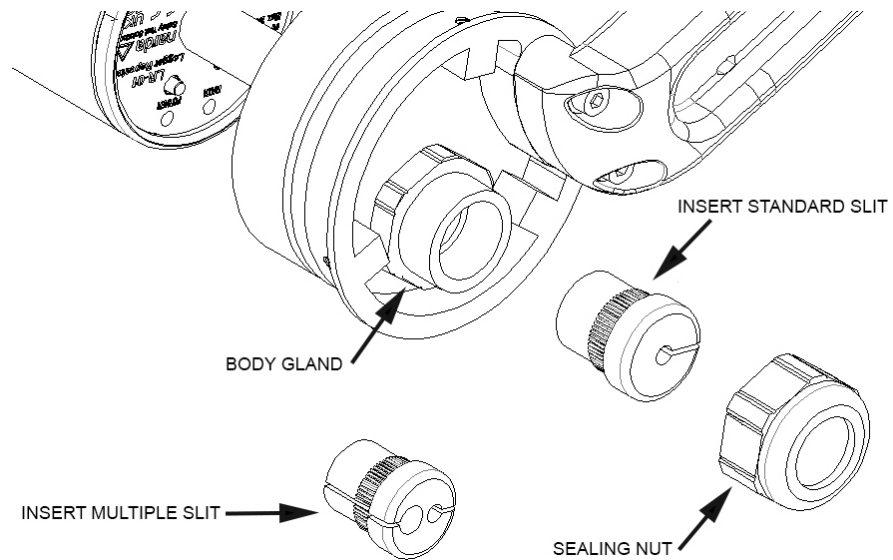

In case of using USB-C cable only (It delivers power and data), simply insert the USB-C cable into the insert standard slit. Otherwise, replace it with the multiple one to transfer data by the FO-AMC01 Fiber optic and supply the station via USB-C cable.

NOTICE


The FO-AMC01 Fiber optic cable must insert into the bigger insert multiple slit hole.

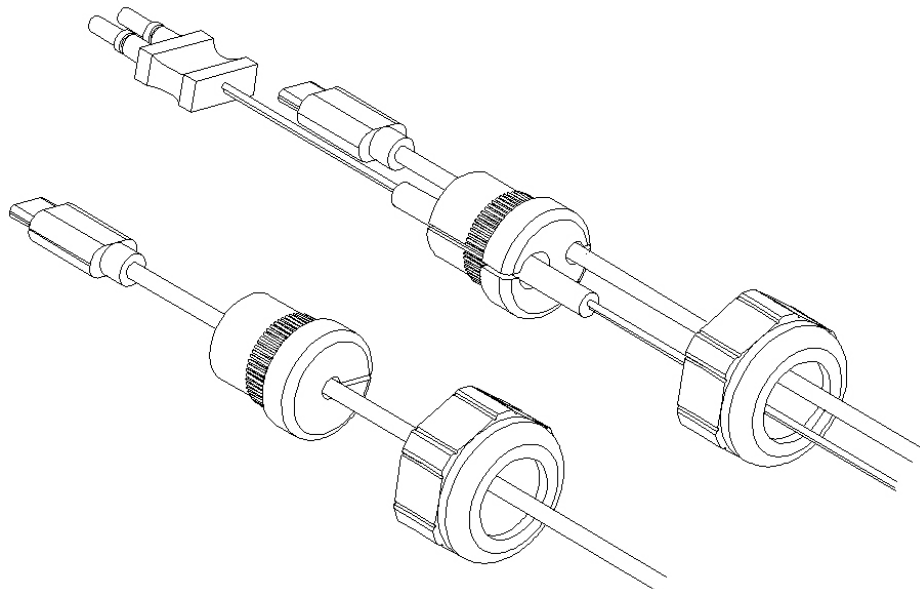

Insert the connector cable(s) in the body gland hole and place the Insert slit into it.

Connect the cable connector to the corresponding port located on the bottom panel of the Main unit.


The fiber connector can be plugged into the Optic Link port until a “click” is felt while inserting inside the window.

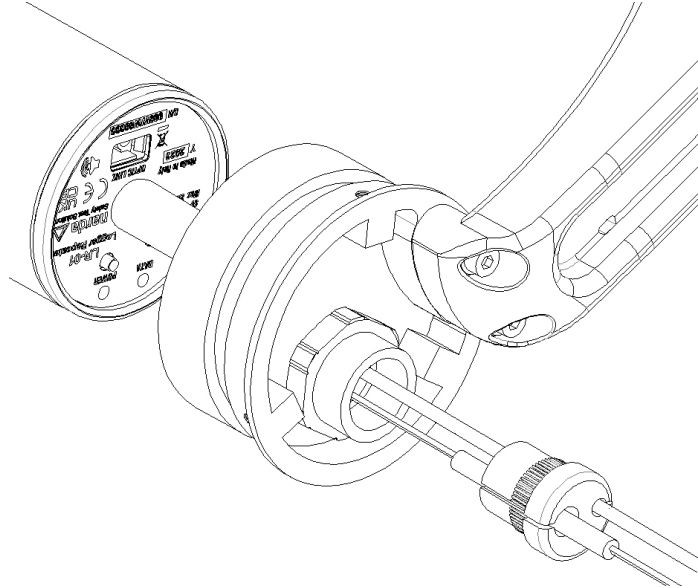

Tight firmly the sealing nut to the body gland.

NOTICE

To ensure IP protection rating, make sure that there are no gaps between the Insert and Nut.

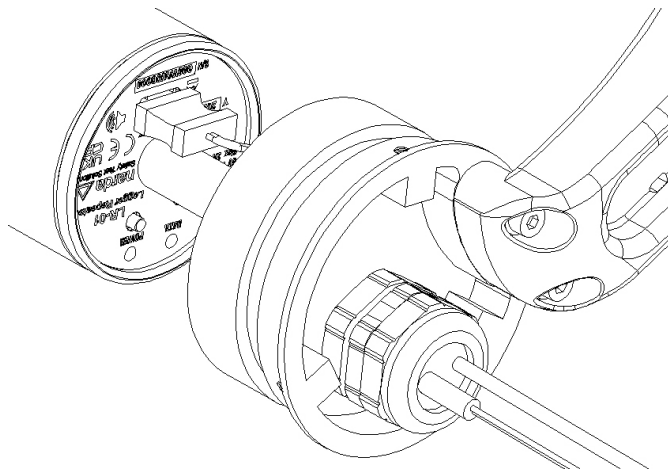

Switch the unit on by pushing the Power button for a short while and check the Visual Led status (see §2.7).



Pressing the button for more than 4 seconds forces the SMARTS AMC to shut down if it is not supplied by USB-C cable. Then, it is necessary to wait some seconds before switching the AMC on again.

Install the protective cover to the AMC baseplate and tight the 3 pcs. button head screws M4x10mm and plastic washer using Allen key 2.5mm.

- (For SMARTS AMC/00 only)

Make sure the unit is switched OFF.

Connect the AMC/00 to the PC through USB-C or Fiber Optic or Ethernet port located on the bottom of the AMC/00 interface.



The DB15 and Ethernet cables are optional accessory for the SMARTS AMC/00 only. Please contact your local Narda distributor for details.

A programmable User's Port is available for external devices or trigger measurements under specific conditions (see §1.7.1).

Switch the unit on by pushing the Power button for a short while located on the bottom of the base plate and check the Visual Led status (see §2.7).



Pressing the button for more than 4 seconds forces the SMARTS AMC to shut down if it is not supplied by USB-C cable or PoE Injector. Then, it is necessary to wait some seconds before switching the AMC on again.

The USB-C connection provides also the charging of the internal Li-ion battery. Please check the PC port shows enough current to guarantee this service.


- (For SMARTS AMC/00/01)

In case of Fiber Optic connection, connect the other side of the fiber optic to the provided USB-OC (taking care that the grip recess points towards the centre of the device) and plug the converter to a PC port.

NOTICE

The USB-OC standard accessory connected to the AMC allows a 40m maximum fiber optic cable length.

The four oval shaped holes allow user to fasten the cables to the wall bracket using 2 pcs plastic straps (not provided).

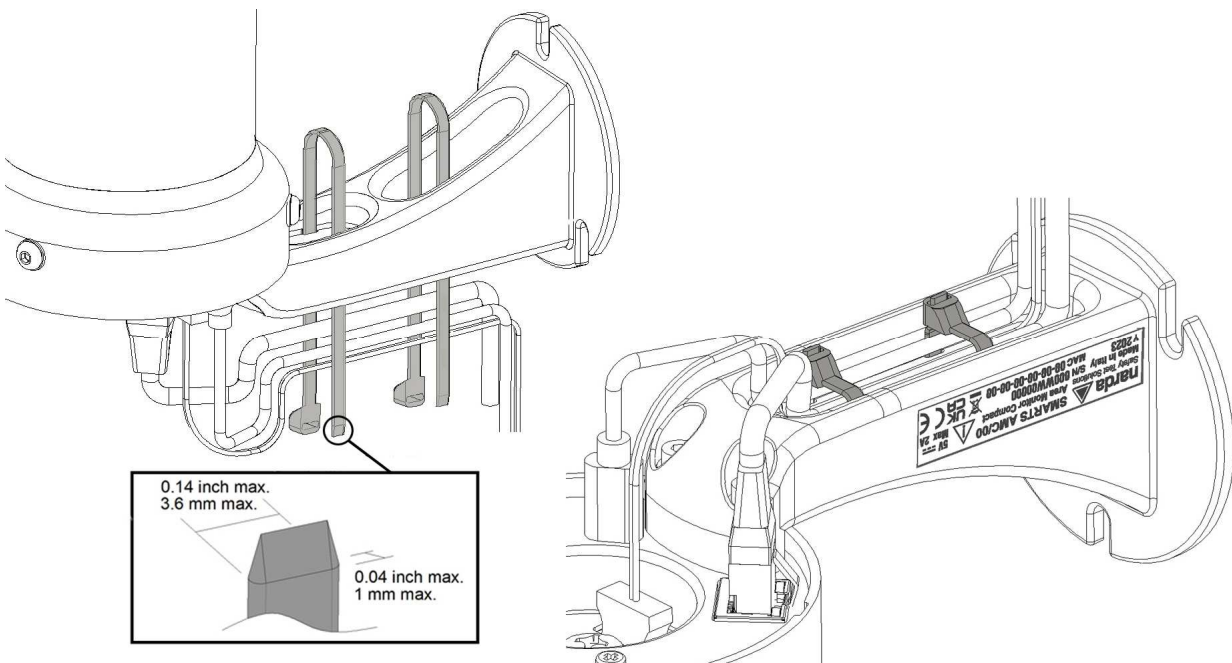

Install the Probes Manager (see chapter 3) or SMARTS AMC Management (see chapter 5) on PC from the supplied Software Media.


Configure the AMC with Narda Probes Manager (see chapter 4) or SMARTS AMC Management (see chapter 5) or custom software (see Chapter 10).



Fig. 2-1 SMARTS AMC/00 - Wall mounted

2.6.2 Tripod mounted installation - (For SMARTS AMC/00/01)

Install the TR-02A Tripod (optional) on the site to be monitored.
Remove the bracket from the AMC Interface using Allen key 3mm.

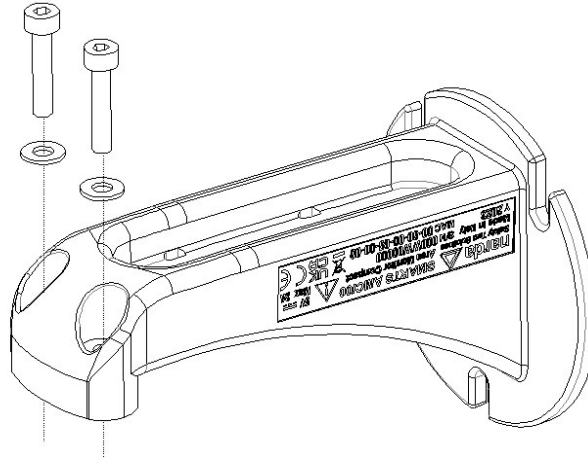

- (For SMARTS AMC/01 only)

Remove the protective cover from the baseplate using Allen key 2.5mm.
Connect the AMC to PC; for installation see Pag.2-4 and 2-5.


Switch the unit on by pushing the button for a short while and check the Visual Led status.



Pressing the button for more than 4 seconds forces the SMARTS AMC to shut down if it is not supplied by USB-C cable. Then, it is necessary to wait some seconds before switching the AMC on again.

Install the protective cover.


Assembly the Tripod AMC support to the AMC Interface with 2 pcs. socket head cup screws M4x12mm and washers using Allen key 3mm.
Screw the AMC to the TR-02A by its metallic threaded insert and tighten firmly while holding the Tripod.

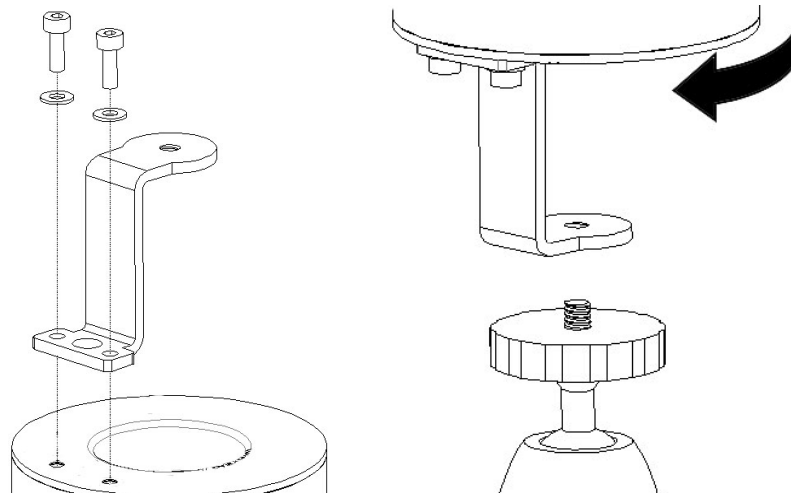

- (For SMARTS AMC/00 only)

Assembly the Tripod AMC support to the AMC Interface with 2 pcs. socket head cup screws M4x12mm and washers using Allen key 3mm.

Screw the AMC to the TR-02A Tripod by its metallic threaded insert and tighten firmly while holding the base plate.

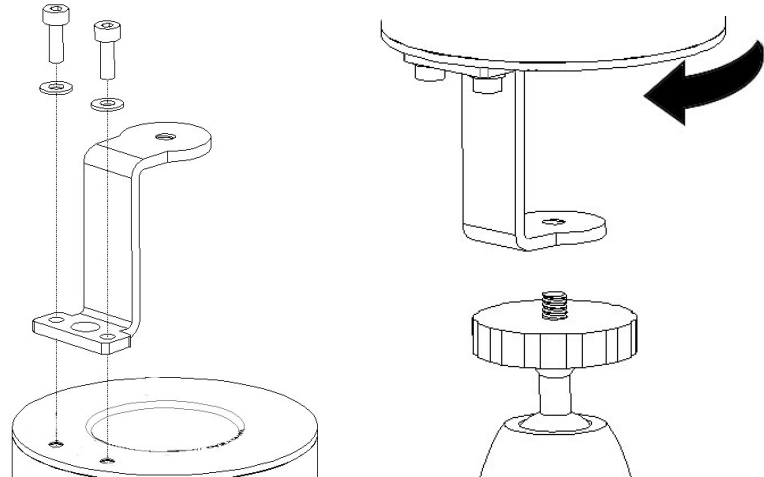


Connect the AMC/00 to the PC through USB-C or Fiber Optic or Ethernet port located on the bottom of the AMC interface.



The DB15 and Ethernet cables are optional accessory for the SMARTS AMC/00 only. Please contact your local Narda distributor for details.

The fiber connector can be easily plugged into the Optic Link port directly until a “click” is felt while inserting inside the window.

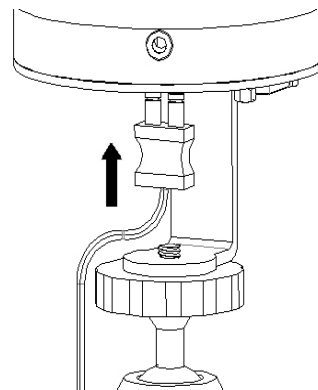

Switch the unit on by pushing the button for a short while and check the Visual Led status.



Pressing the button for more than 4 seconds forces the SMARTS AMC to shut down if it is not supplied by USB-C cable or PoE Injector. Then, it is necessary to wait some seconds before switching the AMC on again.

The USB-C connection provides also the charging of the internal Li-ion battery. Please check the PC port shows enough current to guarantee this service.

- (For SMARTS AMC/00/01)

NOTICE

Unscrew the Tripod knob without losing it completely and turn the unit in any angle.

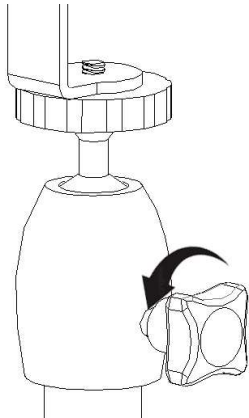


Fig. 2-2 SMARTS AMC/00 on TR-02A

In case of Fiber Optic connection, connect the other side of the fiber optic to the provided USB-OC (taking care that the grip recess points towards the centre of the device) and plug the converter to a PC port.

NOTICE

The USB-OC standard accessory connected to the AMC allows a 40m maximum fiber length.

Install the Probes Manager (see chapter 3) or SMARTS AMC Management (see chapter 5) on PC from the supplied Software Media.

Configure the AMC with Narda Probes Manager (see chapter 4) or SMARTS AMC Management (see chapter 5) or custom software (see Chapter 10).

2.6.3 Ceiling mounted installation by Bracket


For additional information refer to paragraph 2.6.1



Fig. 2-3 SMARTS AMC/00 on ceiling by Bracket

2.6.4 Ceiling mounted installation by Tripod AMC

- Fix the expansion plugs 6x30 to the ceiling (refers to the following hole diameter) and install the Tripod AMC support by the screw 4.5x40mm.

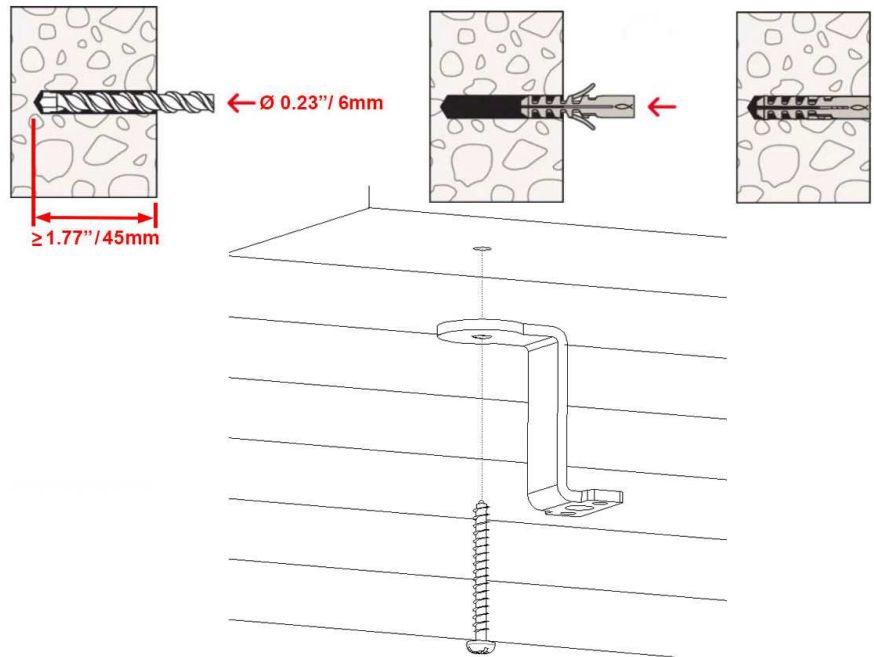

- Assembly the SMARTS AMC to the Tripod AMC support with 2 pcs. socket head cup screws M4x12mm and washers using Allen key 3mm.

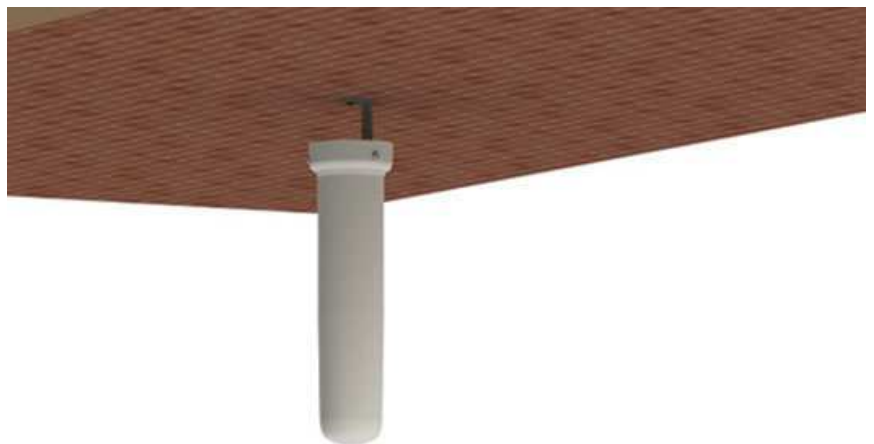


Fig. 2-4 SMARTS AMC/00 on ceiling by Tripod AMC support

2.6.5 Example of installation

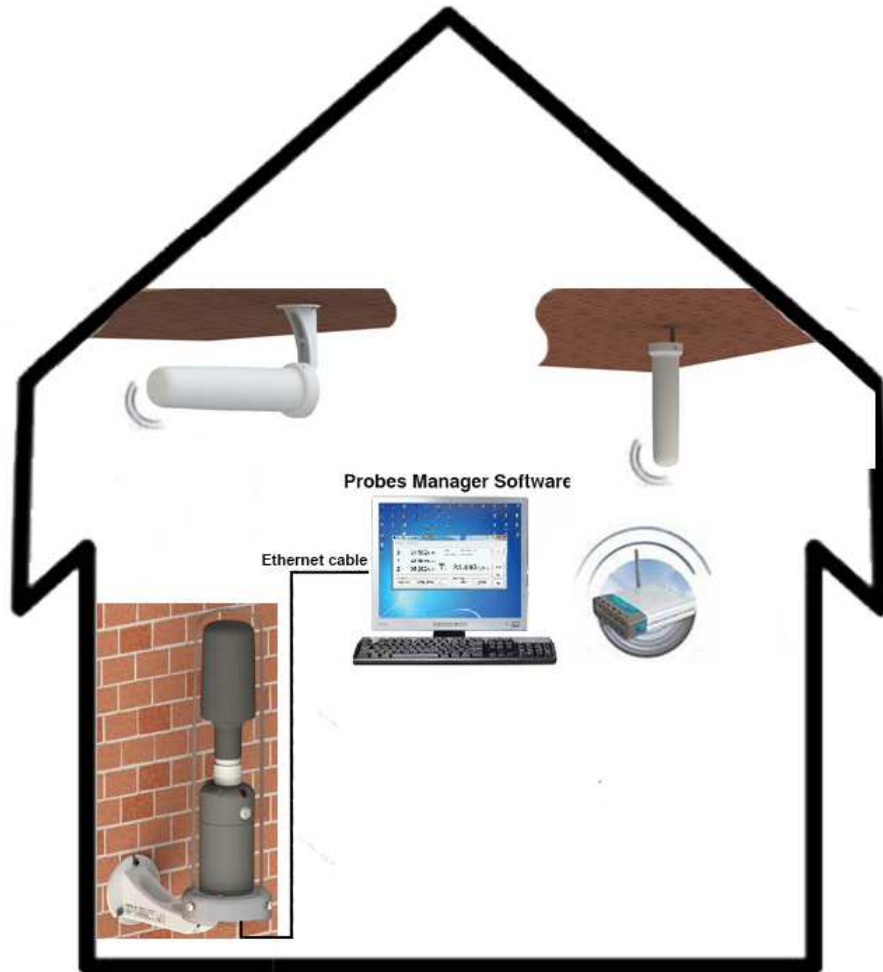


Fig. 2-5 SMARTS AMC/00 in a multi-probe configuration



Fig. 2-6 SMARTS AMC/00 link with Wi-Fi communication



Fig. 2-7 SMARTS AMC/00 link with BLE communication by smartwatch

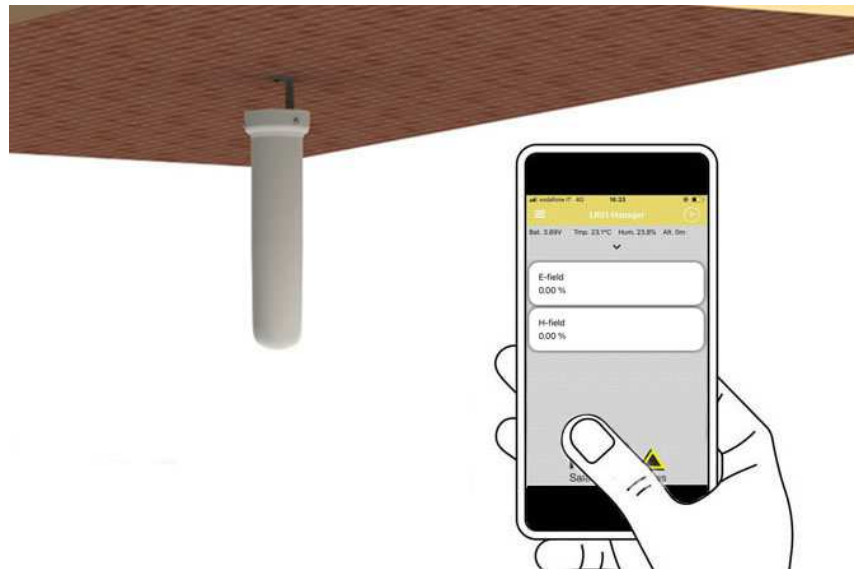


Fig. 2-8 SMARTS AMC/00 link with BLE communication by mobile device

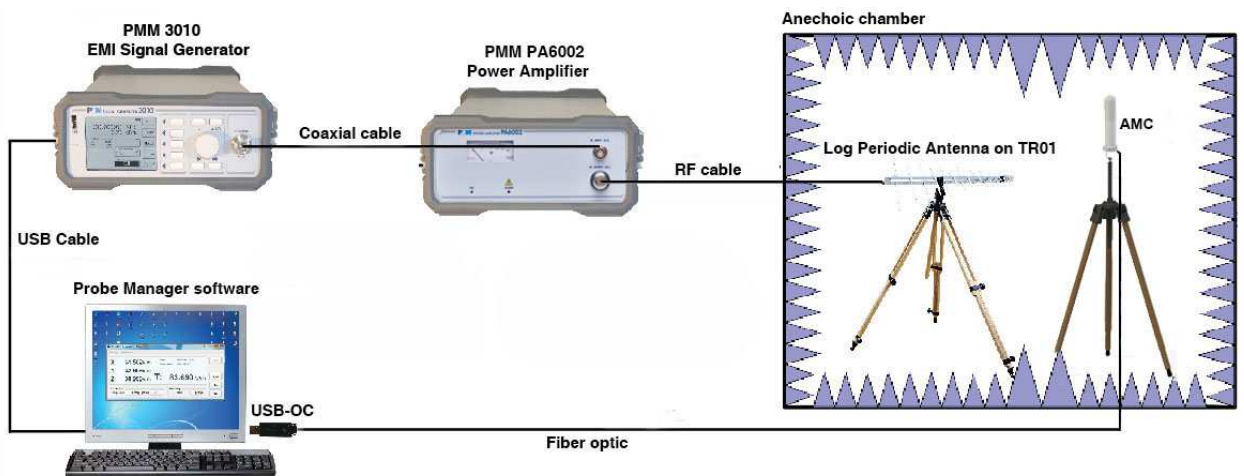


Fig. 2-9 SMARTS AMC/00 Typical Immunity test irradiation configuration

2.6.6 Use with the optional Power Over Ethernet (for SMARTS AMC/00)

The optional Power Over Ethernet, such as TL-POE150S or equivalent products is available. It delivers power, data and network connection over the same cable to the SMARTS AMC/00 Area Monitor Compact through the Ethernet port available on the bottom of the baseplate (Ethernet cable optional).

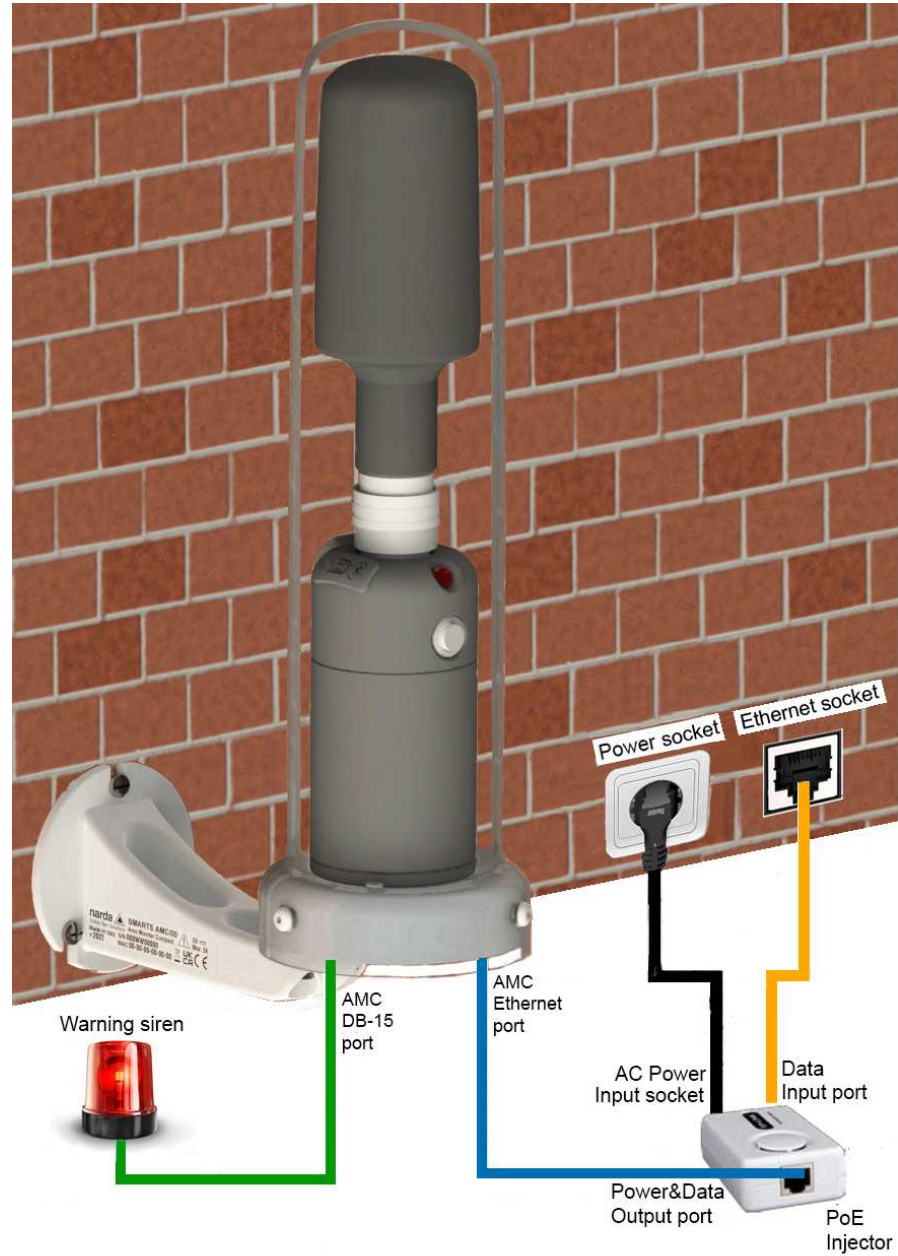


Fig. 2-10 SMARTS AMC/00 with Power Over Ethernet



For additional information refer to §11.9

**2.7 Visual Led status,
Manual log button,
Buzzer, Accelerometer
and GPS**

TABLE 2-1 Visual Led status			
LED	LED flashing speed	LED color	Description
VISUAL LED	The Visual led begins flashing for 30 seconds and then blinks every 5 seconds	Red	The Area Monitor Compact is ready to communicate
	Solid		Update firmware or Alarm or Warning threshold exceeded.

2.7.1 Visual Led status Visual Led status during Logger acquisition:

TABLE 2-2 Visual Led status in Logger mode			
LED	LED flashing speed	LED color	Description
VISUAL LED	Solid	Red	Alarm or warning threshold exceeded. If the log is in progress, the LED goes off for one second during the log. If the Log can be activated (AQ_ command with a rate other than 0), prolonged pressure (> 5 s) of the button recognized with the button pressed and not released (Log activated but not started yet).
	Low speed		If the Log can be activated (AQ_ command with a rate other than 0), press of the button before the actual recognition of the start of the log (pressing the button for less than 5 s).
	Fast speed		Button pressed when the Logger is disabled and it is not possible to activate it (AQ_ command with rate equal to 0).
	Single flash		Log acquisition, or (also accompanied by a short audible alarm) Logger start with deletion of the Logs previously saved in memory.
	Flashing (with rate dictated by the probe reading speed)		If the Log is in progress with acquisition not based on time (AQ_-1) and the alarm or warning threshold is continuously exceeded, the LED turns on during the log (and sound alarm always on).



If Area Monitor Compact is not supplied by USB-C cable or PoE Injector, the unit automatically turns OFF when after 30 min. the fiber optic/Ethernet has been disconnected or the communication with PC is not established.



The fiber optic of the AMC can be disconnected and reconnected while in use. The communication will be restarted automatically.

2.7.2 Manual log button A manual button allows user to start logging or measurement acquisition or reboot the Area Monitor.

Table 2-3 Manual log button status	
Manual log button	Description
Pressing for more than 5 s	Logger start with deletion of the previously saved Logs (after setting the Logger by means of the AQ_ command). Pressing long enough is notified by the fixed LED lighting up (big red LED) until the button is released.
Short pressing	Logger measurement acquisition (after setting the Logger by means of the AQ_ command). The pressing is notified by the big red LED lighting up. It will turn off when the record is saved.
Pressing while turning on the unit	Reset to default settings with flash save and reboot of the instrument.


2.7.3 Buzzer The Area Monitor is equipped with a buzzer, useful for emitting sound alerts.

Table 2-4 Buzzer status	
Buzzer	Description
Long sound	Field level Alarm threshold exceeded.
Short sound	Logger starting.



Buzzer sound and vibration are not continuous but intermittent, 600ms on and 400ms off.

2.7.4 Accelerometer The repeater is also equipped with an internal Accelerometer that measures acceleration, which in practical terms means changes in speed or direction. It is expressed in hundredths of g for each of the three axes.

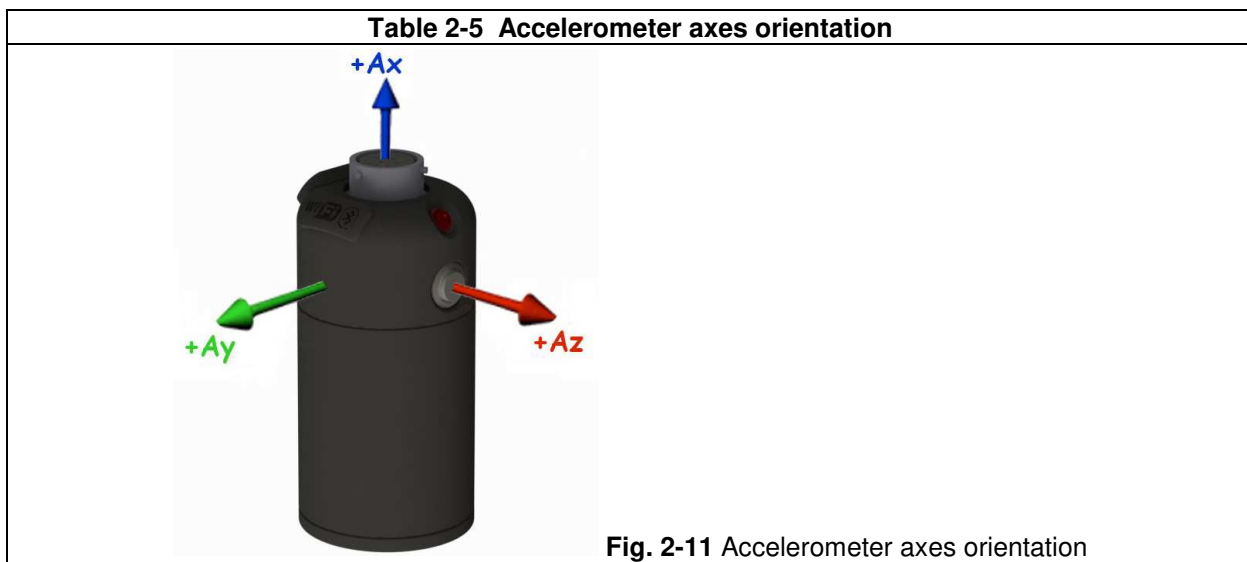

2.7.5 GPS Whenever the SMARTS AMC is switched on, the GPS is turned on as well allowing thus tracking the position. The GPS remains always active even if a fix is made or a time out occurs (4 minutes).

2.8 Power supply and battery recharging

Bat.: 65 %



AMC has an internal rechargeable Lithium-ion battery that can be recharged with the USB battery charger supplied with it.


The AC/DC battery charger can be used with a power frequency at either 50 Hz or 60 Hz with a supply voltage between 100 and 240 AC Volt. International AC plug adapters are provided according to the various national standards and it can be easily removed from the battery charger to be replaced by a different one.

Ensure that the batteries are fully charged before using the Area Monitor Compact for longest battery operation time.

The battery status is reported by the Probes Manager software and displayed in Volt and in percentage. It shows the residual autonomy during measurements and the achieved autonomy during charging

ALWAYS connect the battery charger to the power supply **BEFORE** connecting it to the USB-C port located on the AMC Interface bottom. The battery charger has an internal protective circuit that will limit the output of current if there is any load when connecting to the mains.

Battery charger:
output: DC, 5 V, 600 mA max

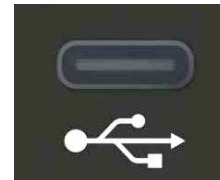

Connector:



In order to safeguard the features of the batteries, it is crucial to have a 80% recharge before storing them for periods longer than 4 months. Therefore, it is warmly suggested recharging the batteries at least every 4 months even though the device has not been used.



The minimum voltage level for operation is about 3,0 V. The batteries must be recharged for lower voltages. Below such voltage the AMC will turn OFF automatically.



The time required for recharging the batteries is about 2,5 hours.



To take reliable measurements, it is advisable to **ALWAYS** remove the battery charger from SMARTS AMC.

This page has been left blank intentionally

3 – Probes Manager software installation

3.1 Introduction

This chapter is the installation and operation guide of the PC Software Probes Manager supplied with the SMARTS AMC Area Monitor Compact.

The Probes Manager is a software instrument that integrates the SMARTS AMC Area Monitor Compact and allows displaying the measured field level directly on a Personal Computer screen.

3.2 Hardware requirements

To ensure the proper operations of the Probes Manager software, the minimum hardware requirements of the Personal Computer are:

- Processor Core i3
- 2 GB RAM
- 10 GB free space on hard disk;
- Windows Operating system™ Win7, Win10 and Win11



To obtain firmware or program updates for AMC, please contact your NARDA distributor or download it directly from the NARDA Web site <http://www.narda-sts.it>


3.3 Installation

To install the Probes Manager on PC from the supplied Software Media as follows.




Do not connect the AMC to the PC until the installation is completed.


Browse the Software Media in Computer Resources and double click on the Probes Manager Setup.exe file to start the installation

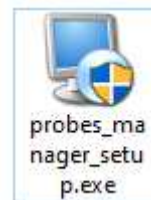


Click **Yes** when requested.

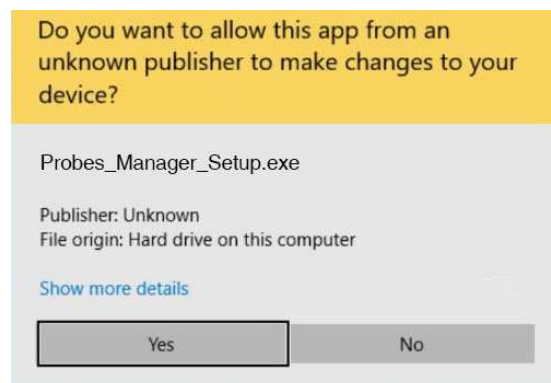



Click **Next** to proceed installing.

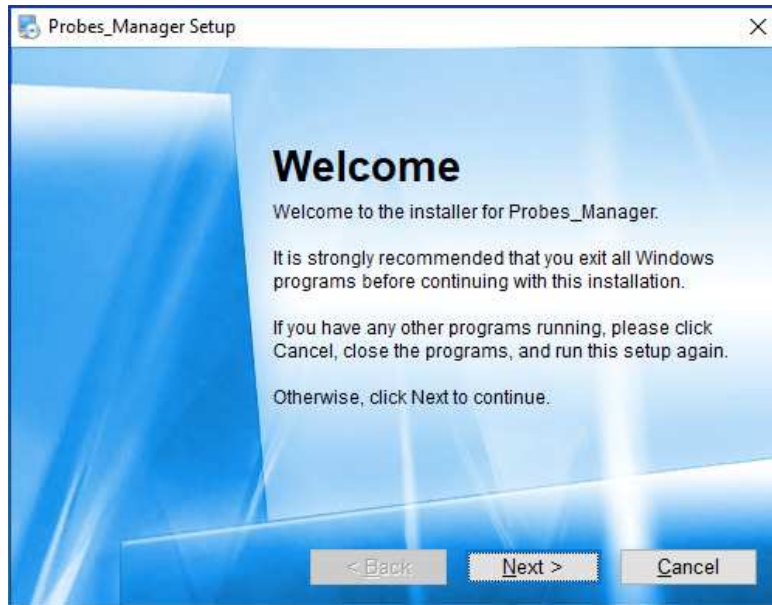


The installation can be aborted by clicking **Cancel** button:

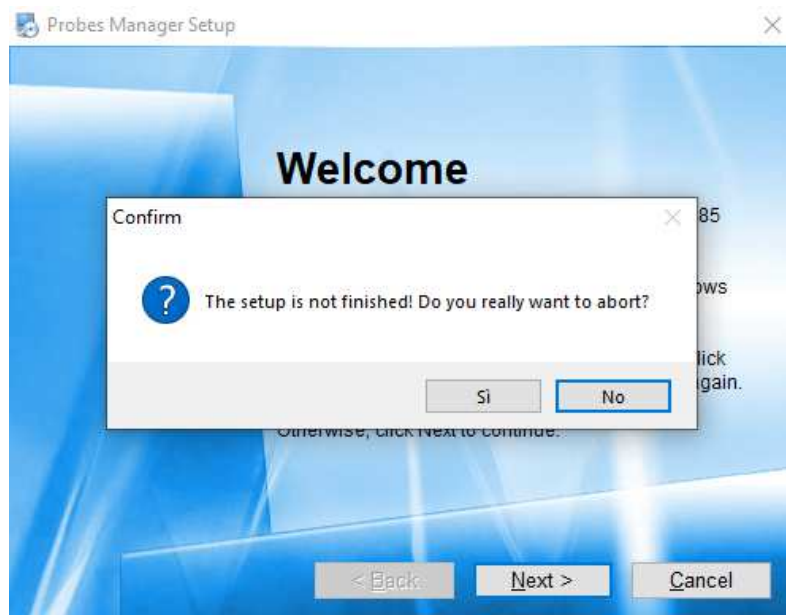


Click **Next** to confirm the default folder or **Change** to modify.

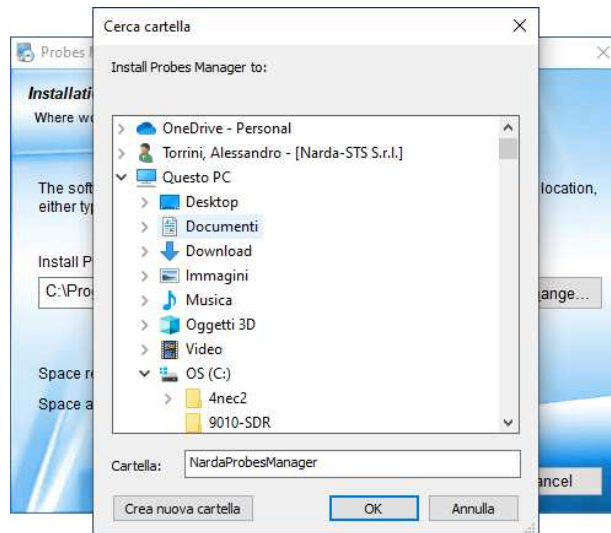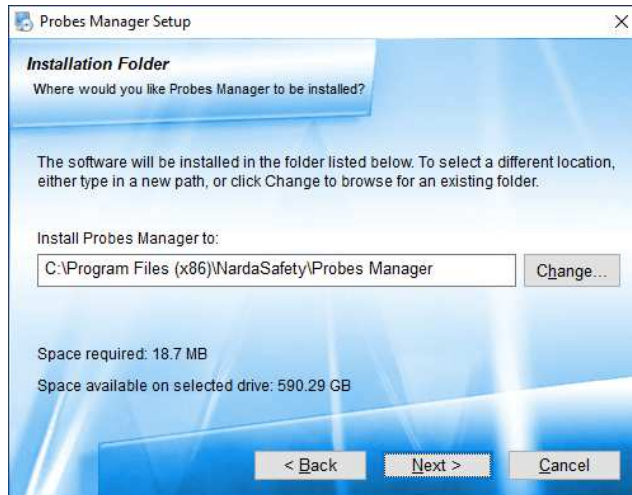


Click **Next** to proceed installing.

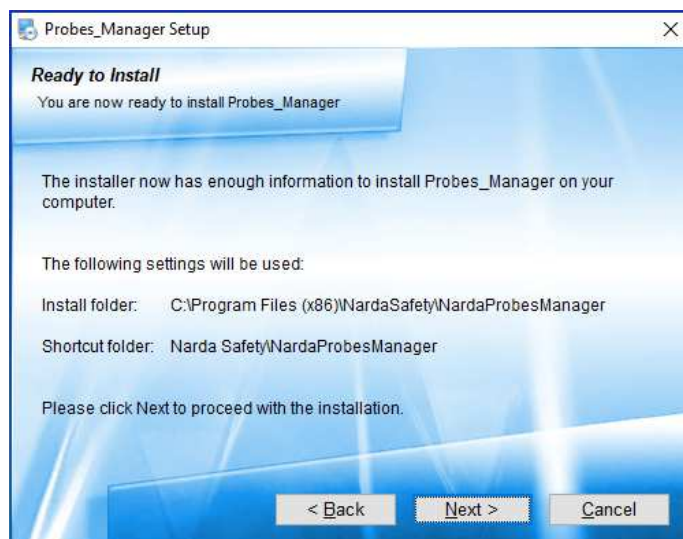


The installing status is displayed then:

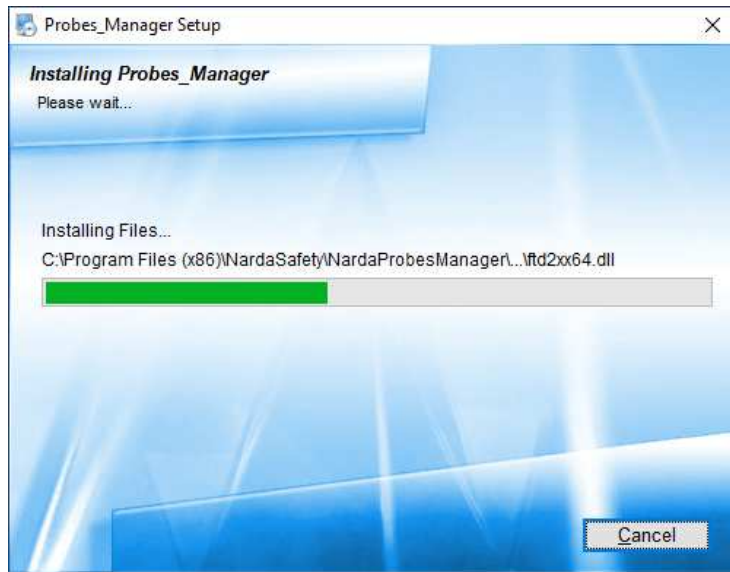

Click **Finish** to complete and exit the installer.

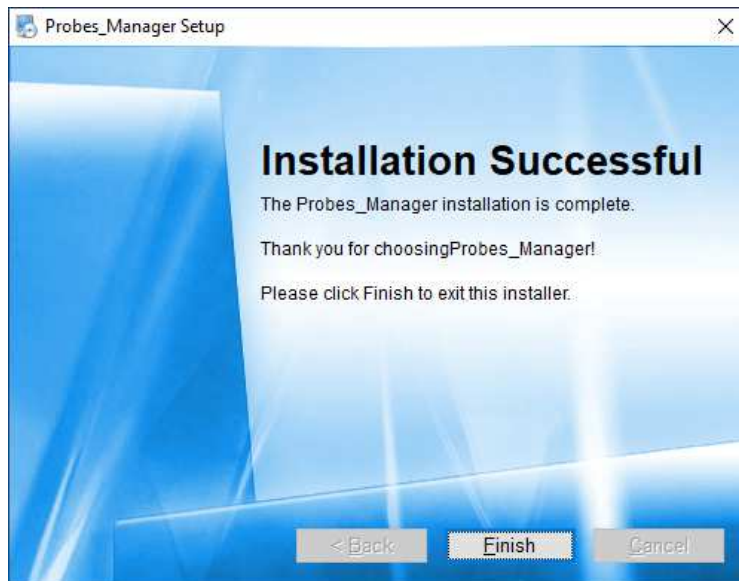


When asked for, reboot your system to complete installation

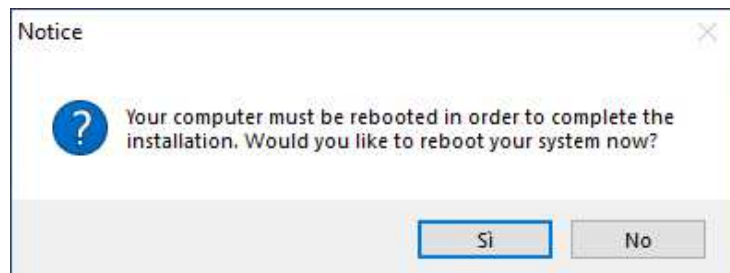

The folder **Probes Manager** is created under **Programs\Narda Safety** with **Probes Manager** (see Chapter 4) and **LR-01UP** (see Chapter 6) executable.

Another item is created in the Programs list at Start Menu, which is “**Narda Safety**”, where the “**probes_manager**” and “**LR-01 Update Firmware**” programs must be run from.

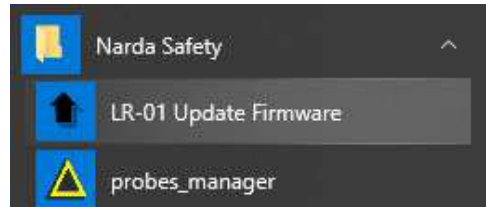

The **probes_manager** and **LR-01UP** icon will be available on desktop.



This page has been left blank intentionally

4 – Probes Manager Operating instructions

4.1 Introduction



This section provides the information necessary to use the Probes Manager software with the SMARTS AMC Area Monitor Compact.

To obtain firmware or program updates for AMC, please contact your NARDA distributor or download it directly from the NARDA Web site <http://www.narda-sts.it>



The software is able to manage the AMC via an optical connection (fiber optic), via a wired connection (i.e. USB or Ethernet) and via Wi-Fi connection.



Ethernet connection is available only for SMARTS AMC/00 model.



If Area Monitor Compact is not supplied by USB-C cable or PoE Injector, the unit automatically turns OFF when after 30 min. the fiber optic/Ethernet has been disconnected or the communication with PC is not established.



The AMC cannot be connected to PC via Bluetooth. The BLE connection is available only for mobile device through the LR-01 Manager App; for further information, see chapter 8 and 9.

At the first connection, connect the AMC to PC via optical or wired connection (see §2.6), switch the Area Monitor Compact on, the Visual led begins **flashing red** for 30 seconds and then **blinks red** every 5 seconds to indicate the Area Monitor Compact is ready to communicate and click the **Probes Manager** icon on desktop.

Alternatively (Win10 and Win11): **Start → All Programs → Narda Safety → Probes Manager.**



This window is displayed:




- If the AMC is connected to PC via USB wired connection, the device appears as “**Serial USB device (COMn)**”.

- If the AMC is connected to PC via optical connection (through USB-OC), the device appears as “**USB Serial Port (COMn)**”.


In Windows 7, Windows 10 and Windows 11 the USB-OC should be automatically installed on your computer.

The Narda Probe Manager installation folder also includes the file requested for the driver installation on path \(\folder installation)\USB-WIN-98 or \USB-WIN-XP or \WIN-7 .

Select the port on the list and click **Connect**.

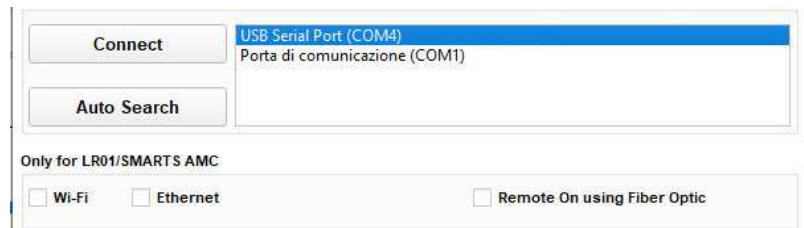


At the next connection the software will display the repeater on the list port with its serial number.

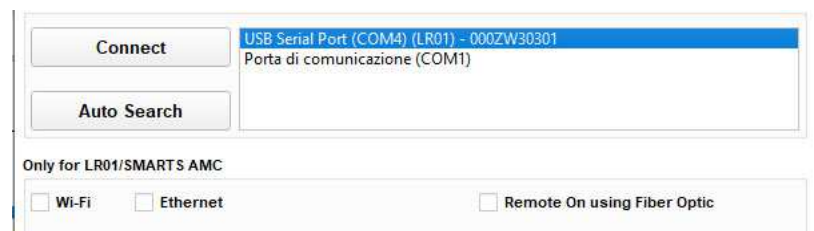


Instead, using the “**Auto Search**” button the software automatically detects the COM port to which AMC is connected and display the Area Monitor Compact on the list port with its serial number.



If the AMC is replaced with other device or viceversa without removing the USB-OC, select **Auto Search** button must be used to detect the new instrument. The connection progress bar is displayed on main window.

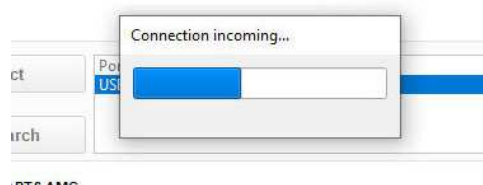

Select the port on the list and click **Connect**

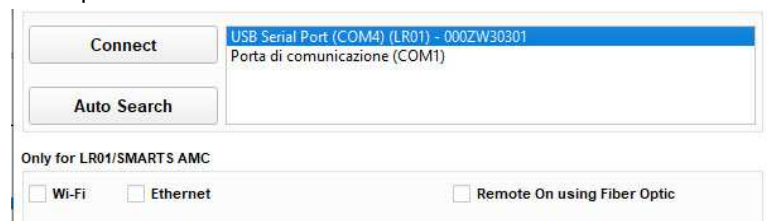

Remote On Using FO

The **Remote On using FO** box can be very convenient for turning the AMC on from remote, when it is located far away or in places that are not easily accessible (i.e. inside anechoic chambers etc.). Place the unit on the site to be monitored, run the software, tick the **Remote On using FO** box, press **Connect** to switch on the AMC and open the software.



Wi-fi

If the WiFi connection has been enabled previously (see §4.2.7.1 Wi-Fi Communications), it will be possible to activate the corresponding communication, if desired, by ticking the Wi-Fi box.



When the WiFi connection is enable, the Wireless module is placed in “stand-by” condition and, if no action is taken in the last 10 minutes, it turns OFF. Every time the AMC is switched on again, the module will return in the same condition since the wireless is enable.



If AMC is supplied by USB-C cable or PoE Injector, the Wireless module will not automatically switch off after 10 minutes and remains always on.

Ethernet

By ticking the **Ethernet box**, the **ETH** tool is enable. It allows user to detect all SMARTS AMC/00 connected to the network via Ethernet cable and, if desired, change LAN settings.

As default, at the first connection all values shown on the ETH tool main window are set to 0.

 **NOTE**


Ethernet communication is available for SMARTS AMC/00 model only.

 **NOTE**

When the Ethernet communication is enable, the optical port is not available.




Press **ETH Tool** button and a progress bar is displayed on main window

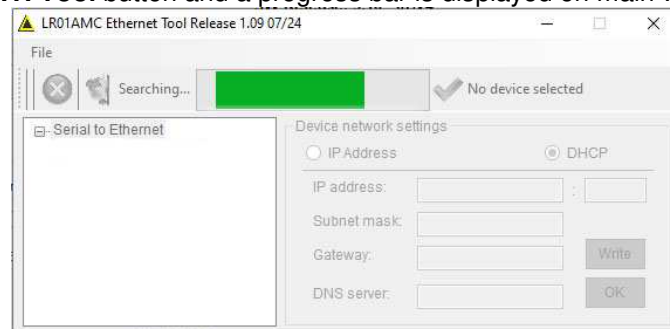

If the LAN network is not properly connected the software returns the following message:




Once a link has been successfully established, the following message is shown:

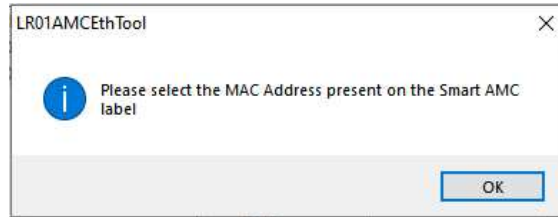


Pressing **OK** to confirm.

The **Ethernet Tool** is opened and the MAC Address of all SMARTS AMC/00 connected to LAN network are listed on **Serial to Ethernet** window.

Select the corresponding MAC Address of the Area Monitor Compact to be queried.

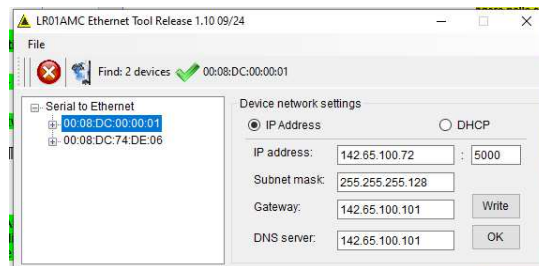


Mark with  the desired IP configuration on the **Device network settings** window:

- **DHCP (Dynamic)** the SMARTS AMC/00 is set to connect automatically to a LAN network.
- **IP Address (Static)** the AMC/00 is set to connect to a LAN network according the user settings as follows:
 - **IP Address:Port:** Sets the IP address of the SMARTS AMC/00
 - **SUBNET MASK:** Sets the Subnet mask
 - **GATEWAY:** Sets the Gateway address
 - **DNS server:** Sets the DNS Server address


For both DHCP or IP Address configuration, the SMARTS AMC/00 has a configurable Port by ETH Tools (default 5000); **in addition, the Area Monitor Compact keeps open the port 50001 to communicate with the chip by ethernet configuration software.**



Press **Write** to save the settings and store the value in the SMARTS AMC/00 Flash memory. The **ETH Tool** will be closed and the settings of the last AMC queried are shown on the **Ethernet** box.

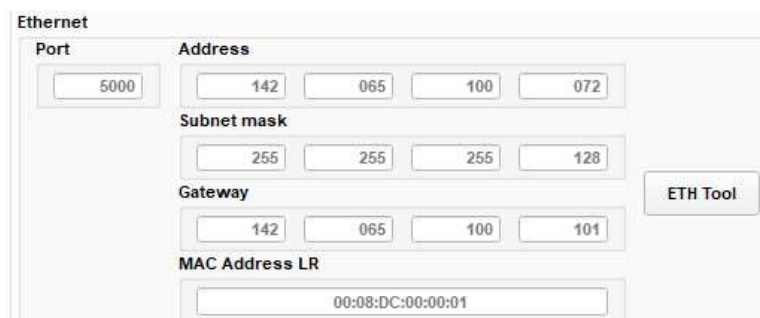

4.2 Probe manager control window

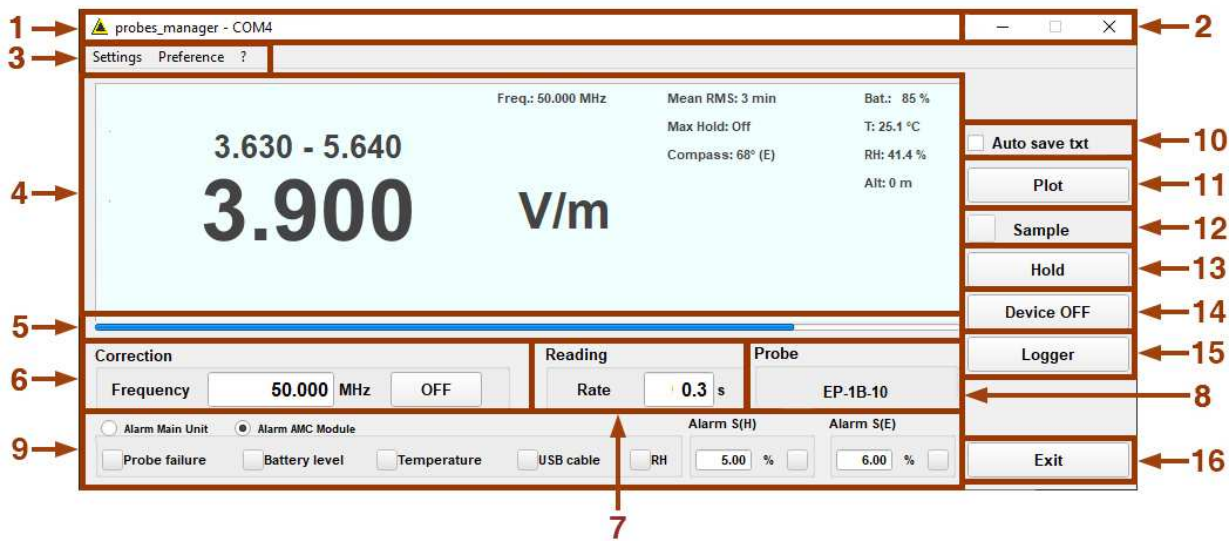


Commands description:

1. Title bar
2. Control window buttons
3. Menu: Settings, Preference and ? tags ribbon
4. Main window: Measurements, parameters and technical data
5. Progress bar
6. Correction frequency
7. Reading rate
8. Probe type
9. Alarms/Warnings control window
10. Auto save txt/csv function
11. Plot (graph view)
12. Sample indication
13. Hold/Run readings
14. Button to turns off the unit, exit and quit the program
15. Logger settings
16. Exit and quit the program (AMC remains on)



The above labels may change in case of using different probes or configuration.

When the control window is opened and the AMC Firmware version is older than what is available, the software will inform you that an update is needed.


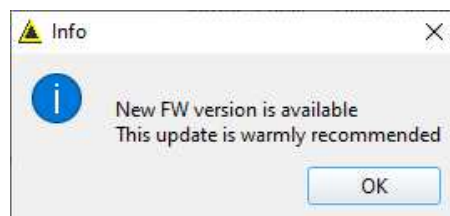


Confirm with **OK** to exit and quit the program; see chapter 5 Update Firmware.

Before starting the analysis, some parameters and technical data should be checked as follow:

4.2.1 Languages



- Select the desired language under **Preferences** tab → **Languages**. A confirmation message will be display:

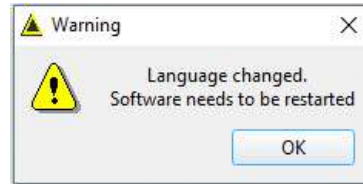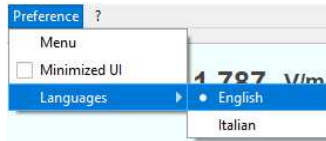


Confirm with **OK** and restart the software with the new language.

4.2.2 Release

- Make sure the latest software and setup release are installed on the PC and the latest firmware is stored on AMC. Click on ? tab → **Info** → **Release**.

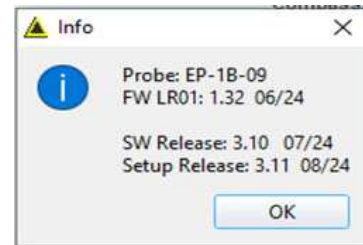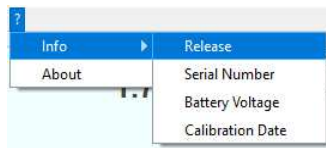

The software release is also available on the title bar with the COM port connected to the AMC.

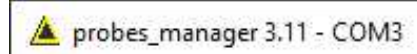



4.2.3 About

Manufacturer information is included on ? tab → **About**





4.2.4 Serial number

For the AMC Serial number click on ? tab → **Info** → **Serial Number**

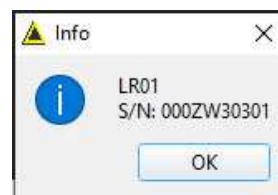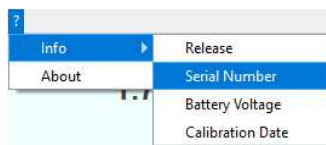

4.2.5 Calibrations sensor - Set to zero the internal **Altimeter** reference, calibrate the internal **Compass** for more location accuracy and synchronized the AMC internal **Date&Time** to the PC. Click on **Settings** tab → **Calibrations sensor**.

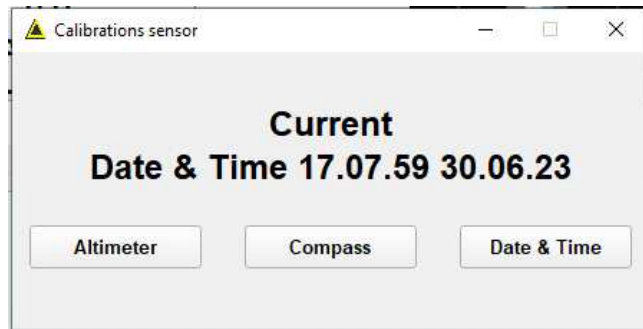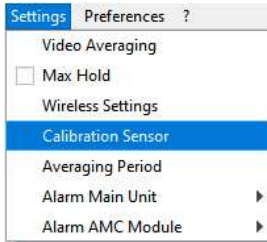


4.2.5.1 Altimeter




The **Altimeter** can be useful in applications where the height of measurements are relevant, such as, for example, base transceiver station.

The **Altimeter** works in relative mode. It returns the difference, in meters, from the height where the device was calibrated. It is a barometric altimeter that allows higher accuracy, precision and resolution than GPS. It must be considered that it is subject to variations in atmospheric pressure and therefore it is necessary to calibrate it at each different measurement session.

To set to zero the internal Altimeter, click on **Altimeter**. A confirmation message will be display:

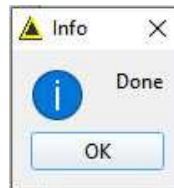

4.2.5.2 Compass

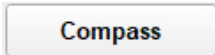


To improve the AMC location accuracy, the user must calibrate the compass clicking on **Compass**.

While holding the AMC by Radome and following the method shown on screen, move the Area Monitor around different times, tracing a figure eight in the process. The percentage in the upper left part of the main window and the blue bar indicate the progress of the calibration.



At the end of the process, a message informs the calibration has been successfully performed.

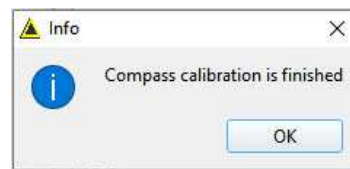

The AMC Interface Optic port (for SMARTS AMC/00) or the Fiber Optic port located on the bottom panel of the Main unit (for SMARTS AMC/01) represents the compass needle and, for example, it is towards the North cardinal point, the Compass field will show **Compass: 1° (N)** on the main window.



See §2.7.5 **GPS** for further information.

4.2.5.3 Date&Time



To transfer the current date of the PC to the AMC, click on **Date&Time**. A confirmation message will be display:





4.2.6 Appearance


- Customize the Control window, Plot(Graph) and Report file appearance.

Different color combinations of the background, text, grid and traces are available under **Preferences** tab → **Appearance**.

This command is also used to set horizontal scale of the graph (**Plot Time/Div**), save measurements in .TXT or .CSV format (**TXT/CSV**), define column (**Text file separator**) and decimal separator (**Decimal separator**).

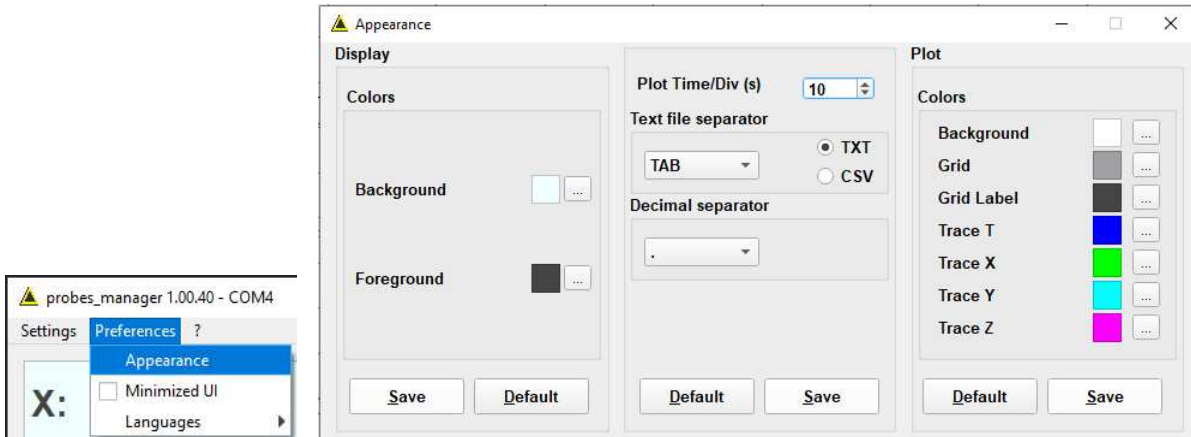

The corresponding button  allows selection from a color palette; confirm with **OK**.

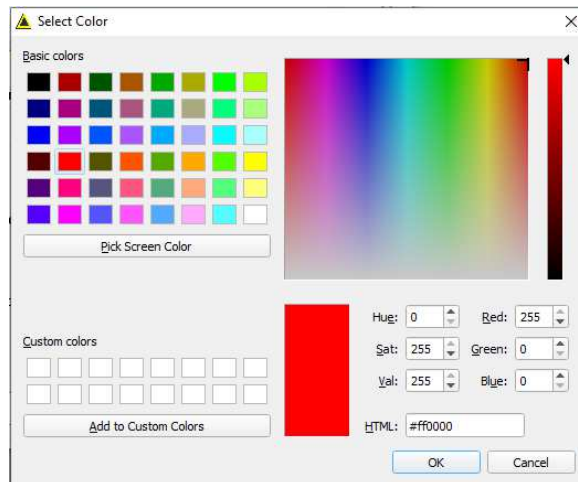


Save the new settings with **Save** button.

Default button to set appearance to the initial aspect.


4.2.7 Wireless settings

Enable or disable the **Wifi** or **Bluetooth** communication on the AMC under **Wireless settings** tab.

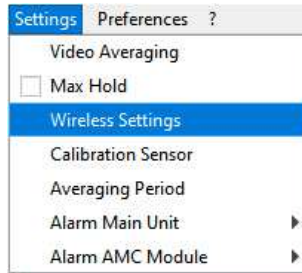


To enable the **WiFi** connection on the AMC:

- Connect the PC to the Wi-Fi network you intend to use.
- Open the **Wireless Settings** tab; a blue bar indicates the network search progress.

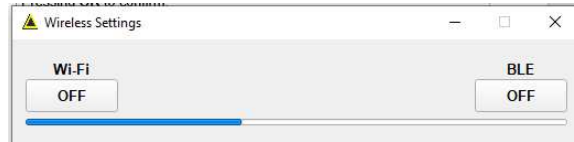

4.2.7.1 Wifi connection

- Select the Wi-Fi network on the **SSID** window list.

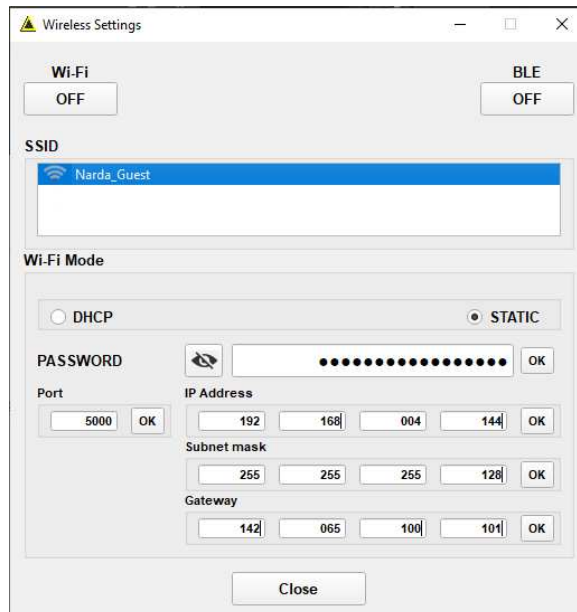

- Enter the password of the Wi-Fi network (**Password**)

- Mark with  the desired IP configuration on the **Wi-Fi Mode** window:


- **DHCP (Dynamic)** the AMC is set to connect automatically to a W-Fi network.
- **IP Address (Static)** the AMC is set to connect to a Wi-Fi network according the user settings as follows:
 - **Port:** Sets the Port of the AMC and press OK
 - **IP Address:** Sets the IP address of the AMC and press OK
 - **SUBNET MASK:** Sets the Subnet mask and press OK
 - **GATEWAY:** Sets the Gateway address and press OK

- Clicking on **OFF**; the button toggles to **ON** for enabling the function.



- Press **Close** to save the settings

- The IP address and the Port number will also appear on the main window after a brief **Waiting for connection** message in red.

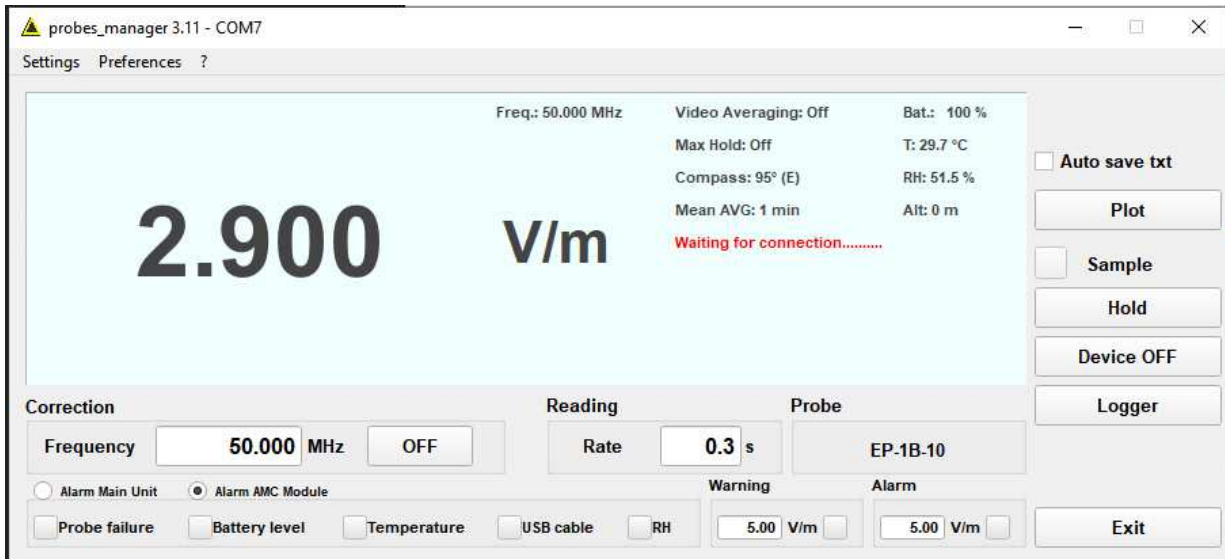

The WiFi module is placed in “stand-by” condition and, If no action is taken in the last 10 minutes, the wireless connection turns off. Every time the AMC is switched on, the module will return in the same condition since the wireless is set **ON** in the **settings**.



If AMC is supplied by USB-C cable or PoE Injector, the Wireless module will not automatically switch off after 10 minutes and remains always on.



If a command is sent while the WiFi communication is enable and the Fiber optic or USB or Ethernet cable is connected, the priority is given to the wired connection.

- Disconnected the cable.

- At the next connection, active the wireless communication by simply ticking the WiFi box on Probe Manager software and press Connect (see §4.2.7.1 Wi-Fi Communications)



4.2.7.2 Bluetooth Connection



The Bluetooth connection is available only for Android and iOS device through LR-01 Manager App. For further information see Chapter 8 and 9.

To enable the **Bluetooth (BLE)** connection on the AMC:

- Clicking on **OFF**, the button toggles to **ON** for enabling the function.

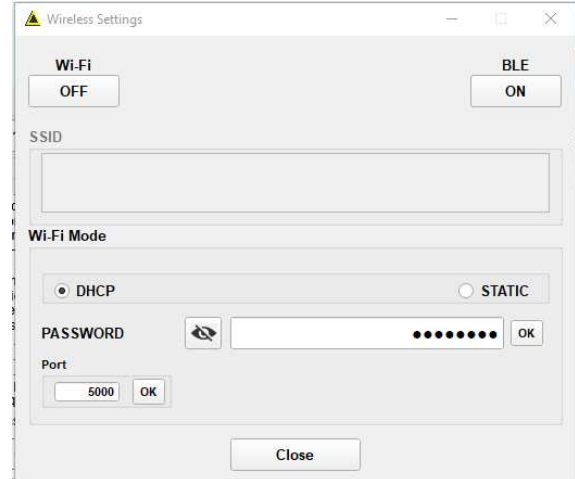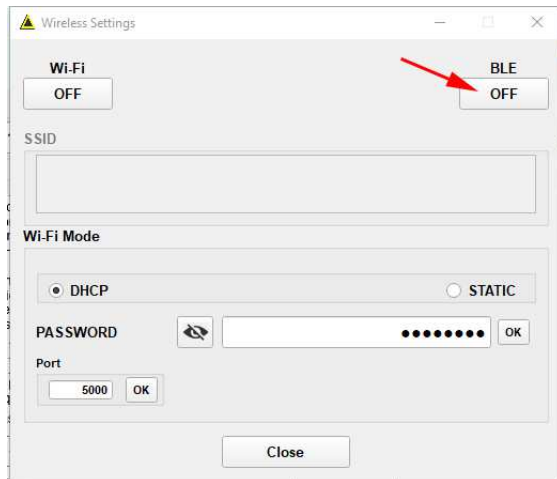

- Confirming with **Close**

The BLE module is placed in “stand-by” condition and, If no action is taken in the last 10 minutes, the Bluetooth connection turns off. Every time the AMC is switched on again, the module will return in the same condition since the BLE is set **ON** in the **settings**.

If AMC is supplied by USB-C cable or PoE Injector, the Wireless module will not automatically switch off after 10 minutes and remains always on.

If a command is sent while the BLE communication is enable and the Fiber optic or USB or Ethernet cable is connected, the priority is given to the wired connection.

- Disconnected the cable.

- At the next connection, active the wireless communication by simply ticking the WiFi box on Probe Manager software and press Connect (see §4.2.7.1 Wi-Fi Communications)

4.2.8 Standard (for EHP-2B probes only)


- Load a default standard limit saved into the EHP-2B probe memory at the factory.

The **Standard** function is enable only when an EHP-2B model probe is connected to the AMC.

To enable the limit, mark with the corresponding box available on **Settings** tab → **Standard**.


The limit list depends on the EHP-2B model probe connected, as follows:

- EHP-2B-05 and EHP-2B-06 Standard limit list:

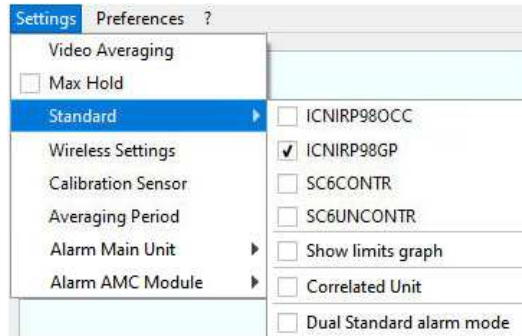

ICNIRP 1998 Occupational; select the ICNIRP 1998 Occupational limit
ICNIRP 1998 General Public; select the ICNIRP 1998 General Public limit
SC6 2015 Controlled; select the SC6 2015 Controlled limit
SC6 2015 Uncontrolled; select the SC6 2015 Uncontrolled limit

- EHP-2B-07 and EHP-2B-08 Standard limit list:

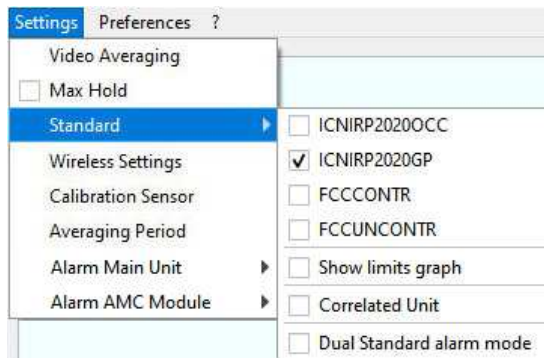

ICNIRP 2020 Occupational; select the ICNIRP 2020 Occupational limit
ICNIRP 2020 General Public; select the ICNIRP 2020 General Public limit
FCC-96 326 Occupational; select the FCC-69 329 Occupational limit
FCC-96 326 General Public; select the FCC-69 329 General Public limit



See §4.3.5 **Show limits graph** and **Correlated Unit** functions for further information.




See §4.2.9.1 **Dual Standard alarm mode** function for further information.

4.2.9 Alarm Main Unit and Alarm AMC Module


These functions allow user to select which alarms and device(s) should be active on the **Main Unit** or **AMC Module** (Interface); the bottom AMC/00 base plate also features a User's Port to control external devices or to trigger measurements under specific conditions.

On **Settings** tab → **Alarm Main Unit** or **Alarm AMC Module**, select with a tick ✓ the alarms and device(s) for notification. Leave empty when no action is taken (Probe and Vibration in the Main Unit as example):

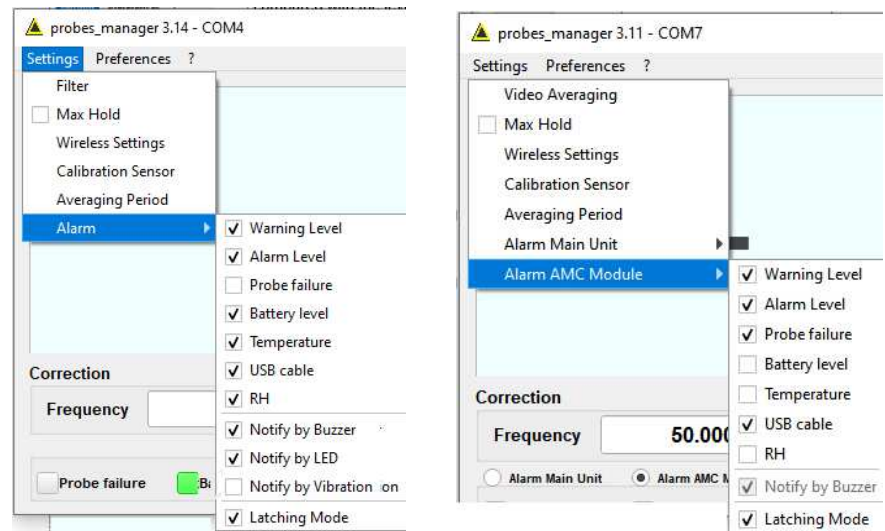




The **Alarm** shown on the main window and the **Status** column reported in the report (see §4.6.8 Download Log) are independent of each other. Doesn't matter if the control of alarms are active or not, the Area Monitor compact will always be able to record any alarm occurred during logger acquisition.

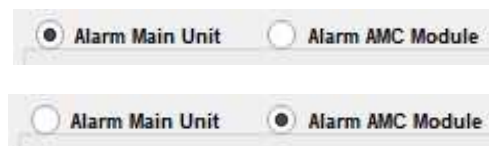To active the **Main Unit** or **AMC Module**, mark with a  the corresponding box available on the alarm control window.



The software provides several alarms and for each one of them there is a square in the control window that will show the alarm current status:

-  **RED**: alarm condition occurred;
-  **GREEN**: alarm control active.
-  **EMPTY**: alarm control not active



See next page for description.




- **Warning Level:** enable the field level threshold for Warning notification.
- **Alarm Level:** enable the field level threshold for Alarm notification

The field strength thresholds can be set on “WARNING” and “ALARM” box:



The field will be calculated in order to the average type and time period or the instantaneous measured value (see §4.2.10 Averaging Period) and compared with the enabled field level threshold.

- **Probe failure:** In case of absence or malfunction of the probe an alarm will be notify.
- **Battery level:** The internal control system of the AMC features a voltmeter for continuous measurement of the battery voltage. This function ensures constant control of the power situation for correct operation of the AMC. The square turns red when the value is equal or below the 3.25V.
- **Temperature:** The internal control system of the AMC features a thermometer to ensure constant control of its internal temperature.
- **USB cable:** In case USB cable connected and/or AMC under charging an alarm will be notify.
- **RH (Relative Humidity):** The AMC also features a hygrometer to ensure constant control of its internal Relative Humidity.

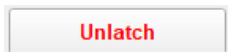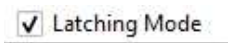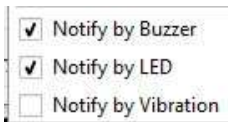

- **Notify by Buzzer:** Enable the Buzzer for alarm level notification
- **Notify by LED:** Enable the Visual Led for alarm level notification
- **Notify by Vibration:** Enable the Vibration for alarm level notification
- **Latching Mode:** If the function is enable and any alarm condition occurred, the AMC will remain in permanent alarm status even if the normal condition has been restored. To reset the station press the **Unlatch** red button that will appear on the lower right corner of the main window and confirm with **Yes**.



Notify by Buzzer is always active on the AMC Module.




Notify by LED and **Notify by Vibration** functions are not available on the AMC Module.





See upcoming paragraph for **EHP-2B Alarms** and **Dual Standard alarm mode** information.

4.2.9.1 EHP-2B Alarms and Dual Standard alarm mode

As default, in case of using DualBand Electric and Magnetic probe:
- the **Alarm Level** notification depends on exceeding the Alarm S(E) thresholds, while the **Warning Level** notification is based on exceeding the Alarm S(H) thresholds of the selected standard.

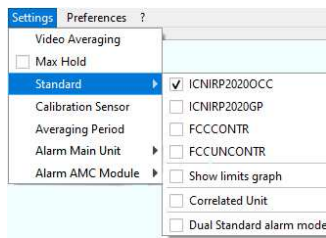


In the example below the **ICNIRP2020OCC** is active ✓ on **Standard** menu and the Alarm S(H) and Alarm S(E) Occupational box are enable to set both thresholds.

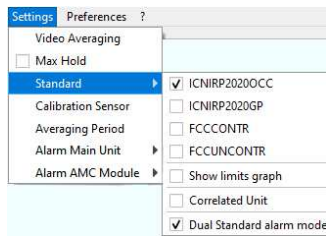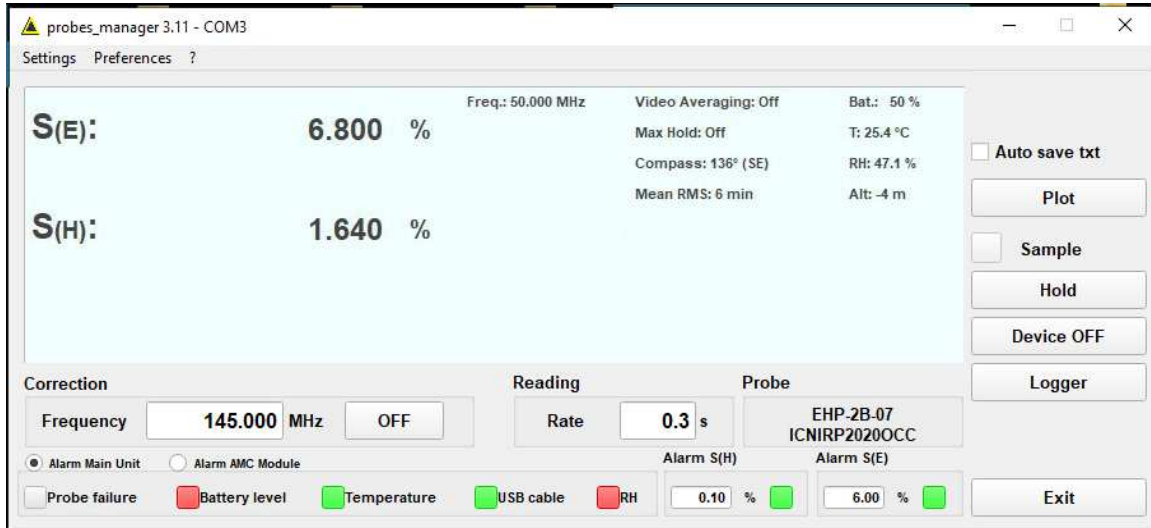

When the **Dual Standard alarm mode** function is active:
- the **Alarm Level** notification depends on the Alarm S(E) S(H) thresholds of the selected standard.

- the **Warning Level** notification is based on exceeding the Alarm S(E) S(H) thresholds of the unselected exposure category

In the below example, the ICNIRP 2020 General Public threshold box will be display next to the enabled Occupational one.



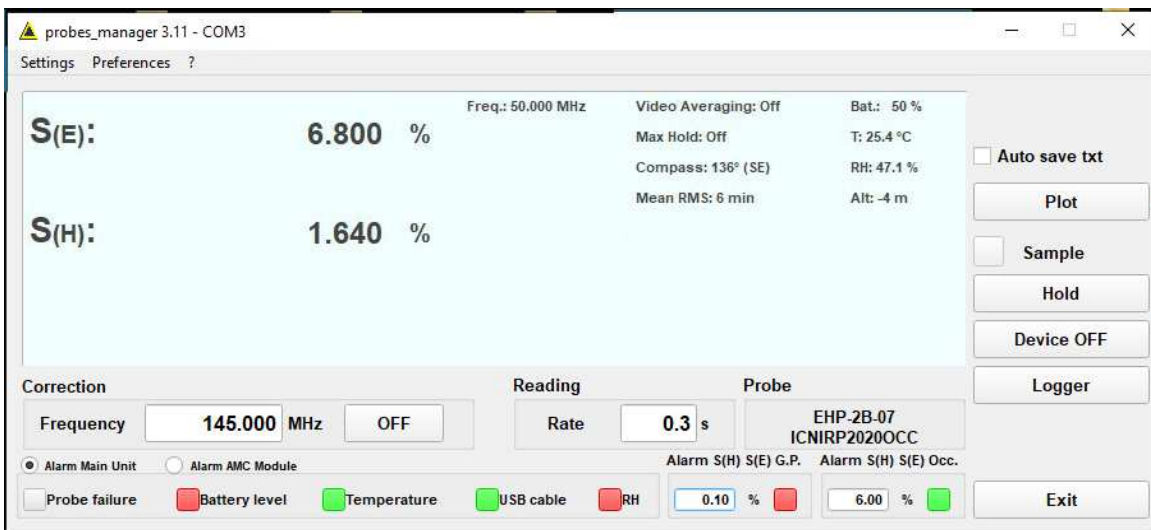


4.2.10 Averaging Period

Define the average type and the time period on which the averaged field will be calculated during the Logger acquisition (see §4.6 Logger) and compared with the level threshold.

The average can be arithmetic (**AVG**) or quadratic (**RMS**).

In the below example, the alarm is activated when the field exceeds 3 V/m averaged on the last 6 minutes.

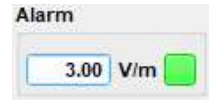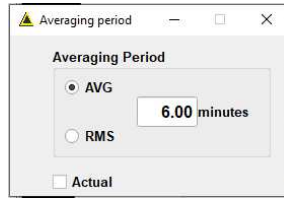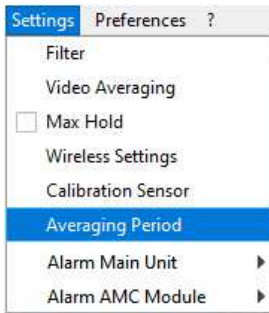



If the averaging time period is lower than the **Time based (Every)** set on Logger acquisition mode, a warning message will appear.

The AVG or RMS field is displayed on the main window and updated at the Reading rate setting since the function was activated.

The instantaneous minimum and maximum data acquired by the AMC from the starting working session are also displayed above the averaged value. When a setting is changed, all the values are restarted.




Instead, when the **Actual** function is active , the limit is compare with the instantaneous field value acquired by the AMC without any RMS or arithmetic average. Thus, brief but intense field variations will cause the alarm if the value exceed 3 V/m.

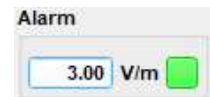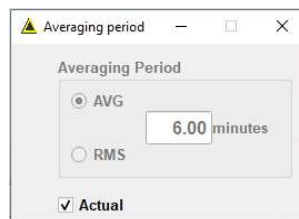

4.2.11 Battery voltage

- Make sure the AMC has enough battery level to perform the analysis on ? tab → **Info** → **Battery voltage**. It shows the residual autonomy during measurements or the achieved autonomy during charging (resolution of 0.01V). For example, the 3.10V corresponds to the 5% displayed in red on the main window.

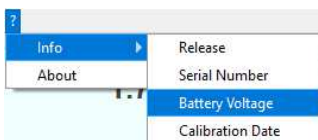


- Once all settings and parameters are set, the software provides:
- Display Live measurements on the main window (see §4.3)
 - Saving Live measurements on the text file (see §4.4)
 - Display Live measurements in graph way (Plot) (see §4.5)
 - AMC programmable operation (Logger) (see §4.6)

4.3 Display Live measurements on the main window


During live measurements the value is displayed with three decimals on the main window.

Using DualBand Electric and Magnetic probe, the screen will display both field value in percentage (EHP-2B-02 as example):

- **S(E) / E** Power density calculated in far field condition or Electric field strength
- **S(H) / H** Power density calculated in far field condition or Magnetic field strength

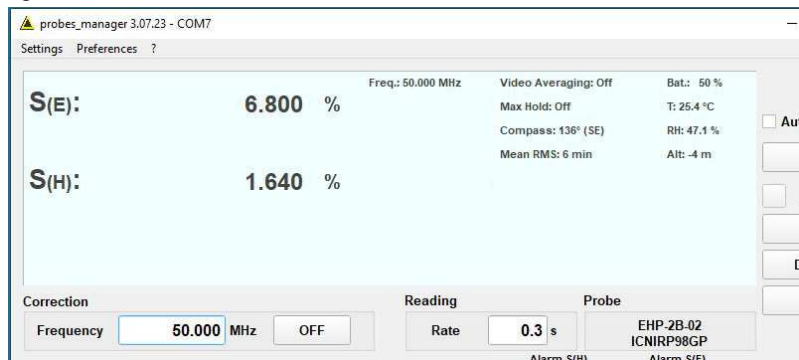

The corresponding value in W/m^2 (Power density) or $V/m-A/m$ (Electric-Magnetic field) unit is also displayed on the main window (see §4.3.3 for further information).

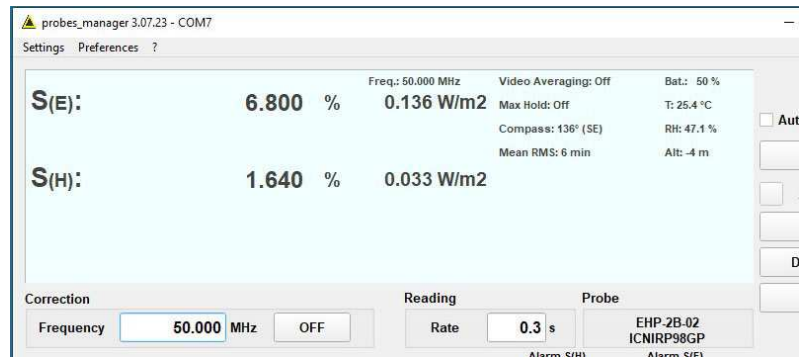

The chapter 1 of this manual includes the list of the field probes available and their technical specifications.

If the field value of the probe is outside the nominal level range, the following messages are displayed:

Ovr : the field level is higher than 110% of the probe nominal maximum level (for example, 1100 % for EHP-2B-07).

Field value marked in red: the field level is between 100% and 110% of the probe nominal maximum level (from 1000 to 1100 % for EHP-2B-07).

Field value marked in blue: the field level is between the probe nominal minimum level and its 20% higher (for example, from 0.1 to 0.12 % for EHP-2B-07).

Low : the field level is lower than probe nominal minimum level.

- For example, 0.1 % for EHP-2B-07

Some parameters and technical data are shown in the upper right part of the main window:

Freq.: 2170.000 MHz	Video Averaging: 4 (RMS)	Bat.: 75 %
	Max Hold: On	T: 27.0 °C
	Compass: 142 (SE)	RH: 46.4 %
	Mean : 0.25 min	Alt: 1 m
	Wi-Fi: ON 172.20.10.4:6666	


Description:

- **Freq:** frequency chosen for correction, or OFF when disabled.
- **Video Averaging:** number of the readings on which the RMS average is calculated during Live measurements or OFF when disable
- **Max Hold:** ON when enable, or OFF when disable.
- **Compass:** compass heading in degrees and cardinal directions.
- **Mean (Averaging Period):** time period on which the averaged field is calculated
- **Wifi:** Wifi status, IP Address of the AMC and Port used by the Area Monitor Compact
- **Bat:** the residual battery autonomy during measurements or the achieved autonomy during charging in 5% steps; battery voltage below 5% of charge are displayed in red.
The numeric value is available on ? tab → **Info** → **Battery voltage** with resolution of 0.01V (for example, the 3.10V corresponds to the 5%).
- **T:** temperature in degrees Celsius.
- **RH:** percentage of relative humidity.
- **Alt:** relative altitude in meters.




The above labels may change in case of using different probes or configuration.


The probe connected to the AMC is displayed on the **Probe** box and, in case of using DualBand Electric and Magnetic probe, the reference standard set is shown together with the model (see §4.2.8 Standard”).

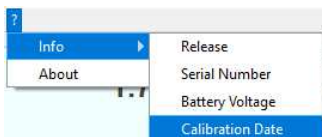


The latest calibrated data is displayed on ? tab → **Info** → **Calibration Date**

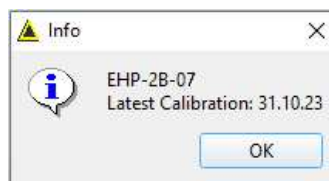


The probe of the AMC can be disconnected and reconnected while in use. the communication will be restarted automatically and the station performs a diagnostic test while a progress bar shows the process.

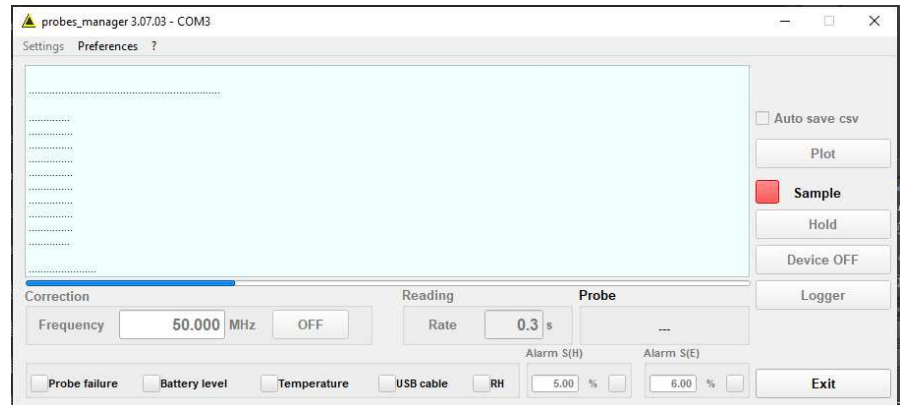

Once a link has been established, the live measurements are displayed in the main window again:

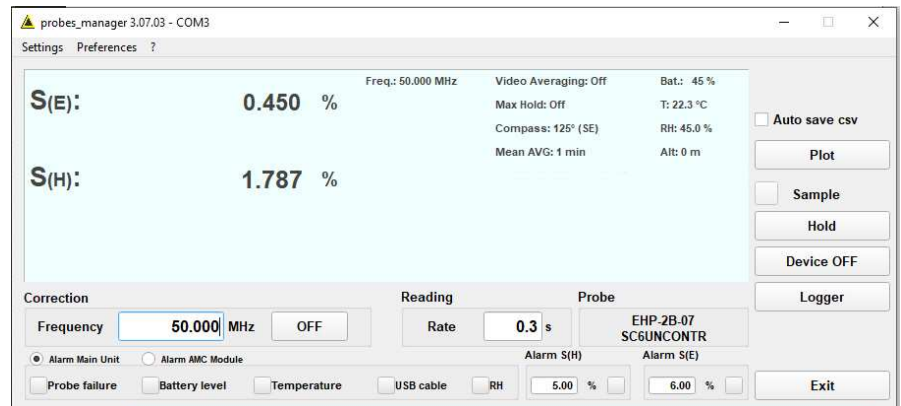

In case of absence or malfunction of the probe, the message “Probe not connected” appears on the main window. If enable \checkmark , a **Probe failure** alarm will be notify (see §4.2.9 Alarms) as shown in the below example.

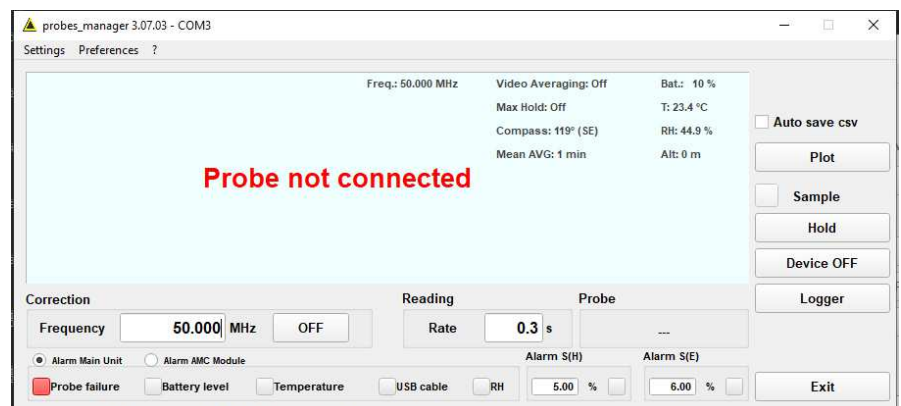

4.3.1 Sample

In the control window the **Sample** square blinks at the Reading rate set and shows by its color the current status of the data acquisition:



RED: data acquisition is still in progress or paused



GREEN: data acquired

4.3.2 Reading Rate

The field value is displayed on the Main window and Plot (Graph) at the Reading Rate set in seconds.

If **Auto save txt/csv** is enable, the data are also saved on the text/table file at the same interval (see §4.4.1 Auto save txt/csv)

The maximum value settable is 30 seconds .

Insert the Reading rate value and press Enter key to confirm.



If the value entered is not allowed, a warning message will appear and the nearest correct value will be set by the software.



4.3.3 Correction Frequency, Correlated Unit and Show Limits graph function

EHP-2B probe have flatness compensation factors on board that can be applied when the signal source frequency is known, in order to make the measurement even more accurate. To recall the **Correction frequency** factor (in MHz):

- Clicking on **OFF**, the button toggles to **ON** for enabling the function.
- Insert the Frequency correction value



To disable the Correction Frequency click **ON** button, the button toggles to **OFF** for disabling the function


If the value entered is not allowed, a warning message will appear and the nearest correct value will be set by the software


If the correction frequency is ON the percentage indication of the standard could be calculated in power density for electric "**S(E)**" and magnetic "**S(H)**" field strength in far-field conditions or Electric "**E**" and magnetic "**H**" field.

The Electric/Magnetic field detection is related to the standard selected for frequencies lower than:

- 10 MHz for both standard ICNIRP98 and SC6
- 30 MHz for ICNIRP2020
- Never, always power density is applied, for FCC

If the frequency correction is ON but out of range of calibration table stored on probe in use, the indication show the result "---" instead of the value.

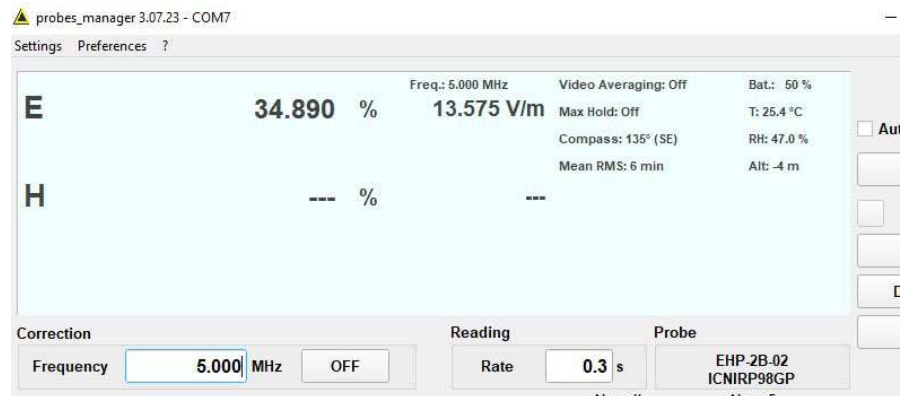


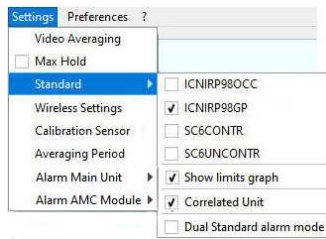

If the **Show Limits graph function is active** (✓) on **Standard** menu, the software displays on the graph the limit according to the Standard and Correction Frequency set.

A marker also appears on the screen at the correction frequency set and, if **Correlated unit** is enable, shows the actual level measured.

The User can change the correction frequency value simply positioning the marker along the curve by Click & Hold the left mouse button while moving to the right or to the left.

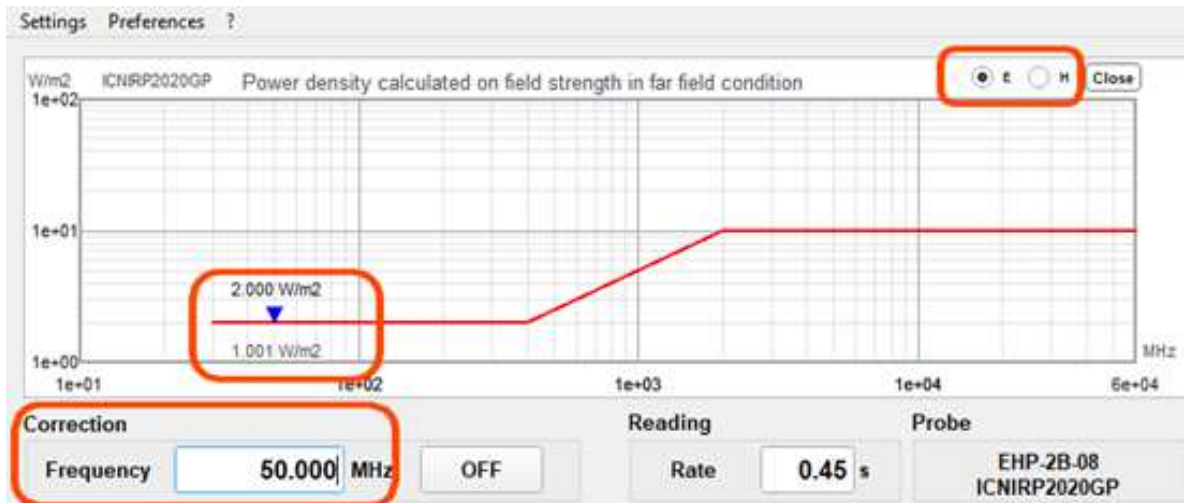

The example above with correction frequency ON at 50 or 10 MHz for ICNIRP2020GP.




Using **E** or **H** button on the upper right of the graph during Electric/Magnetic field detection, the user can display the Electric or Magnetic measurement and limit.

Press **Close** to exit from the limit graph.

4.3.4 Video Averaging


While live measurements are performed, the user can also display the RMS averaged field using the **Video Averaging** function.

 probes_manager 3.07.03 - COM3

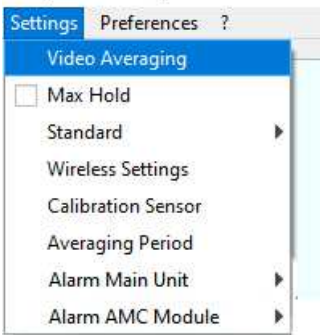


The number of the readings on which the RMS average is calculated is available on the **Video Averaging** drop-down menu: 4, 8, 16, 32, 64. or OFF when disable.


In the below example the Video Averaging is set to **16**.

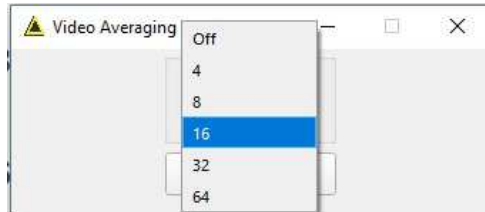

Once selected, the **Avg** counter is started and displayed in red on the main window:

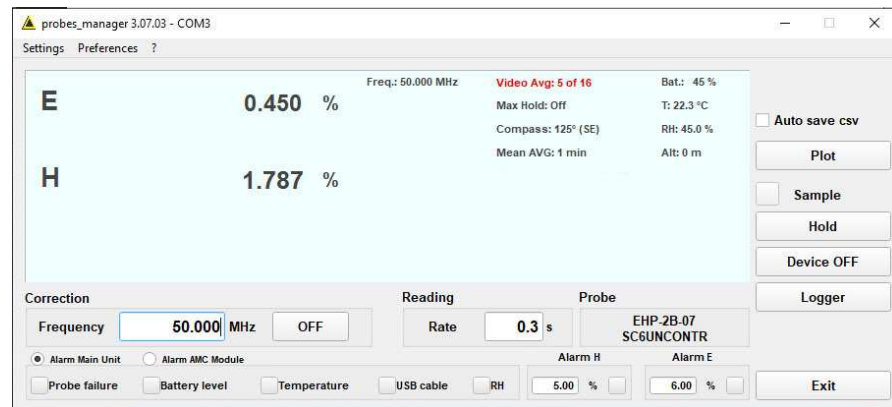


When the process is ended, the preset value is shown; the RMS averaged field is displayed on the main window and updated at the Reading rate setting since the function was activated.

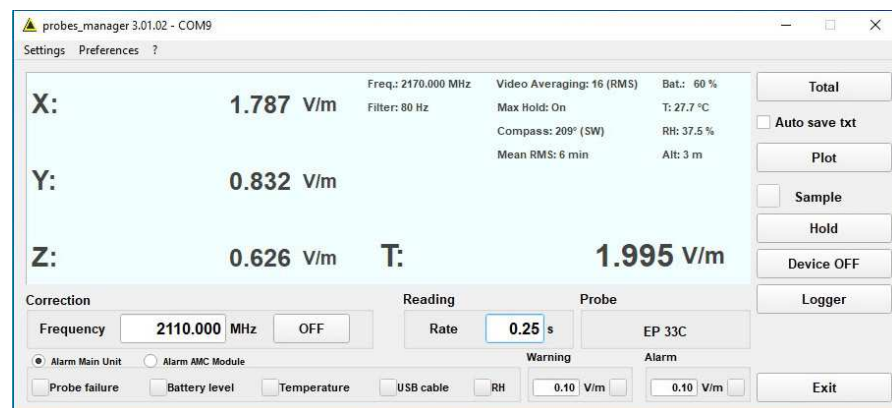


When a different Video Average value is selected or a parameter is changed, the calculations is restarted.

4.3.5 Max Hold

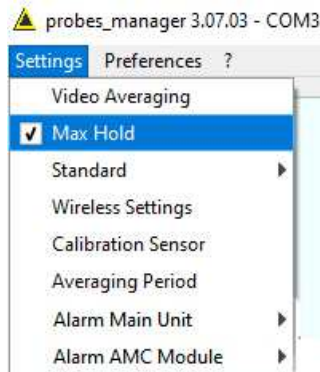


At any time the maximum field strength value can be retained and displayed since the Max Hold has been activated ✓ on Settings tab. It is therefore updated only if the new value is greater than the previously displayed one showing thus the maximum in the frequency range since the Max hold function was activated

4.3.6 Minimized UI

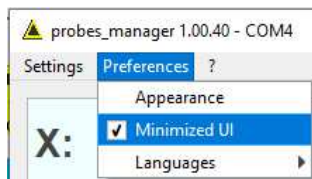



Enable ✓ this function to keep the Total field readings displayed on desktop when minimizing the main window on the tray by control window button (Preferences tab → Minimized UI).

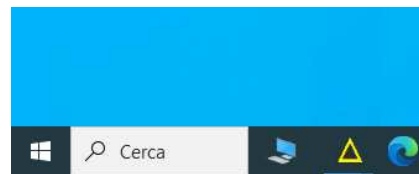

The control window buttons located on the title bar also allow to enlarge/restore the main window and exit the program.



4.3.7 Hold/Run

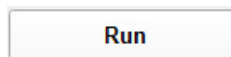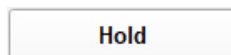


While live measurements are performed, the user can freeze the readings pressing **Hold** button. Press the button again to Resume.

4.3.8 Device OFF




Device OFF button can be very convenient for turning the AMC off from remote, when it is located far away or in places that are not easily accessible (i.e. inside anechoic chambers etc.) and quit the program.

4.3.9 Exit

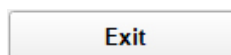

Press **Exit** to exit and quit the program (the AMC remains on). The current settings are saved and will be recalled at the next start.

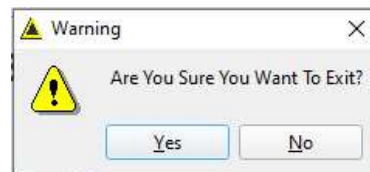

Press **Yes** to close the software or **No** to continue using the software

4.4 Saving Live measurements

While the live measurements are performed, the software allows collecting measurements directly in the internal memory of the AMC and saving in a report file using the **Auto save txt** or **Auto save csv** function (the format depends on the Text file separator set on **Preferences** tab → **Appearance**).

4.4.1 Auto save txt/csv

In the upper-right main window enable the function to start saving the measurements at the Reading rate set:




Clicking the box again disable the function and causes the end of saving measurements.



A text report file will be created with a specific name **Probemodel_Meas_dd_mm_yyyy_hh_mm_ss.txt** and saved on the folder: *Documents\NardaSafety\NardaProbesManager*

For every working session (from starting to ending saving) a new text file will be created on *NardaProbesManager* folder :

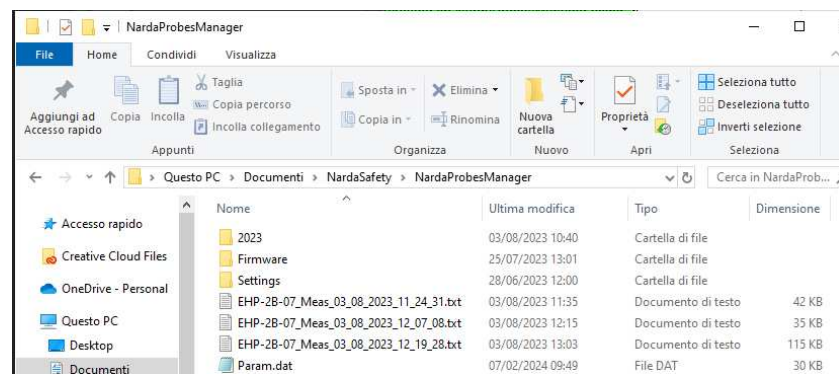

When the file is saved in .txt format and the table is opened, an huge amount of data are available.

The following headline will be created on each report:

```
EHP-2B-07_Meas_03_08_2023_12_19_28.txt - Blocco note di
File Modifica Formato Visualizza ?
Storing Date 03-08-2023
Storing Time 12:20:15
Device Name EHP-2B-07
Standard SC6CONTR
Device Serial Number 000ZW30312
Frequency 1,000 MHz
Video Averaging (RMS)
Max Hold Off
Temperature (°C) 28.0
RH (%) 44.1
Relative altitude (m) 1
Compass 124° (SE)
```

Description:

Storing Date: working session date.

Storing Time: start measurements campaign (hour, minute, second).

Device Name: probe type connected to the AMC

Device Serial Number: Serial number stored on AMC

Frequency: frequency correction in MHz, or OFF when disabled.

Video Averaging: (RMS) if enable, OFF if disable

Max Hold: ON if enable, OFF if disable

Temperature: temperature in degrees Celsius.

RH: percentage of relative humidity.

Relative Altitude: relative altitude in meters.

Compass: compass heading in degrees and cardinal directions

Time: hour, minute, second, thousandths of a second of the measurement acquisition

- **S(E) / E-field** **S(H) / H-field:** Power density calculated in far field condition or Electric/Magnetic field strength; between brackets the unit. The corresponding value in W/m² (Power density) or V/m-A/m (Electric-Magnetic field) unit is also displayed (see §4.3.3 for further information).



The above labels may change in case of using different probes or configuration.


File	Modifica	Formato	Visualizza	?
Storing Date		04/04/2024		
Storing Time		17:31:00		
Device Name		EHP-2B-08		
Standard		ICNIRP2020CC		
Device Serial Number		000ZW30308		
Frequency		50.000 MHz		
Video Averaging		Off		
Max Hold		Off		
Temperature (°C)		26.4		
RH (%)		43.5		
Relative altitude (m)		0		
Compass		123° (SE)		
Time	S(E)(%)	S(H)(%)	S(E)(W/m2)	S(H)(W/m2)
17:31:00.540	1.11	0.52	0.111	0.052
17:31:00.840	1.11	0.51	0.111	0.051
17:31:01.139	1.11	Ovr	0.111	Ovr
17:31:01.470	1.11	0.52	0.111	0.052
17:31:01.756	1.10	0.51	0.110	0.051
17:31:02.072	1.11	0.54	0.111	0.054
17:31:02.357	1.10	0.51	0.110	0.051
17:31:02.655	Low	Low	Low	Low
17:31:02.972	1.11	0.51	0.111	0.051
17:31:03.296	1.12	0.41	0.112	0.041
17:31:03.595	Ovr	0.51	Ovr	0.051
17:31:03.890	1.11	0.51	0.111	0.051
17:31:04.743	1.10	0.54	0.110	0.054

File	Modifica	Formato	Visualizza	?
Storing Date		04/04/2024		
Storing Time		17:30:45		
Device Name		EHP-2B-08		
Standard		ICNIRP2020CC		
Device Serial Number		000ZW30308		
Frequency		10.000 MHz		
Video Averaging		Off		
Max Hold		Off		
Temperature (°C)		26.4		
RH (%)		43.5		
Relative altitude (m)		0		
Compass		123° (SE)		
Time	E(%)	H(%)	E(V/m)	H(A/m)
17:30:45.456	Low	6.27	Low	0.031
17:30:45.539	10.96	6.38	14.433	0.031
17:30:45.840	10.94	5.96	14.407	0.029
17:30:46.156	Ovr	Ovr	Ovr	Ovr
17:30:46.455	10.96	6.49	14.433	0.032
17:30:46.756	10.94	6.27	14.407	0.031
17:30:47.056	Low	Low	Low	Low
17:30:47.389	10.91	6.38	14.367	0.031
17:30:47.674	10.94	5.96	14.407	0.029
17:30:47.990	Ovr	6.17	Ovr	0.030
17:30:48.290	10.94	6.27	14.407	0.031
17:30:48.593	10.96	6.07	14.433	0.030
17:30:48.926	10.94	6.49	14.407	0.032


If the field measured is outside the nominal level range, the value is displayed with **Ovr** or **Low** (see Pag.4-19).

4.5 Display Live measurements on the graph (PLOT)

The **PLOT** function performs Time Domain measurements and showing how the signal level changes over time.
The screen displays a continue running graph at the Reading Rate setting.

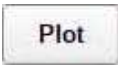


Once selected the **PLOT** button, the following graph will appear:

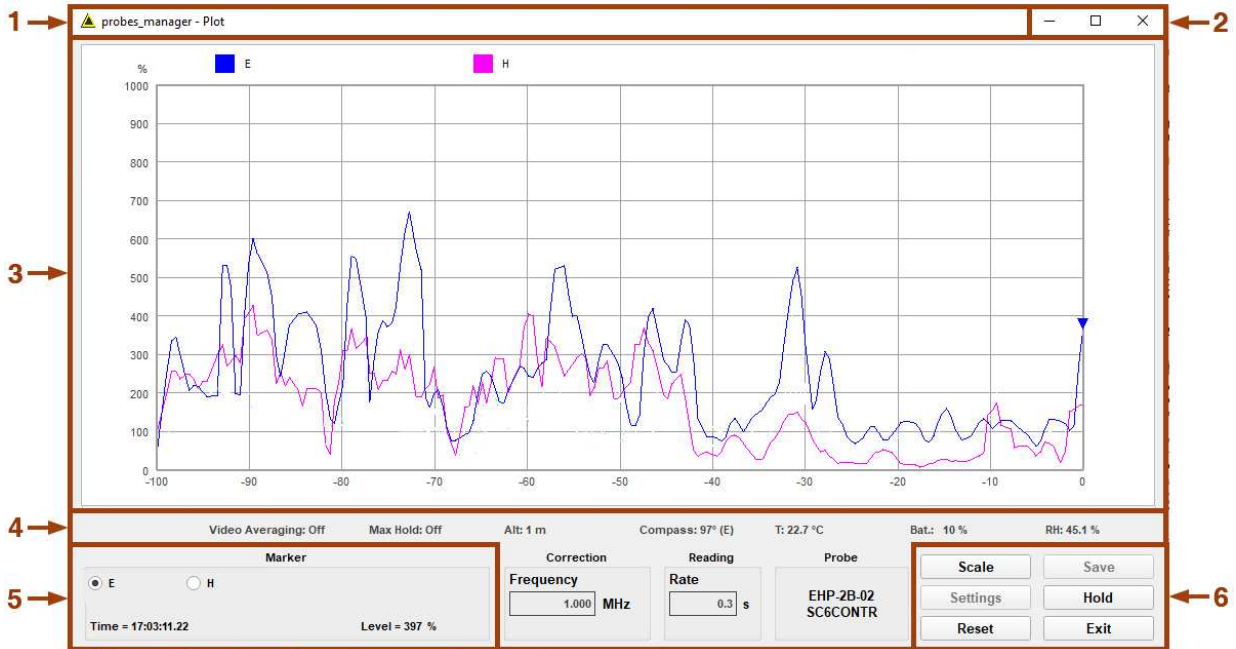

Commands description:

1. Title bar
2. Control window buttons
3. Plot (Graph)
4. Parameters and technical data
5. Marker
6. Button function

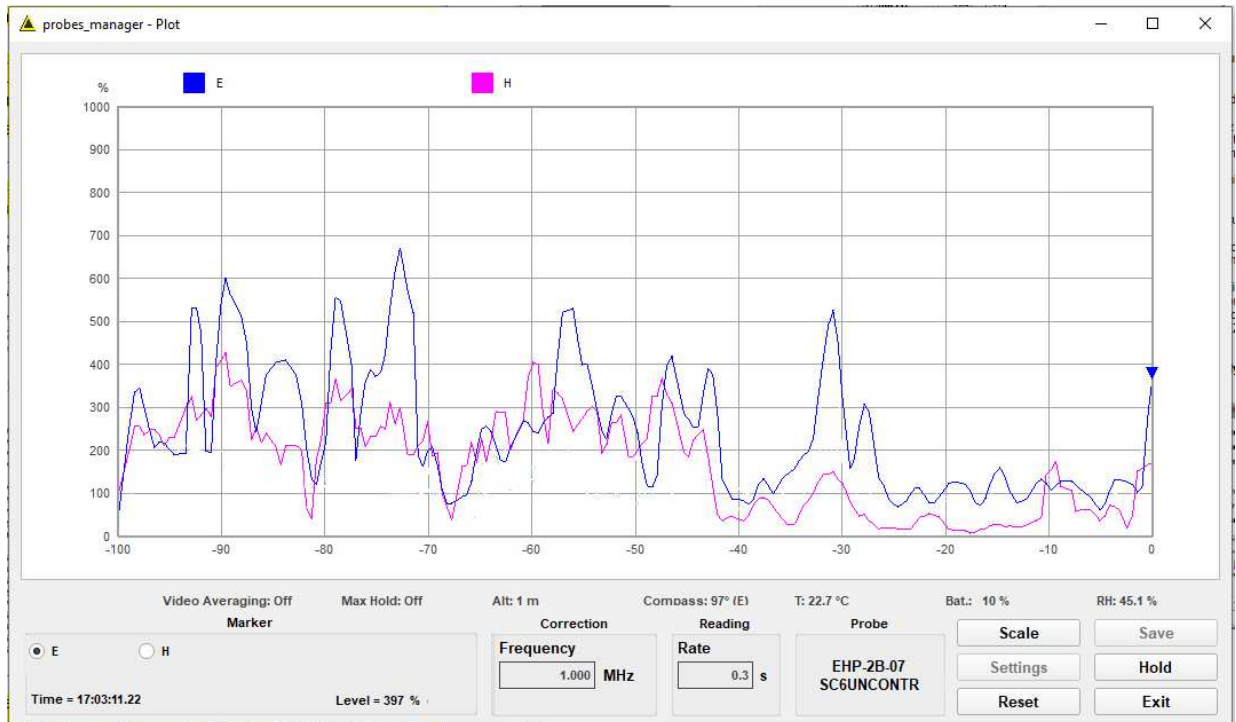

Some parameters and technical data are shown in the lower part of the control window (for explanation see Pag.4-19).

4.5.1 Settings

The Plot and Time/Div setting appear as set on **Preferences** tab → **Appearance**.

4.5.2 Hold/Run

Both can also be changed with **Settings** button in the bottom right corner of the plot; to enable this command the graph must be paused by clicking **Hold** button.

Press **Run** to resume the analysis.

4.5.3 Reset


At any time the user can restart the analysis by clicking **Reset** button.

All the data previously displayed will no longer be available for new download. It is therefore suggested to save any measurement result before resetting (see §4.5.6 Save).

NOTICE

4.5.4 Marker


For a detailed analysis of the graph, a marker appears on the screen as a colored arrow. In the **Marker** window the user can select on which trace to place the marker and move it to any point holding the left mouse key down. In the same window is shown the level marked and the instant in which the measurement is made.

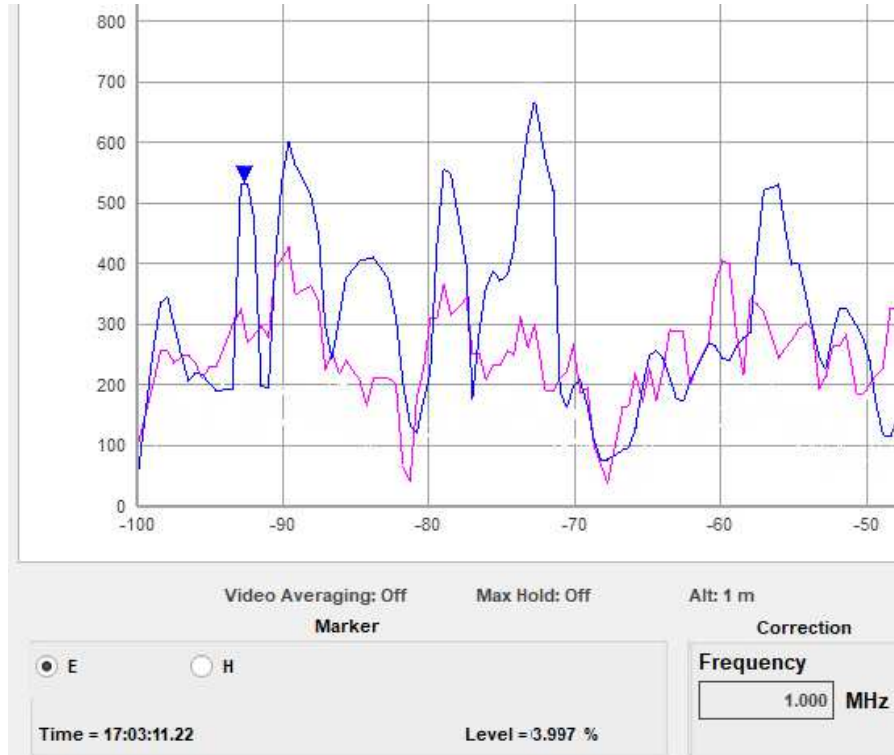

The above labels may change in case of using different probes or configuration.


4.5.5 Scale

When the level is close or over the limit, It is suggested to select Scale button to increase the scale.

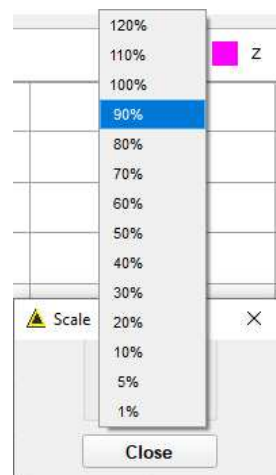

If the field level is higher than 110% of the probe maximum nominal level, a red **Over Range** message will be display on the center top of the graph.

In the Marker window is shown **Level = Ovr** and the instant in which the measurement is made.

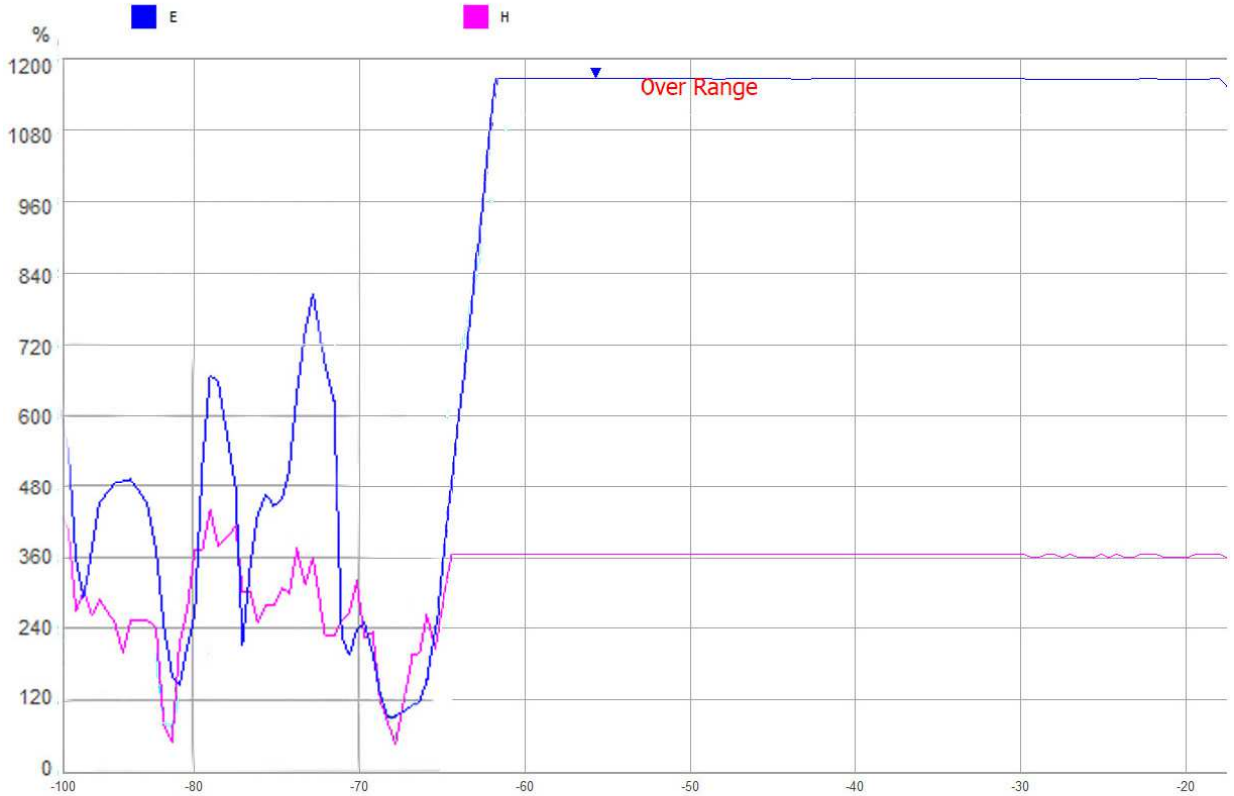

Video Averaging: 16 (RMS) Max Hold: On Alt: 3 m Compass: 121° (SE) T: 23.4 °C Bat.: 50 %

Marker E H

Time = 15:51:25.42 Level = Ovr %

Correction Frequency: 1.000 MHz Rate: 0.3 s

Reading Probe: EHP-2B-07 SC6UNCONTR

Scale Settings Reset

Notice the **E : Ovr %** indication will also appear on the main window:

probes_manager 3.07.03 - COM3

Settings Preferences ?

E Ovr %

H 379 %

Freq.: 50.000 MHz Video Averaging: Off Bat.: 45 %
 Max Hold: Off T: 22.3 °C
 Compass: 125° (SE) RH: 45.0 %
 Mean AVG: 1 min Alt: 0 m

Auto save csv

Plot

Sample

Hold

Device OFF

Logger

Correction Frequency: 50.000 MHz OFF

Reading Rate: 0.3 s

Probe: EHP-2B-07 SC6UNCONTR

Alarm H: 5.00 % Alarm E: 6.00 %


Probe failure Battery level Temperature USB cable RH

Exit


4.5.6 Save

Press **Save** button to save the plot as bitmap image or text file (the graph must be paused by clicking **Hold** button):

- Save the graph displayed as a bitmap image (.bmp) for insertion in other applications such as a Word Processor or Image Editor.

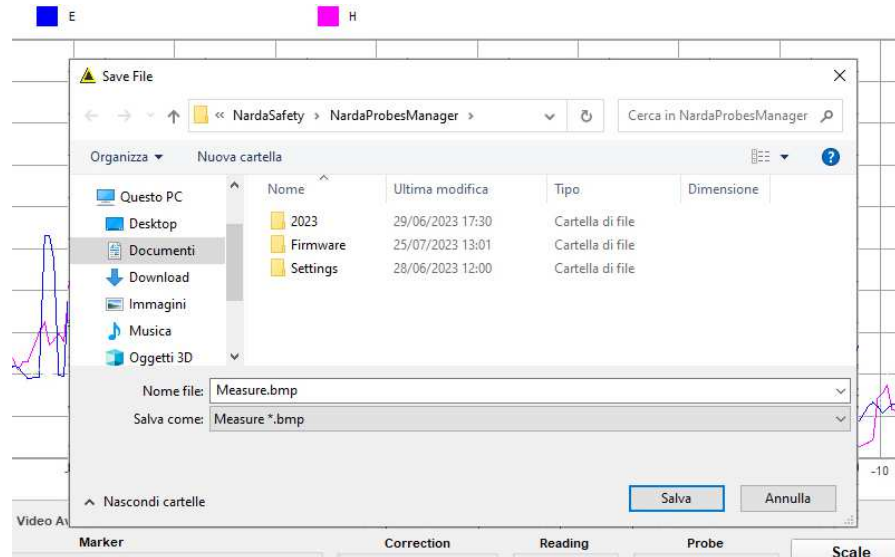


- Save in text format (.txt) a table containing the data shown since the software is opened or since the graph has been restarted with **Reset** button.

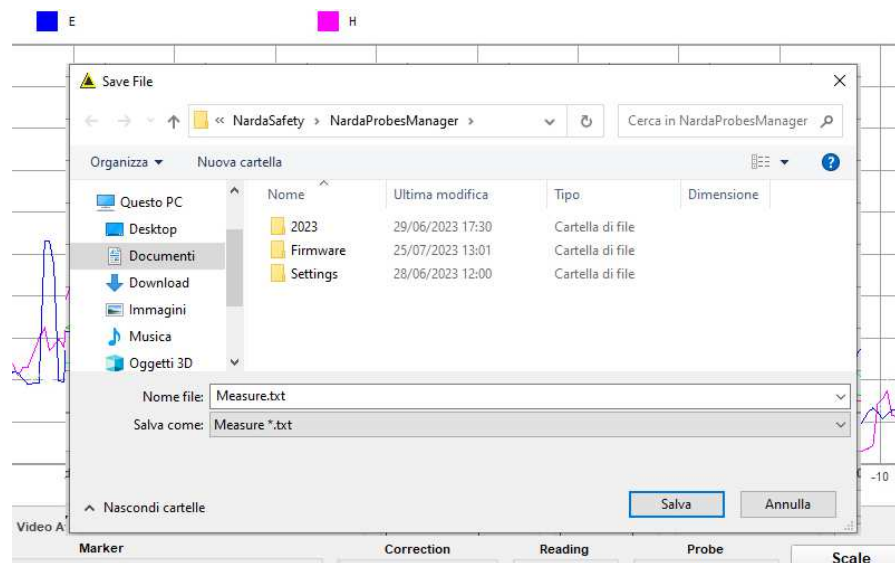

When the table is opened, an huge amount of data are available; the text file has the same format as the **Auto save txt/csv** function (see §4.4.1).

4.5.7 Exit

Click **Exit** button to go back to the main window

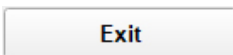

4.6 Storing measurements on the AMC memory (Logger)




AMC is suitable for short-term, medium and, especially, long survey thanks to high capacity internal battery. In Logger acquisition mode it is possible to program the Area Monitor Compact for collecting and storing data directly in its internal memory.

The Logger settings provides:

- Set Logger acquisition method;
- Transfer to PC the data acquired;
- Save data in text format and display as a table.

Clicking **Logger** button, this window will appear:

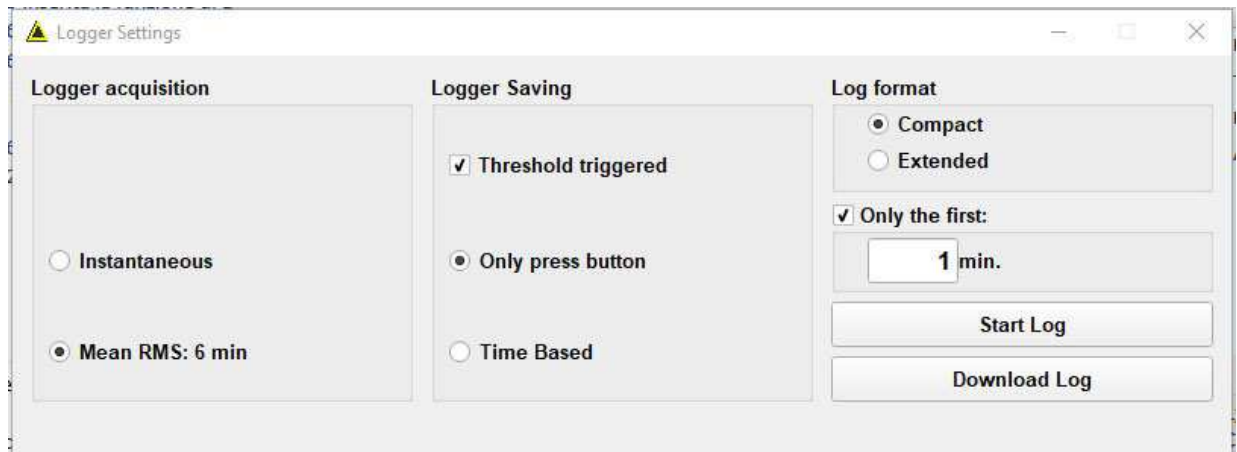


4.6.1 Logger acquisition

To perform programmable acquisition follow the instructions step-by-step:

- Set Logger acquisition method (**Logger acquisition**)
- Choose the storing mode (**Logger saving**)
- Select the Download data format (**Log format**)
- Set Download period (**Only the first**)
- Start Logging data (**Start log**)
- Stop Logging data (**Stop log** if the **Only the first** function is not enable)
- Export measurement results in text file (**Download Log**)
- Display the data as a table

The **Logger acquisition** method available:

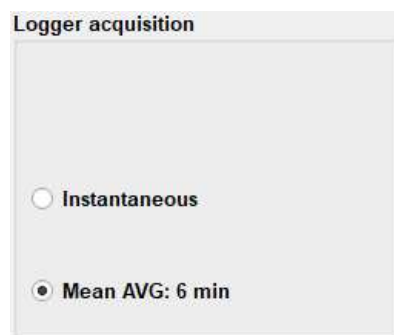


- **Instantaneous:** to acquire the instantaneous field level, not averaged.

- **Mean RMS/AVG: *m* min:** to acquire the averaged field level calculated in the interval set.

The average type and the time period are set on **Settings** tab → **Averaging period**

4.6.2 Logger saving

Then, select the **Logger saving** mode:

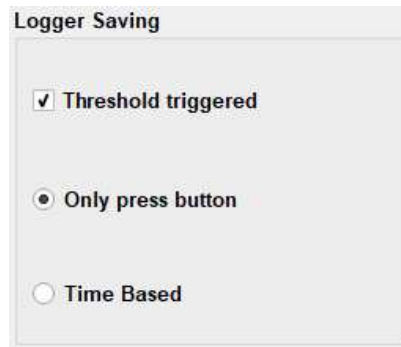


NOTICE

As above example, when “Threshold triggered” and “Only press button” or “Time base” function is enable, priority is given to the Threshold triggered


NOTICE

The internal memory capacity and battery duration are affected by:

- The storing rate (Time Based)
- How often the alarm is triggered (Threshold triggered)
- How often Manual Log button is pressed (Only press button)
- **Threshold triggered:** when active \surd , the acquired measurement (instantaneous or averaged) will be stored in the AMC internal memory only when the measured field is above the alarm level set on **Alarms** box (doesn't matter if active or not on **Settings** tab).

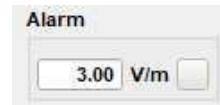

In the above example the storing process is triggered when the field exceeds 3 V/m averaged on the last 6 minutes. Thus, brief but intense field variations will not necessarily cause the alarm if the averaged value does not exceed 3 V/m.

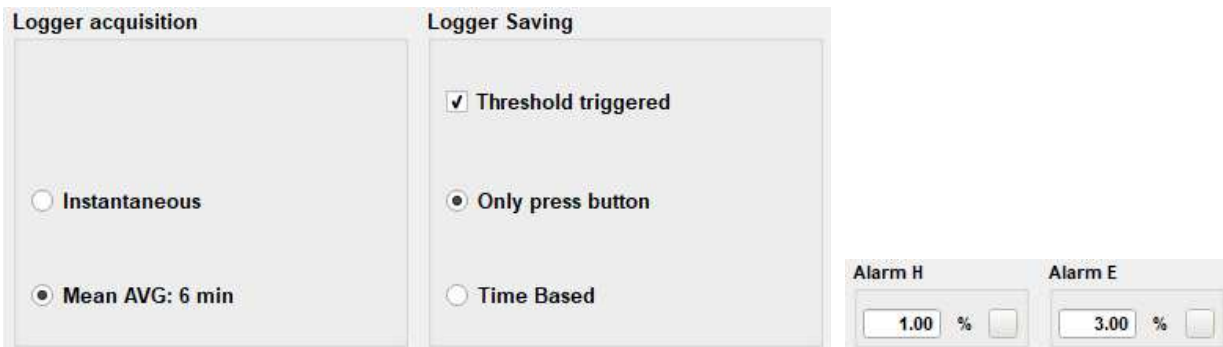

In case of using DualBand Electric and Magnetic probe, the field value is continuously compared with both alarm thresholds set by the user. On exceeding one of these thresholds, the storing process is triggered.




4.6.3 Only press button - **Only press button:** When active , the acquired field level (instantaneous or averaged) is stored in the AMC internal memory each time the Manual Log button is pressed

Only press button

NOTICE

Pressing the Manual Log button for more than 5s will delete all previous saved data. Pressing long enough is notified by the fixed big red led lighting up until the button is released.


In the below example, the instantaneous (not averaged) field value will be saved in the AMC internal memory each time the Manual Log button is pressed.

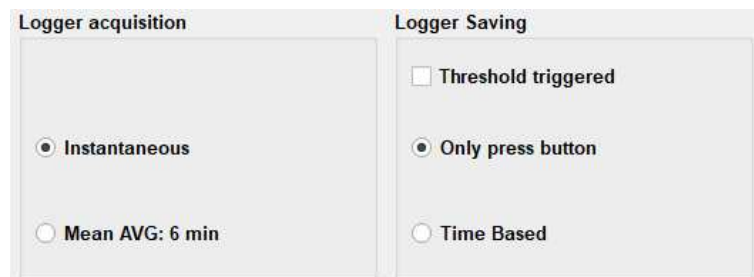


4.6.4 Time based (Every): - **Time Based:** When Time Based is selected , the function toggles to **Every** for enabling the function. The acquired measurements (instantaneous or averaged) will be stored in the AMC internal memory at the interval set in seconds each.

Every second

If the value entered is higher than the **Averaging period** (see §4.2.10) or the maximum allowed (900 sec.), a warning message will appear and the nearest correct value will be set by the software.

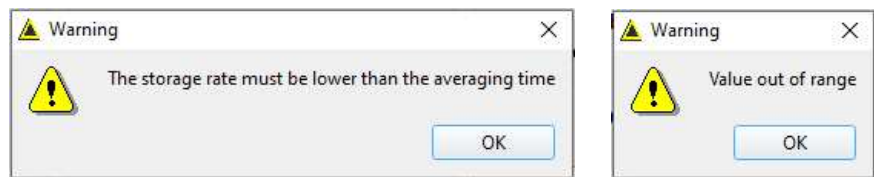

In the below example, the averaged field value calculated in the last 6 minutes will be saved in the AMC internal memory at the interval of 5 seconds each.

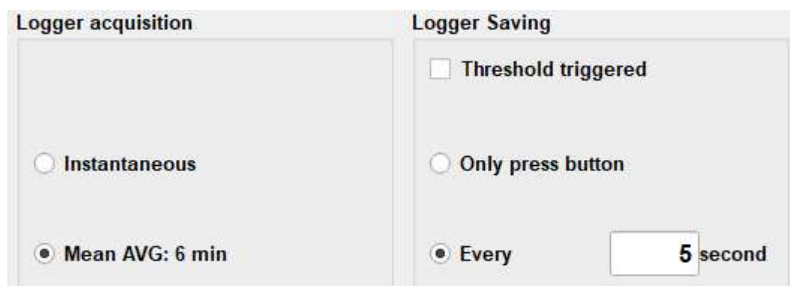

4.6.5 Log format

Also the **Log format** can be set:


- **Compact** The file does not contain Acceleration, Speed, Latitude, Longitude, GPS, and Compass information. Each data record is 32 bytes in size and allows storing in the AMC internal memory up to 125k measurements.

- **Extended** The file contains all data. Each data record is 64 bytes in size and allows storing in the AMC internal memory up to 250k measurements.

For further information, see §4.6.8 Download Log button.

4.6.6 Start Log

Once all parameters are set, press **Start Log** button to start logging measurements and the following message will appear:

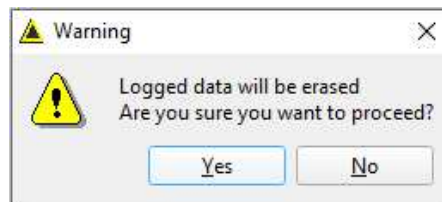

It is suggested press **No** and download the previous data before starting a new measurements campaign.

Clicking **Yes**, all the data of the previous one will be deleted and afterwards the AMC provides simultaneously a brief Visual Led lights up red, on-board acoustic and vibration alarm when start logging measurements.

When the data is saved in the AMC internal memory, the Visual Led lights up red at the storing rate set (Every) or only when the Alarm level is triggered or the Manual Log button is pressed.

4.6.7 Stop Log

When the analysis is ended, press Stop Log button to stop logging measurements and the following message will appear:



Confirm with Yes.

After stopping the Log, the measurements stored in the AMC internal memory can be downloaded pressing Download Log button, otherwise will not be available anymore.

4.6.8 Only the first function and Download Log button

The **Download Log** button downloads the data stored on AMC internal memory to a PC and save them as a text file with a specific name: **LOGGER_Probemodel_dd__hh_mm_ss.txt**


If the function **Only the first** is not enable, the data are download from starting to stopping log data.



If enabled (✓) the results can be stored on PC in the data interval set from the **Start** Log to user selectable time period (in minutes); it is therefore possible to export the desired time range without downloading the entire working session



The file is stored in the following the path:
NardaProbesManager\Year\Months\Day.

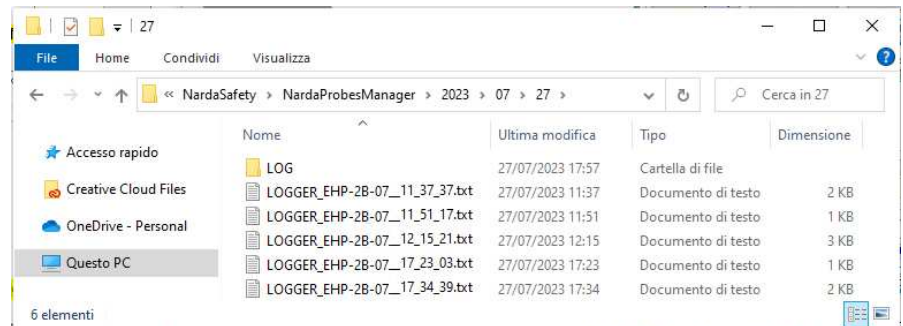

The following headline will be created on each report. Depends on the **Log format**, the Acceleration, Speed, Position and Compass information are not included.

```
*LOGGER_EHP-2B-08_31_11_18_12.txt - Blocco note di Windows
File Modifica Formato Visualizza ?
LR01 Serial n.: 000ZW30311
Probe name: EHP-2B-02
Calibration date: 19.06.23
Log type: RMS = 6.00 minutes
Standard: ICNIRP2020GP

Date Time S(E)RMS% S(E)peak% S(H)RMS% S(H)peak%
Battery(V) Altitude(m) Temperature(C°) RH(%) Status Perturbing AccelerationX(g) AccelerationY(g) AccelerationZ(g)
Speed(km/h) Latitude Longitude GPSAltitude(m) Compass Heading (°)
```

Descriptions:

- **LR01 Serial n.:** Serial number stored on AMC
- **Probe name:** Probe type connected to the AMC
- **Calibration date:** Latest probe calibration
- **Log type:** Log acquisition method
- **Standard:** Reference standard (for EHP-2B probe model only)
- **Date:** Working session date in dd/mm/yyyy format

- **Time:** Hour, minute, second of the measurement acquisition
- **S(E) / E-field RMS:** shows the RMS average calculated on electric “S(E)” field strength in far field condition or Electric “E” field
- **S(E) / E-field peak:** shows the peak value measured on electric “S(E)” field strength in far field condition or Electric “E” field
- **S(H) / H-field RMS:** shows the RMS average calculated on magnetic “S(H)” field strength in far field condition or Magnetic “H” field
- **S(H) / H-field peak:** shows the peak value measured on magnetic “S(H)” field strength in far field condition or Magnetic “H” field
- **Battery:** Battery voltage
- **Altitude:** Relative altitude in meters.
- **Temperature:** Temperature in degrees Celsius.
- **RH:** Percentage of relative humidity.
- **Status:** any alarms occurred during the monitoring activity is marked with:
A = Field Level exceeded Alarm;
W = Field Level exceeded Warning;
U = USB cable connected Alarm;
V = Low Battery Alarm;
P = Probe failure Alarm;
T = OverTemperature Alarm;
C = Relative Humidity Alarm;
“-“ means that specific Alarm (or warning) is not armed.

The **Status** column in the text report and the **Alarms** shown on the Main window are independent of each other. Doesn't matter if active or not on **Settings** tab, the AMC will always be able to record any alarm occurred during Logger acquisition.

- **Perturbing:** any data affected by disturbance activity will be marked with:
U = USB cable connected;
UCHARGING = USB cable connected and AMC under charging.
“-“ means that specific Perturbing activity is not armed.

NOTICE

Use of the battery charger is not recommended during measurement, as it may introduce noises that could noticeably affect the readings.

NOTICE

The presence of one of the above marker indicates that the measurement result could have been affected by the related occurrence and the plausibility of the result should be verified.

- **AccelerationX(g):** Gravitational acceleration in hundredths of g for X axis
- **AccelerationY(g):** Gravitational acceleration in hundredths of g for Y axis
- **AccelerationZ(g):** Gravitational acceleration in hundredths of g for Z axis
For Accelerometer axes orientation see §2.7.
- **Speed(km/h):** speed measured during mobile operation
- **Latitude:** North–South position
- **Longitude:** East/West position
- **GPSAltitude(m):** height in meters above mean sea level
- **Compass Heading:** compass heading in degrees and cardinal directions.



Some labels may also change in case of using different probes or configuration.

In the example below, it is shown the .txt file format

LOGGER_EHP-2B-07_03_17_29_20.txt - Blocco note di Windows

File Modifica Formato Visualizza ?

LR01 Serial n.: 000ZW30311
Probe name: EHP-2B-07
Calibration date: 19.06.23
Log type: RMS = 1.00 minutes
Standard: SC6CONTR

Date	Time	S(E)RMS%	S(E)peak%	S(H)RMS%	S(H)peak%	Battery(V)	Altitude(m)	Temperature(C°)	RH(%)	Status	Perturbing
03/08/2023	17.29.30	0.07	1.48	0.06	1.04	3.7	0	27	38	-----	-----
03/08/2023	17.29.35	0.07	0.73	0.06	0.48	3.7	0	27	38	-----	-----
03/08/2023	17.29.40	0.07	0.55	0.06	0.31	3.7	0	27	38	-----	-----
03/08/2023	17.29.45	0.04	1.47	0.02	1.09	3.7	0	27	38	-----	-----
03/08/2023	17.29.50	0.04	0.65	0.02	0.49	3.7	0	27	38	-----	-----
03/08/2023	17.29.56	0.04	0.88	0.02	0.60	3.7	0	27	38	-----	-----
03/08/2023	17.30.00	0.04	1.58	0.02	1.11	3.7	0	27	38	----U---	----UCHARGING-
03/08/2023	17.30.05	0.04	1.14	0.02	0.43	3.7	0	27	38	----U---	----UCHARGING-
03/08/2023	17.30.10	0.08	1.15	0.04	1.07	3.7	0	27	38	----U---	----UCHARGING-
03/08/2023	17.30.15	0.08	1.62	0.04	1.10	3.7	0	27	38	----U---	----UCHARGING-
03/08/2023	17.30.20	0.08	1.23	0.04	1.11	3.7	0	27	38	----U---	----UCHARGING-
03/08/2023	17.30.25	0.08	1.29	0.04	0.60	3.7	0	27	38	-----	-----
03/08/2023	17.30.30	0.08	1.59	0.04	1.11	3.7	0	27	38	-W-----	-----
03/08/2023	17.30.35	0.13	1.50	0.08	1.11	3.7	0	27	38	AW-----	-----
03/08/2023	17.30.40	0.13	1.27	0.08	0.61	3.7	0	27	38	AW-----	-----
03/08/2023	17.30.45	0.13	1.31	0.08	1.11	3.7	0	27	38	-----	-----
03/08/2023	17.30.50	0.13	1.18	0.08	1.06	3.7	0	27	38	-----	-----
03/08/2023	17.30.56	0.13	1.18	0.08	1.11	3.7	0	27	38	-----	-----
03/08/2023	17.31.00	0.17	0.08	0.10	0.06	3.7	0	27	38	AW-----	-----

In the example below, it is shown the .csv file format

LOGGER_EP 33C_31_17_30_19 - Excel

File Home Inserisci Layout di pagina Formule Dati Revisione Visualizza Componenti aggiuntivi Universal Document Converter Che cosa si desidera fare?

Calibri 11 A A Testo a capo Generale Valore non v... Valore valido

	A	B	C	D	E	F	G	H	I	J	K	L
1	LR01 Serial n.:	000ZW30311										
2	Probe name:	EHP-2B-07										
3	Calibration date:	18.11.03										
4	Log type:	AVG = 6.00 minutes										
5												
6	Date	Time	S(E)RMS%	S(E)peak%	S(H)RMS%	S(H)peak%	Battery(V)	Altitude(m)	Temperature(C°)	RH(%)	Status	Perturbing
7												
8	03/08/2023	17.29.30	0.07	1.48	0.06	1.04	3.7	0	27	38	-----	-----
9	03/08/2023	17.29.35	0.07	0.73	0.06	0.48	3.7	0	27	38	-----	-----
10	03/08/2023	17.29.40	0.07	0.55	0.06	0.31	3.7	0	27	38	-----	-----
11	03/08/2023	17.29.45	0.04	1.47	0.02	1.09	3.7	0	27	38	-----	-----
12	03/08/2023	17.29.50	0.04	0.65	0.02	0.49	3.7	0	27	38	-----	-----
13	03/08/2023	17.29.56	0.04	0.88	0.02	0.60	3.7	0	27	38	-----	-----
14	03/08/2023	17.30.00	0.04	1.58	0.02	1.11	3.7	0	27	38	----U---	----UCHARGING-
15	03/08/2023	17.30.05	0.04	1.14	0.02	0.43	3.7	0	27	38	----U---	----UCHARGING-
16	03/08/2023	17.30.10	0.08	1.15	0.04	1.07	3.7	0	27	38	----U---	----UCHARGING-
17	03/08/2023	17.30.15	0.08	1.62	0.04	1.10	3.7	0	27	38	----U---	----UCHARGING-
18	03/08/2023	17.30.20	0.08	1.23	0.04	1.11	3.7	0	27	38	----U---	----UCHARGING-
19	03/08/2023	17.30.25	0.08	1.29	0.04	0.60	3.7	0	27	38	-----	-----
20	03/08/2023	17.30.30	0.08	1.59	0.04	1.11	3.7	0	27	38	-W-----	-----
21	03/08/2023	17.30.35	0.13	1.50	0.08	1.11	3.7	0	27	38	AW-----	-----
22	03/08/2023	17.30.40	0.13	1.27	0.08	0.61	3.7	0	27	38	AW-----	-----
23	03/08/2023	17.30.45	0.13	1.31	0.08	1.11	3.7	0	27	38	-----	-----
24	03/08/2023	17.30.50	0.13	1.18	0.08	1.06	3.7	0	27	38	-----	-----
25	03/08/2023	17.30.56	0.13	1.18	0.08	1.11	3.7	0	27	38	-----	-----
26	03/08/2023	17.31.00	0.17	0.08	0.10	0.06	3.7	0	27	38	AW-----	-----
27												

LOGGER EP 33C_31_17_30_19

Pronto BLOC SCORR

This page has been left blank intentionally


5 – SMARTS AMC Management software

5.1 Introduction


This section provides the information necessary to install and use the SMARTS AMC Management software with the SMARTS AMC Area Monitor Compact.

The SMARTS AMC Management software allows user to manage **the SMARTS AMC Area Monitor Compact** accessible locally (**Local Area Network**) and wherever located in the world (**External network**) simultaneously.

The **Local Area Network** is a direct connection between the AMC and the PC using the wired cable or Wi-Fi through router. All information and data are acquired in real time and stored on own computer.

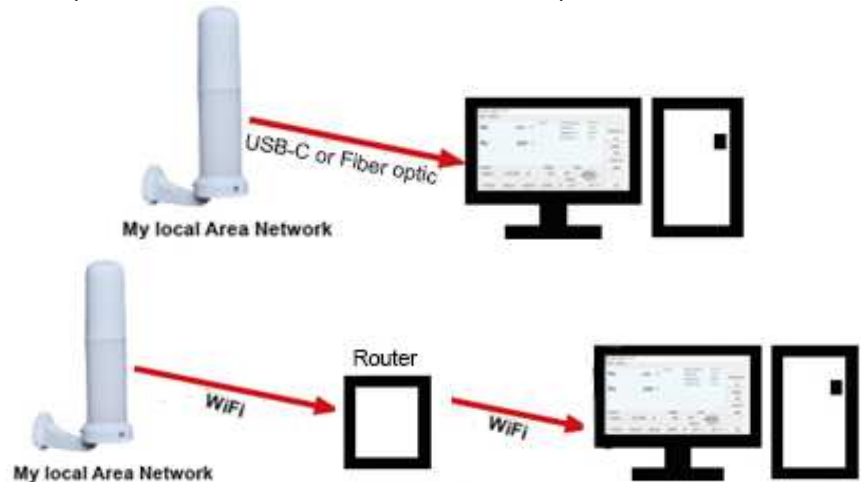

In **External Network** there is no direct connection between the AMC and the PC. The user, wherever located in the world, can perform live measurements and store data with the AMC connected in local net or remotely by cloud. All results of EMF monitoring can be downloaded on own computer or shared publicly and free of charge online (via a web-based solution).

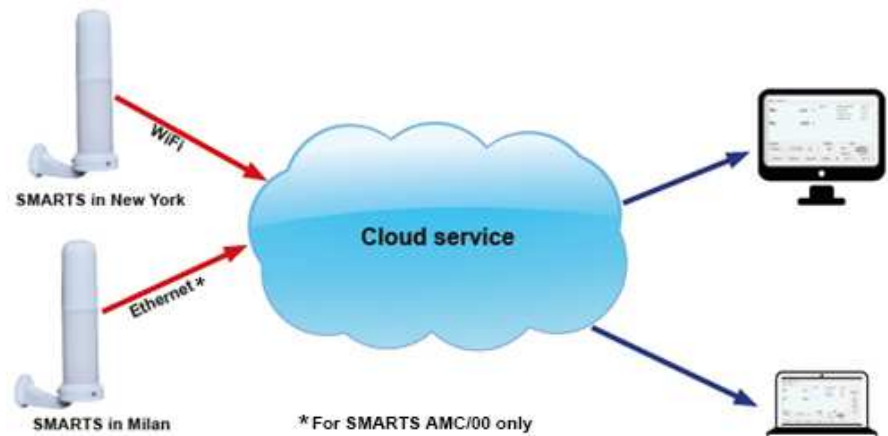

Each records contains measurement result average, peak and their comparison with fixed threshold, address, geographical position and an image of the station for easy identification. Whenever the level exceed the thresholds set, the SMARTS AMC Management software sends an alarm to the control center by e-mail addresses, or by hardware alarm.

5.2 Hardware Requirements

The SMARTS AMC Management software allows to manage up to ten Area Monitor Compact on the Ethernet network and the PC recommended hardware requirements are:

- Processor Core i7
- 8 GB RAM
- 50 GB free space on hard disk;
- Windows Operating system™ Win10 or Win11

Instead, the following minimum Server configuration is needed:

- 32 TB Out + Unlimited In
- 200 GB SSD
- Windows Server 2022 Datacenter

NOTICE

Windows server and database services is required for using Cloud based.

NOTICE

To use the SMARTS AMC Management software, the MySQL Installer release 8.0.39 or higher must be installed on the Personal Computer.



To obtain firmware or program updates for Area Monitor Compact, please contact your NARDA distributor or download it directly from the NARDA Web site <http://www.narda-sts.it>

5.3 Installation and use

Follow instructions below to install and use the SMARTS AMC Management software:

- Install and configure MySQL Installer (see § 5.3.1)
- Install SMARTS AMC Management software (see § 5.3.2)
- Configure Local and Remote Area Network (see § 5.3.3)
- Display and Export data (see § 5.3.4)

5.3.1 MySQL Installation and configuration

To install the MySQL Installer software on PC from the supplied Software Media as follows.





Do not connect the AMC to the PC until the installation is completed.


To install the MySQL Installer software on PC, browse the supplied Software Media in Computer Resources and double click on the **mysql-installer-web-community-8.0.39.0.exe** file to start the installation



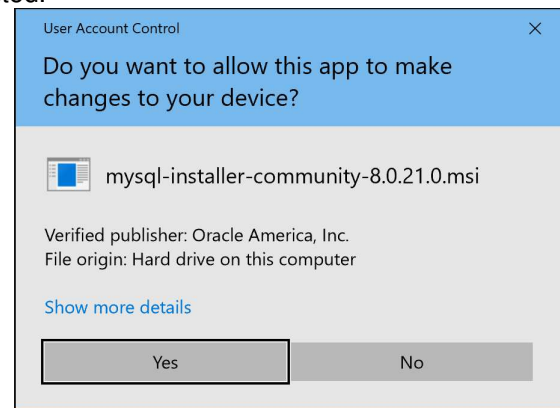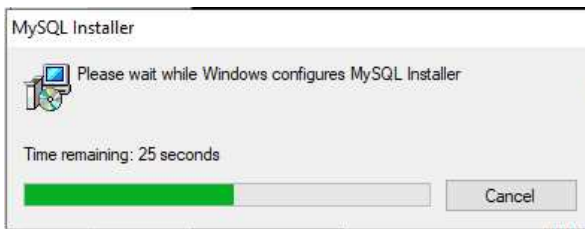


Please wait while Windows configures MySQL Installer (may take a minute) and click **Yes** when requested.

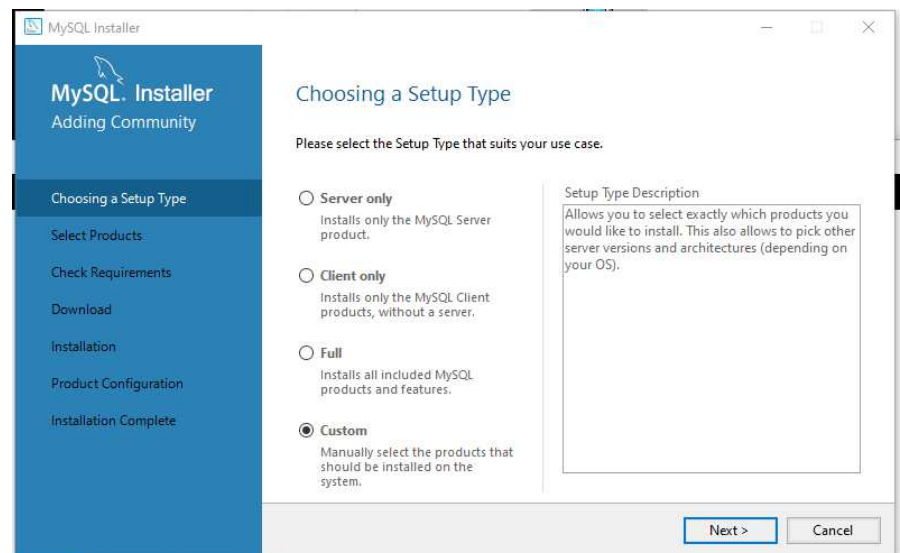


On **Choosing a Setup Type**, select **Custom** and click **Next** to continue:




With  browse on **MySQL Servers** → **MySQL Server** → **MySQL Servers 8.0**, select **MySQL Server 8.0.39-X64**, use the green arrow  to move it on the product to be installed list and click **Next** to proceed.

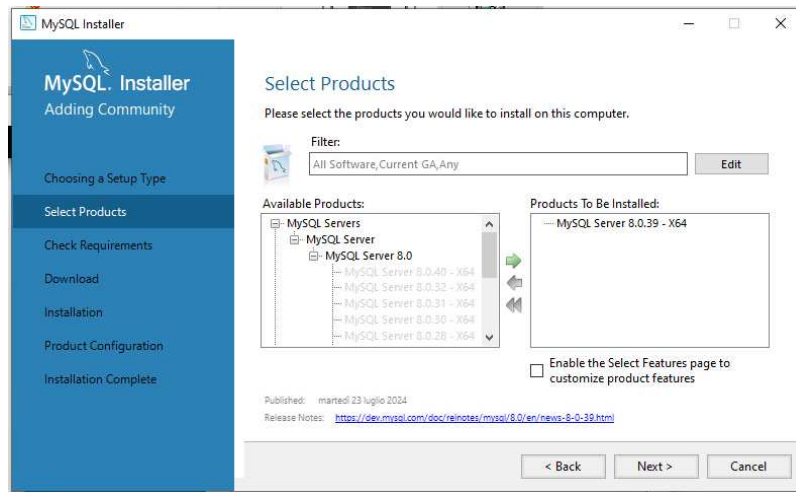


The **Checks requirements** step lists any unmet requirements; Microsoft Visual C++ 2019 is missing on the below example. Select **Execute** to proceed downloading and installing:

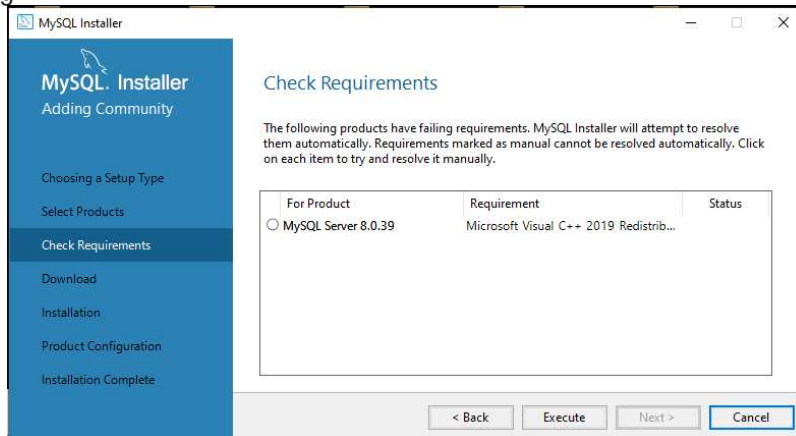


Follow the instructions shown on the screen.

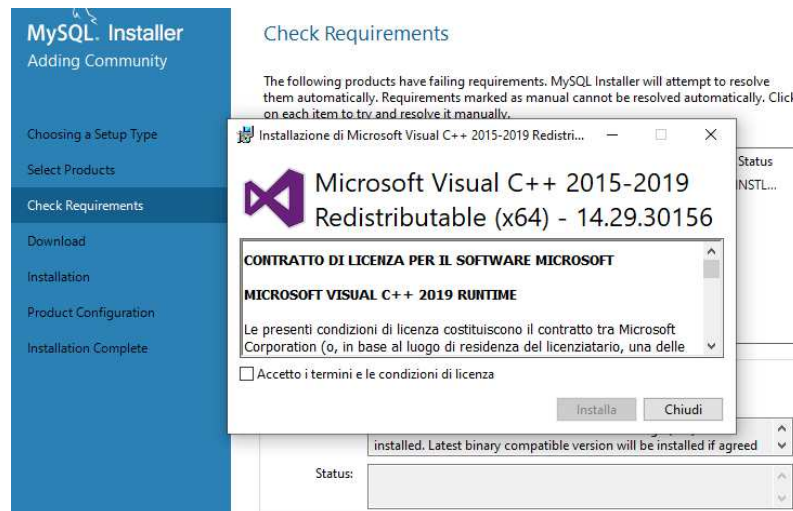


Once the missing requirement is installed, click **Next** to continue.

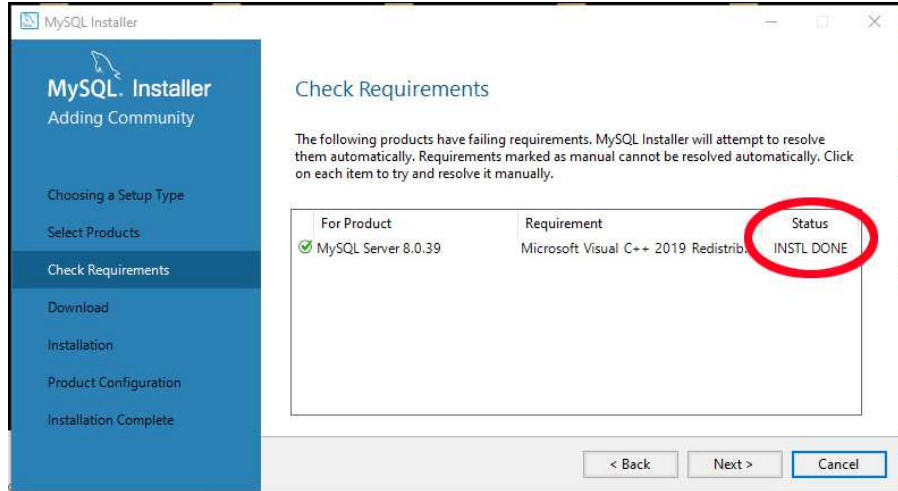


MySQL Server 8.0.39 is ready to download; click **Execute** to proceed.

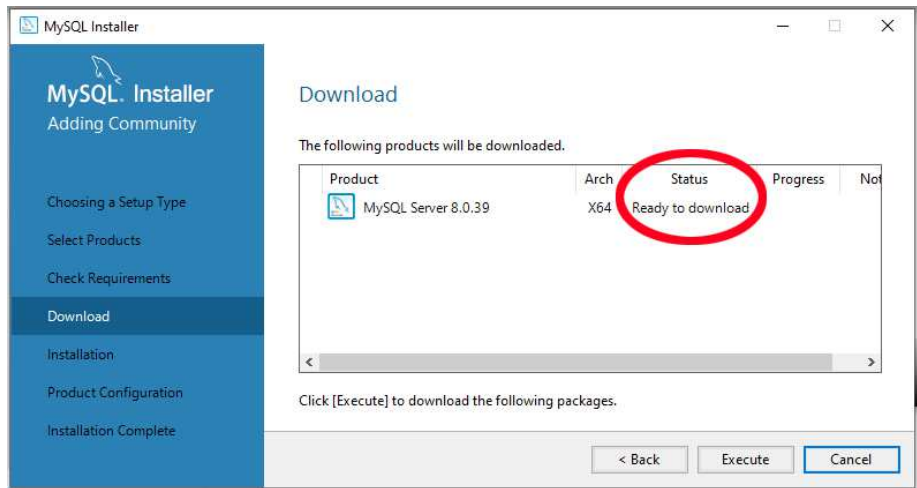


Once the MySQL Server 8.0.39 is downloaded, select **Next** to start installing:

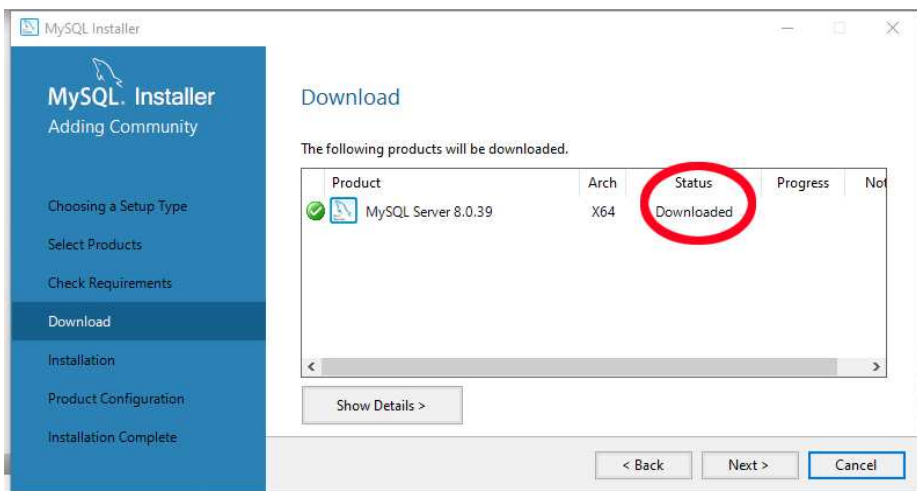


MySQL Server is ready to install; select **Execute** to proceed.

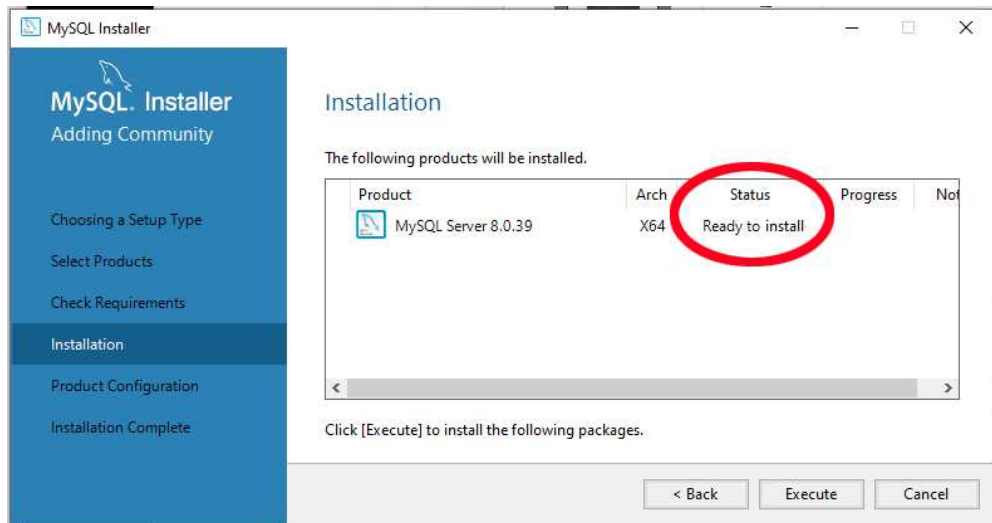


Once the MySQL Server installation is complete, click **Next**.

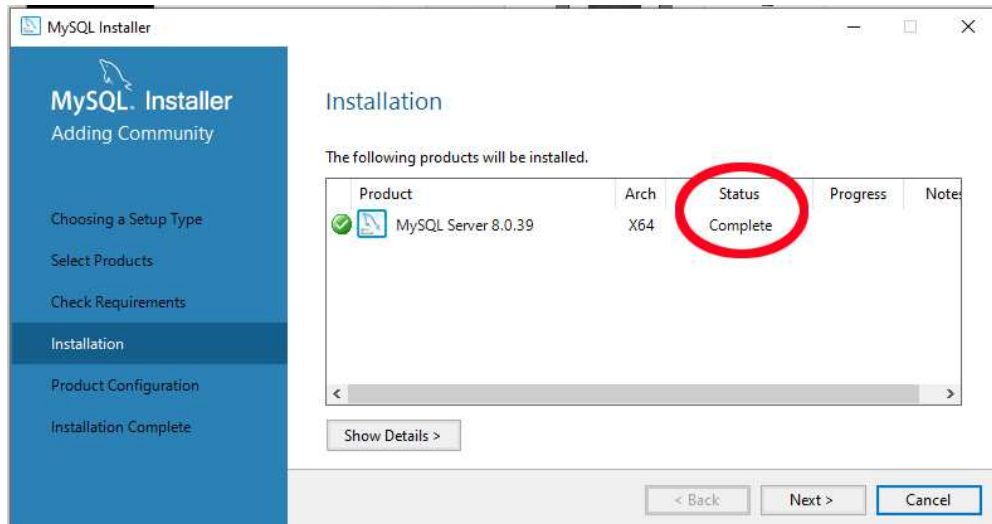


The MySQL is ready to configure, click **Next** again:

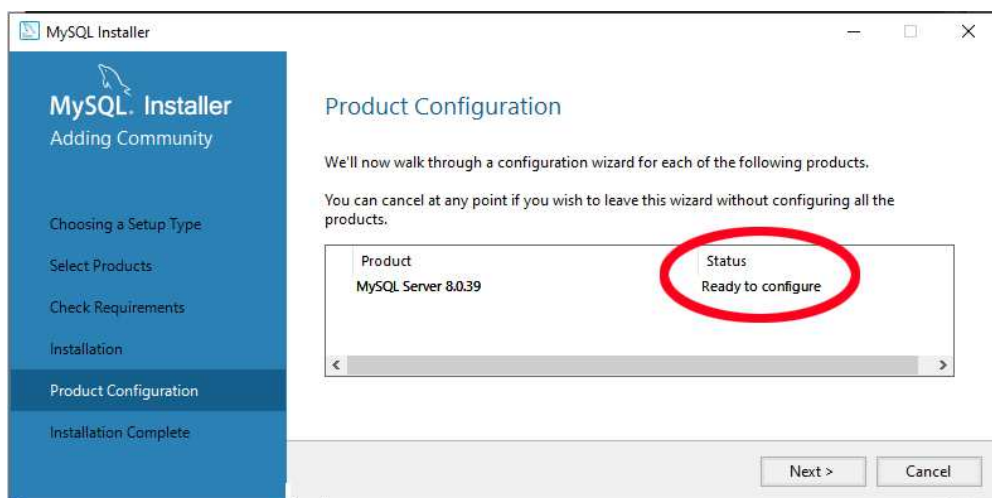

In the **Config Type** menu, choose **Server Computer** and click **Next**

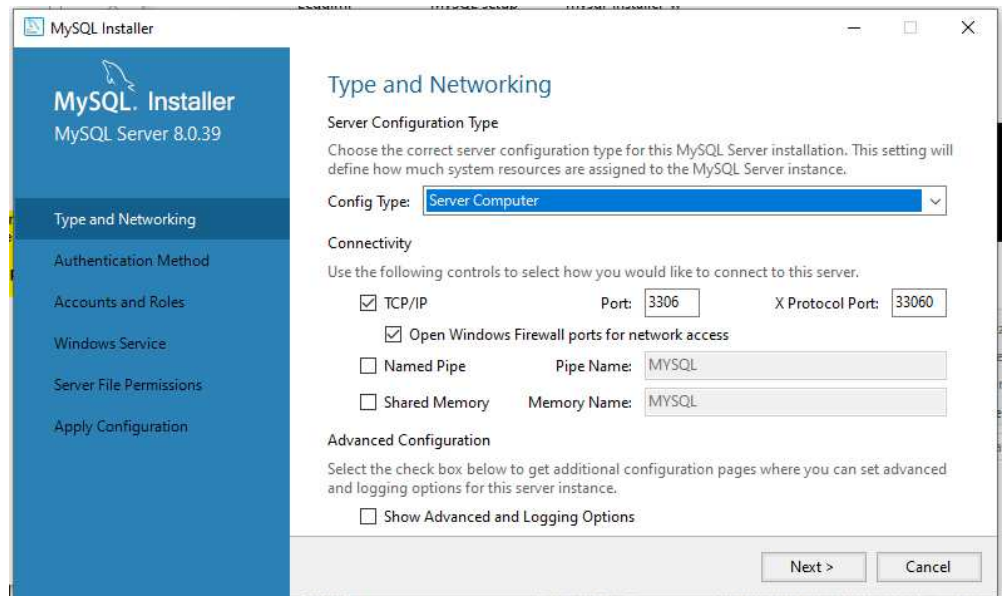

On the **Authentication method**, mark the recommended option and click **Next**:

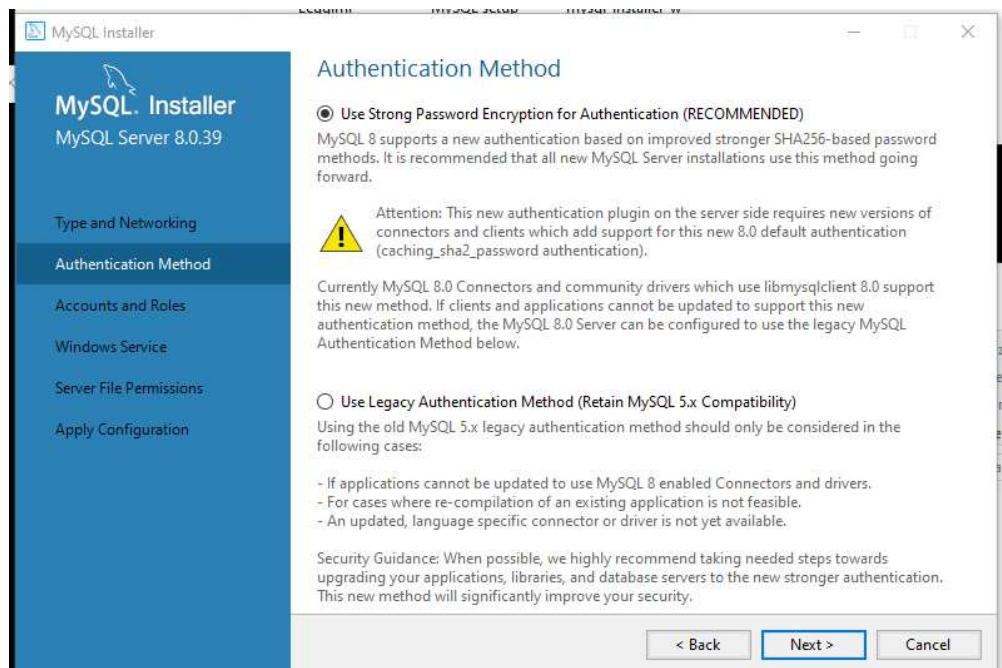


On **Root Account Password**, set the Passwords as follows:


- **MySQL Root Password:** **_N2024!!**
- **Repeat password:** **_N2024!!**

On the **MySQL User Accounts**, select **Add User**; set the user name, password and database role as follows:


- **User Name:** sa
- **Host:** <All Hosts (%)>
- **Role:** DB Admin
- **Authentication:** Mark with MySQL
- **MySQL user Password:** **_N2024!!**
- **Confirm Password:** **_N2024!!**

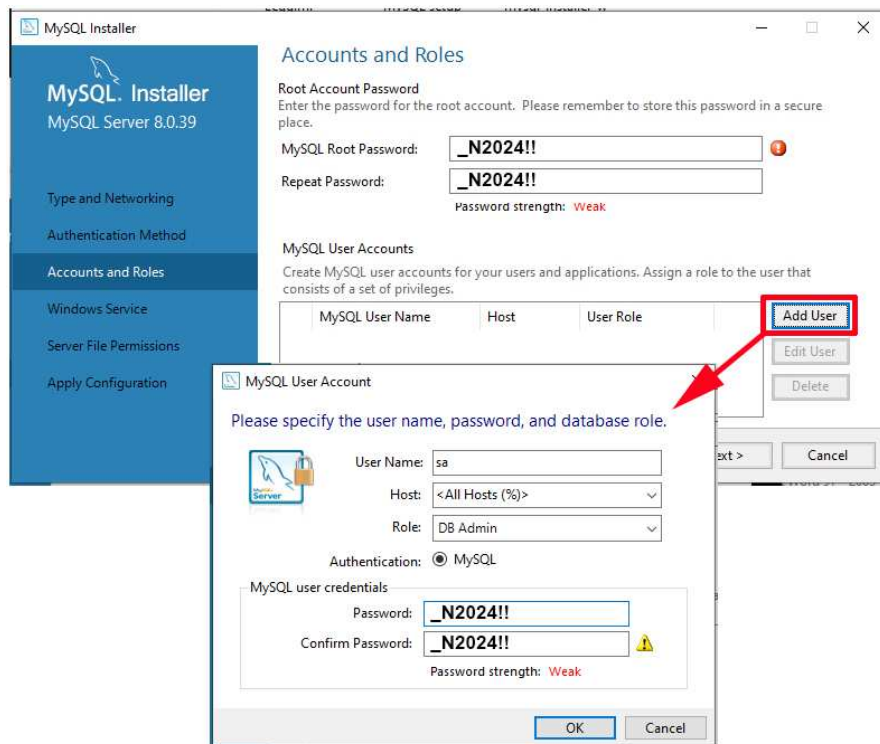


Click **OK** to confirm.

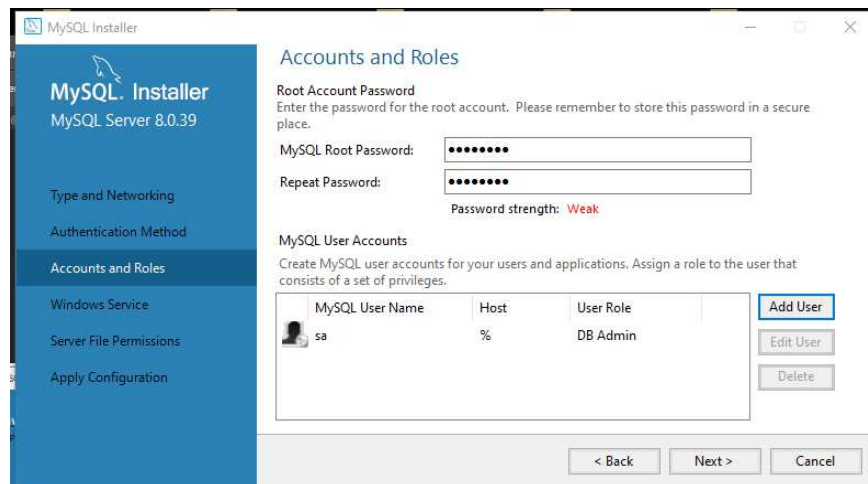


Set the **Windows Service** window as follows and click **Next**:

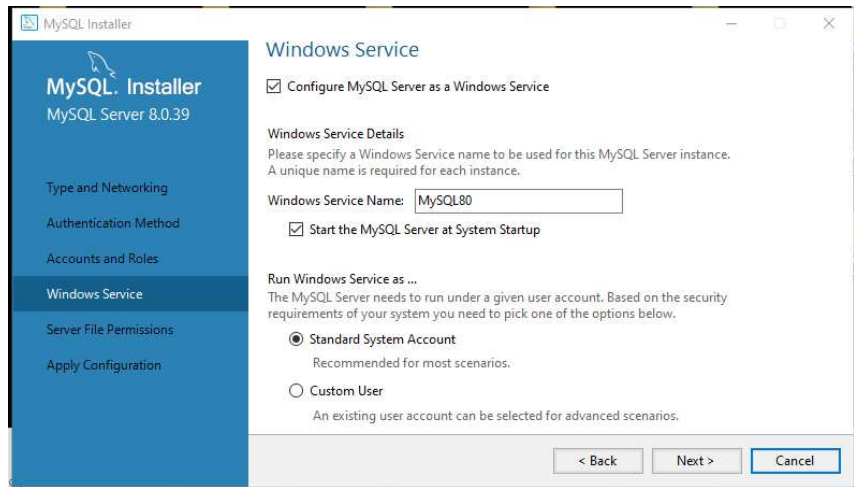


On the **Server File Permissions**, mark with “**Yes, grant full access to the user.....**” and click **Next**

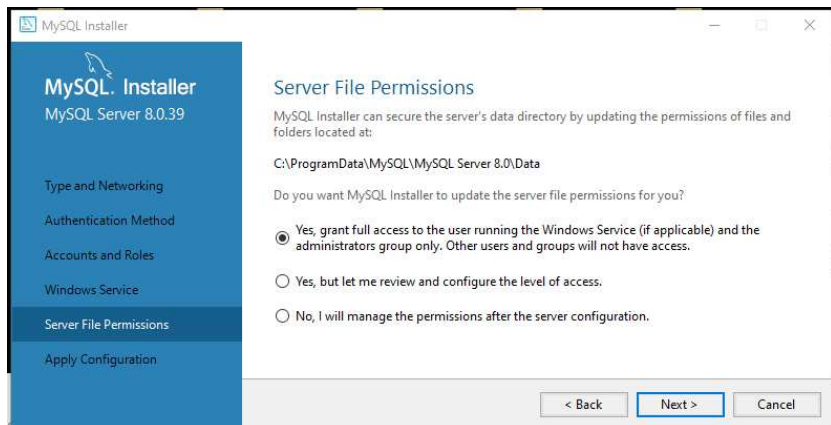


Select **Execute** to execute step by step all the configurations listed on the **Apply Configuration** window (may take a long time).

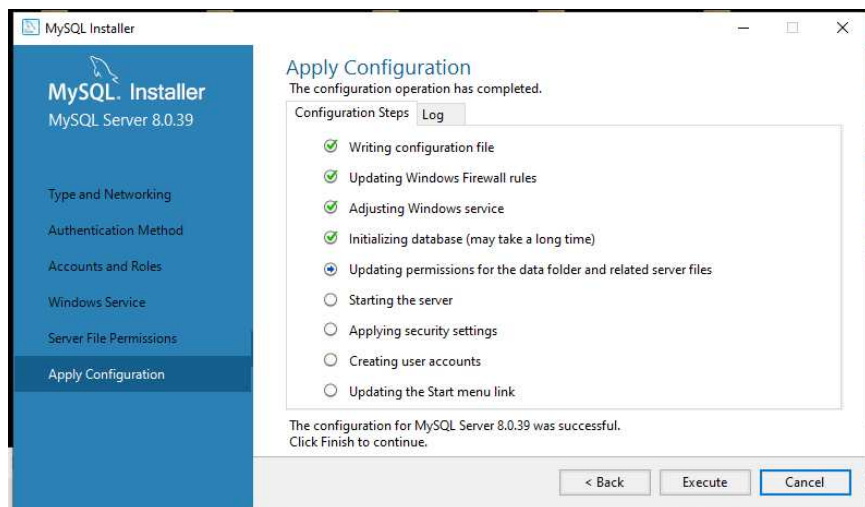


Once all the configuration operation is complete, click **Finish** to continue

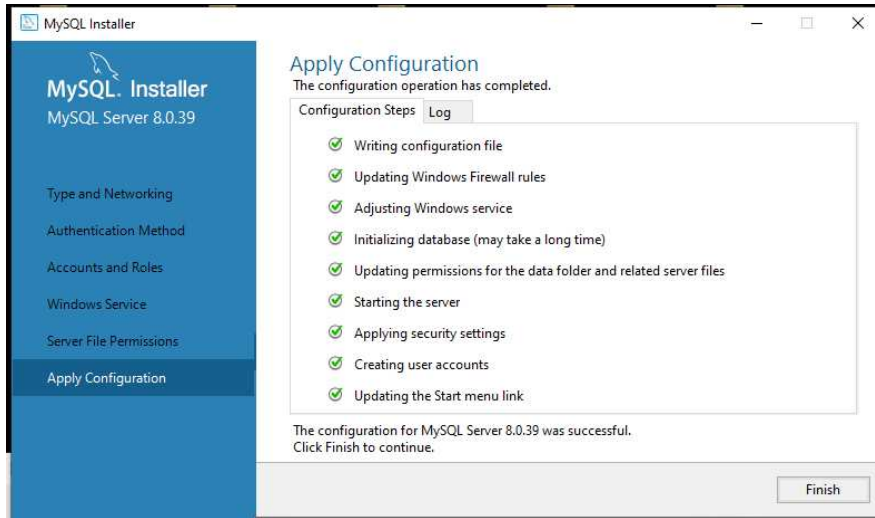

The configuration for MySQL Server is successful complete; click **Next** to confirm

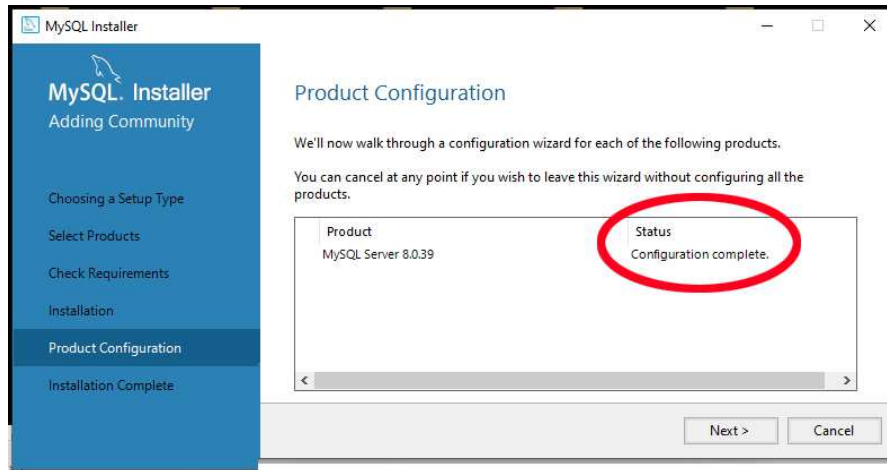

Click **Finish** to close

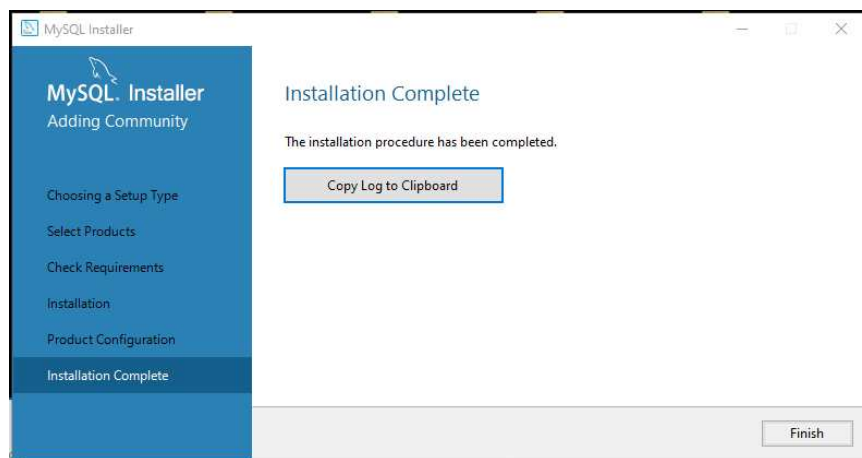

5.3.2 SMARTS AMC Management software Installation



To install the SMARTS AMC Management software on PC from the supplied Software Media as follows.

Do not connect the AMC to the PC until the installation is completed.


Browse the Software Media in Computer Resources and double click on the **SMARTSAMCManagement Setup.exe** file to start the installation. Click **Yes** when requested.




Click **Next** to proceed installing.





The installation can be aborted by clicking **Cancel** button:

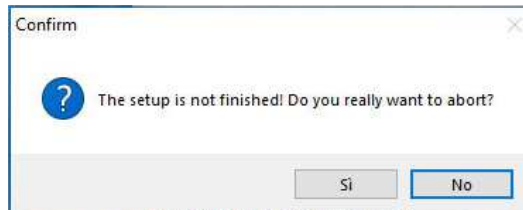


Before pressing **Next** to proceed, make sure to have performed MySQL installation (see §5.3.1 for further information)

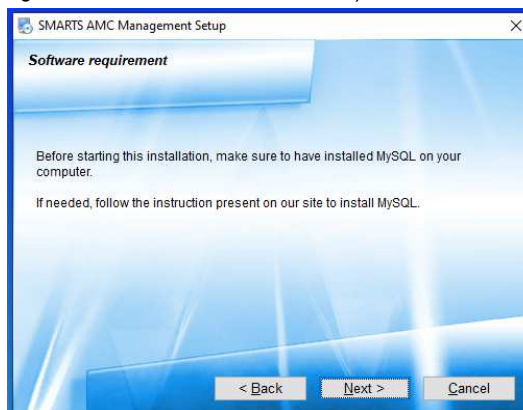


Click **Next** to confirm the default folder or **Change** to modify.

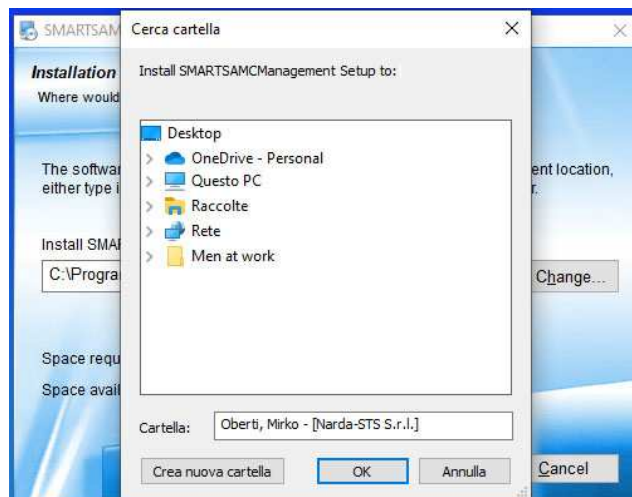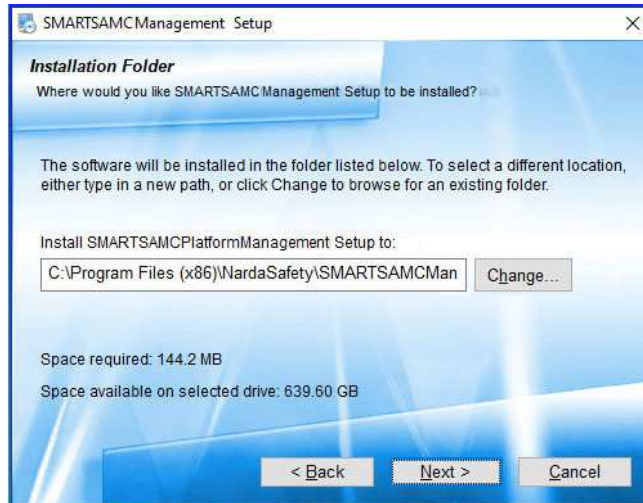


Click **Next** to proceed installing.

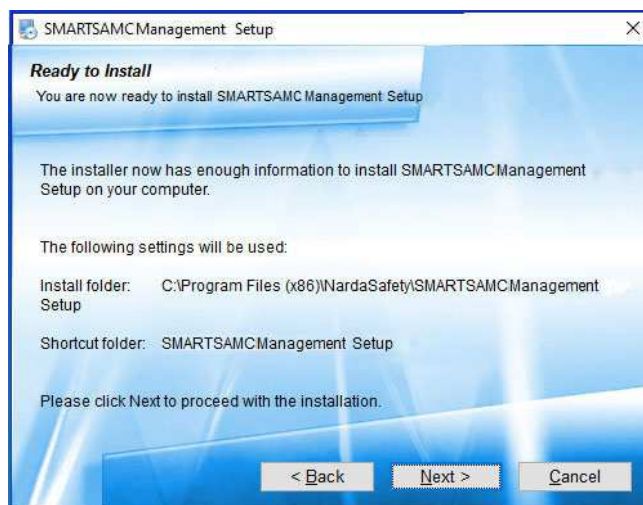

The installing status is displayed then:

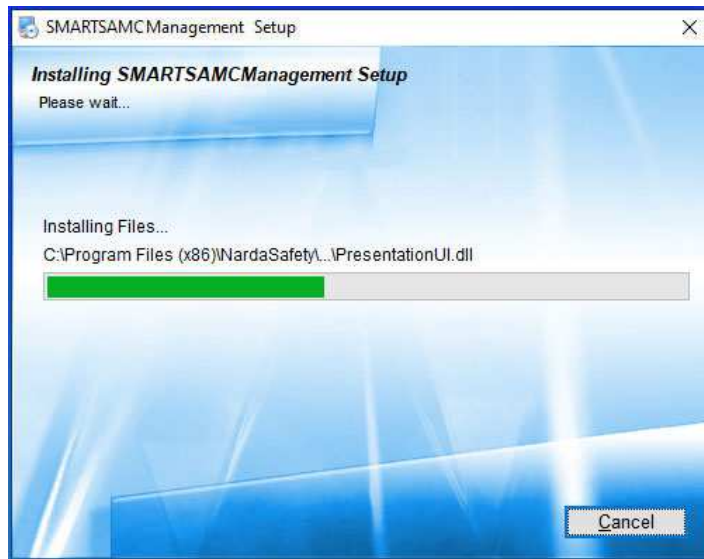


Click **Finish** to complete and exit the installer.
When asked for, reboot your system to complete installation

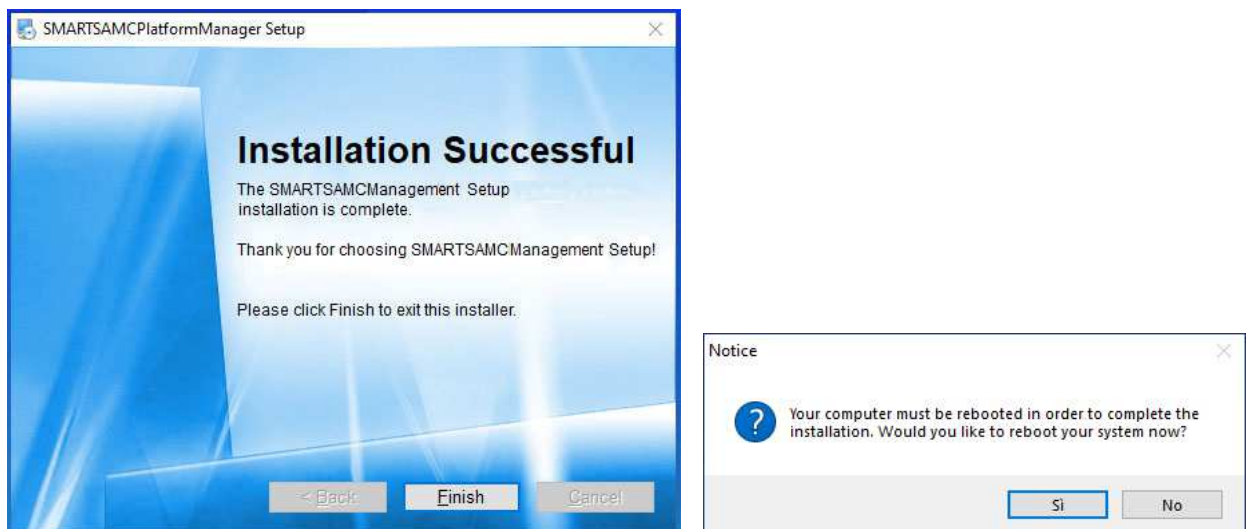

The folder **SMARTSAMCManagement** is created under **Programs\Narda Safety** with **SMARTS AMC Management** executable.

Another item **SMARTSAMCManagement** is created in the Programs list at Start Menu where the **AMC Management** program must be run from.

The **SMARTS AMC Management** icon will be available on desktop

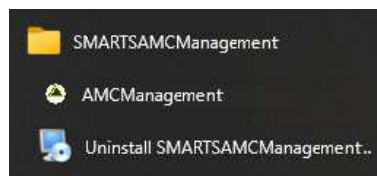

5.3.3 SMARTS AMC Management

To run the software click on the **SMARTS AMC Management** icon on desktop.



The software is able to manage the AMC via an optical connection (fiber optic), via a wired connection (USB or Ethernet) and via Wi-Fi connection.




If Area Monitor Compact is not supplied by USB-C cable or PoE Injector, the unit automatically turns OFF when after 30 min. the fiber optic/Ethernet has been disconnected or the communication with PC is not established.



The AMC cannot be connected to PC via Bluetooth. The BLE connection is available only for mobile device through the LR-01 Manager App; for further information, see chapter 8 and 9.

NOTICE


The SMARTS AMC Management software allow to manage maximum five Area Monitor Compact on the Area Network

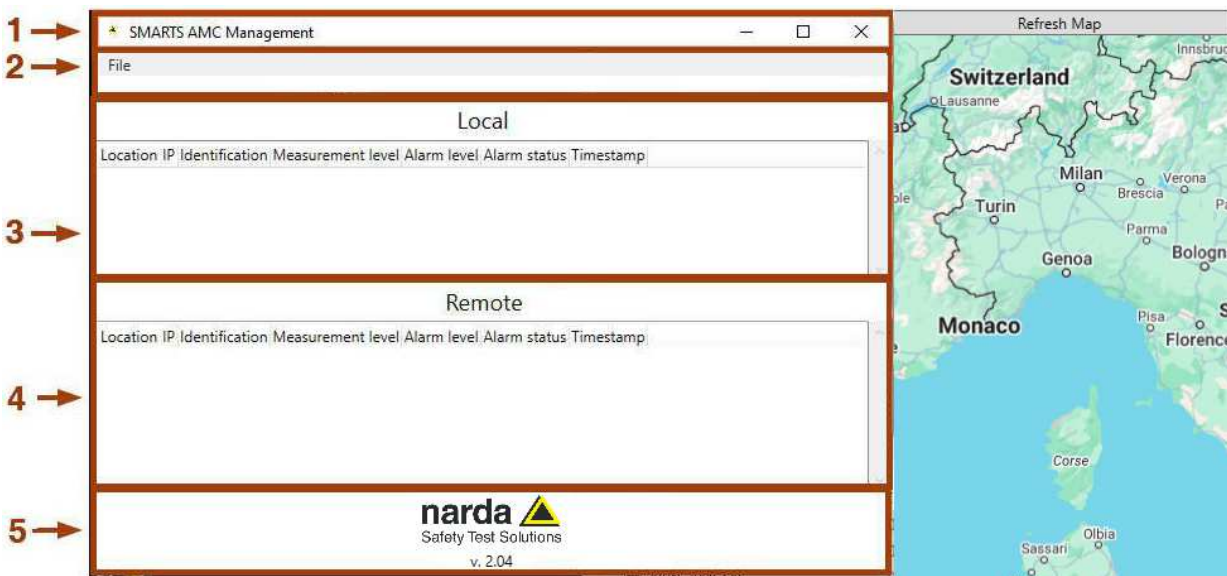


Commands description:

1. Title bar
2. Menu File: Add station and Settings
3. Local Area Network main window
4. Remote Area Network (External) main window
5. Manufacturer information and release software
6. Map

On Menu **File**, select **Settings**; the Password window will appear:

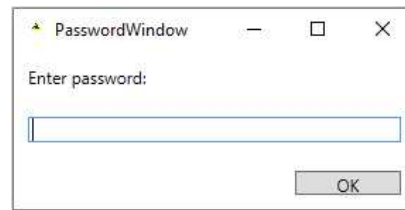

Every time the User have to modify a field, the **Settings Password** is requested by the software. As default it is leave empty and for the first setting operations simply press **OK** button to open the following settings window:

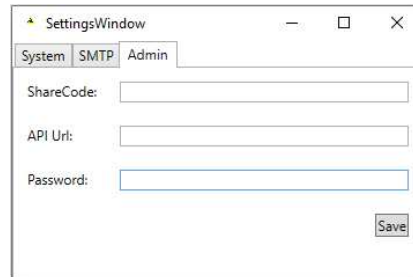


Admin section

On **Admin** section, enter the **ShareCode**; the User assign a name to his SMARTS AMC network.

On the **API Url** field the User enter the Server address that manage the network.

As mentioned above the **Password** will be asked every time the User open the **Settings** menu. Set a password only after the network and area monitors will be correctly set, and just in case you need to have an higher security level.

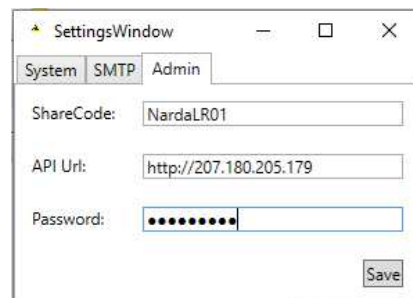

NOTICE

We recommend to take note of the Settings password entered

NOTICE

To try Narda Area Monitor Compact and setup a first working setup, we can provide you on our private server <http://207.180.205.179> . However, for a future actual installation, you will need to arrange your own Server.

SMTP section

The **SMTP** section determines which SMTP Server manage the message(s) to notify alarm condition and who will be able to send email to the address destination.




- **SMTP Server:** SMTP Server IP address
- **SMTP Port:** SMTP Server Port
- **User Name** and **User Password** of the email account.
- **Sender Address:** It is the “From” address used to send emails.
- **Recipient(s) Address:** the mailing address of the intended recipient.

Press **Save** button to store the value

System section

On the **System** section the User set how often the data (Measurement level, Battery, etc.) of each SMARTS AMC connected to the network will be updated; it is expressed in seconds.




Press **Save** button to store the value.

Add station

When the Admin, SMTP and System settings are complete, the User can add the SMARTS AMC to the network simply clicking on **File** menu → **Add LR**


Enter the IP address and the Port assigned to the Area Monitor Compact in the following format: **IP Address:Port**

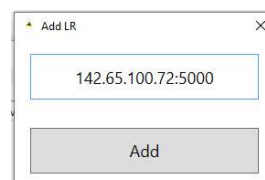


NOTICE

The SMARTS AMC/00 has a configurable port by ETH Tools (default 5000); in addition, the Area Monitor Compact keeps open the port 50001 to communicate with the chip by ethernet configuration software.

Local Area Network

Once the link has been successfully established, the SMARTS AMC is displayed on the **Local Area Network** main window and on the Map with the  symbol.

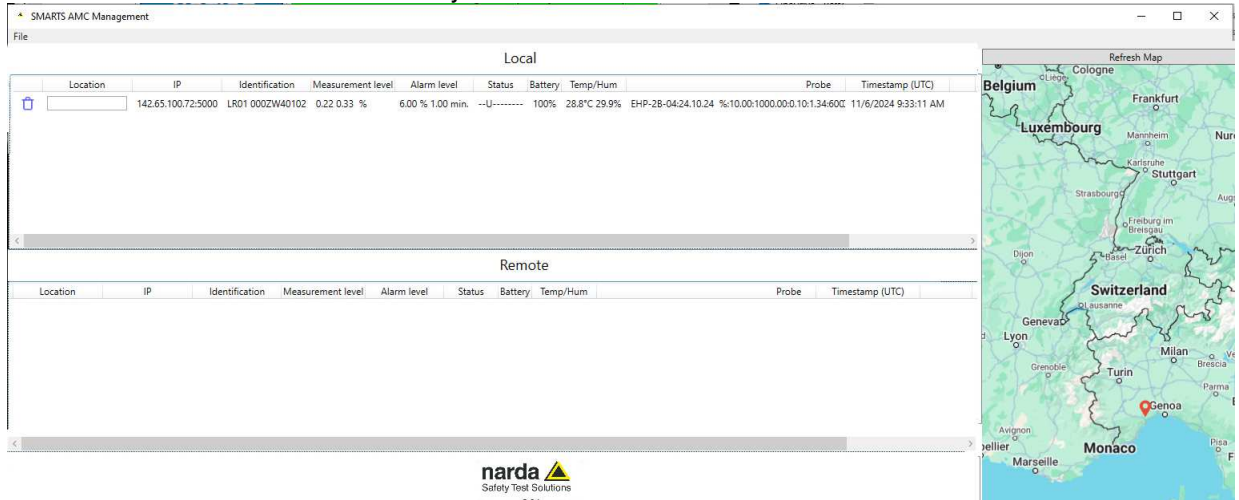


Set the SMARTS AMC name clicking on the **Location** field




Scroll up/down the mouse wheel for zoom operation or keep pressing the left button to move around the Map.

Select **Refresh Map** button on the top of the map to return to the default zoom setting.

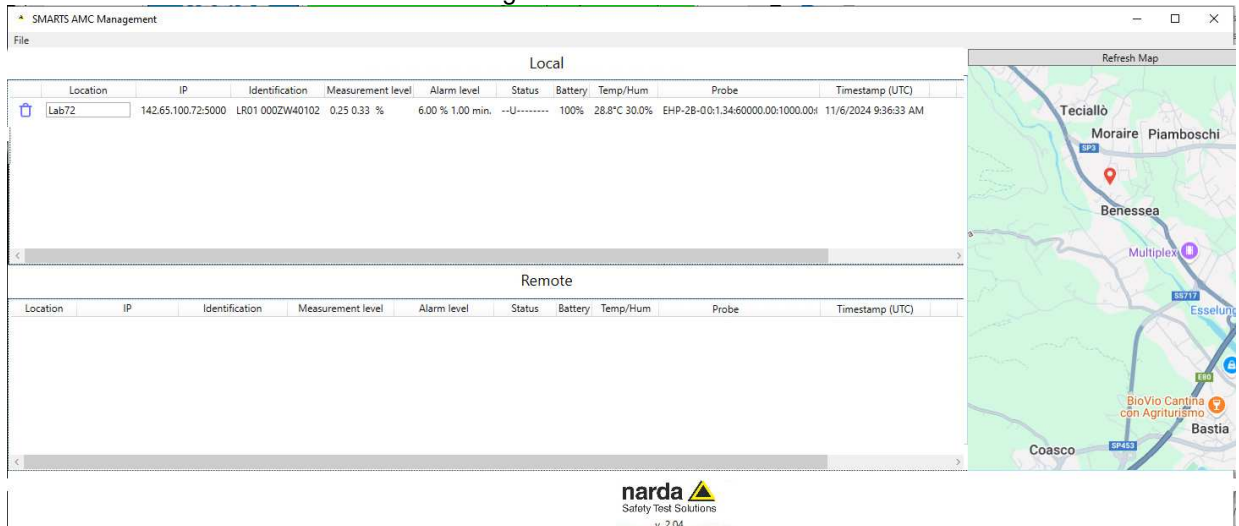


The Location name (if entered), IP address and Port assigned are displayed clicking with left mouse button the  symbol on the Map

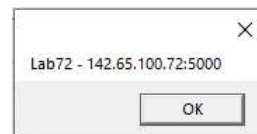

Location	IP	Identification	Measurement level	Alarm level	Status	Battery	Temp/Hum	Probe	Timestamp (UTC)
Lab72	142.65.100.72:5000	LR01 000ZW40102	0.25 0.33 %	6.00 % 1.00 min.	--U-----	100%	28.8°C 30.0%	EHP-2B-00:1.34:60000.00	11/6/2024 9:36:33 AM

Descriptions:

- : To remove a AMC from the list;
- **Location:** SMARTS AMC name;
- **IP:** IP address and Port assigned to the SMARTS AMC;
- **Identification:** Model and Serial Number;
- **Measurement level:** Instantaneous or averaged field level measured;
- **Alarm level:** Field level threshold for alarm notification and time period;

- **Status:** Any alarms occurred during the monitoring activity is marked with:
A = Field Level exceeded Alarm;
W = Field Level exceeded Warning;
U = USB cable connected Alarm;
V = Low Battery Alarm;
P = Probe failure Alarm;
T = OverTemperature Alarm;
C = Relative Humidity Alarm;
 “-“ means that specific Alarm (or warning) is not armed;
- **Battery:** the residual battery autonomy;
- **Temp/Hum:** temperature in degrees/ percentage of relative humidity;
- **Probe:** Probe type, calibration data, Field level and frequency correction;
- **Timestamp (UTC):** The date and time of the last measurement acquired;

NOTICE

The presence of one of the above marker indicates that the measurement result could have been affected by the related occurrence and the plausibility of the result should be verified.

- **Alarm:** The status of alarms relative to latest link, in the last column, is normally empty if there are no alarms. Otherwise, a sirene is displayed and the corresponding row is shown in red (Probe failure as example below)

Location	IP	Identification	Measurement level	Alarm level	Status	Battery	Temp/Hum	Probe	Timestamp (UTC)
Lab72	142.65.100.72:5000	LR01 000ZW40102	0.09 0.07 %	6.00 % 1.00 min.	--U-P-----	100%	29.0°C 30.2%	EHP-2B-04:24:10.24 %:10.00:100	11/6/2024 9:48:26 AM 


Whenever an alarm occurs, if SMTP server is set a notify alarm email with “SMARTS AMC Management Sw alarm” subject is sent to the intended recipient.


From: smarts.rs@pmm.it <smarts.rs@pmm.it>
Sent: Tuesday, 5 november 2024 13:19
To: User - [Narda-STS S.r.l.] <User@narda-sts.it>
Subject: SMARTS AMC Management Sw alarm

End point: 142.65.100.72:5000 Alarm Status: --U-P-----

Remote Area Network

SMARTS AMC managed by different operator and connected to the network with the same ShareCode and API Url will be display on the **Remote Area Network** main window.

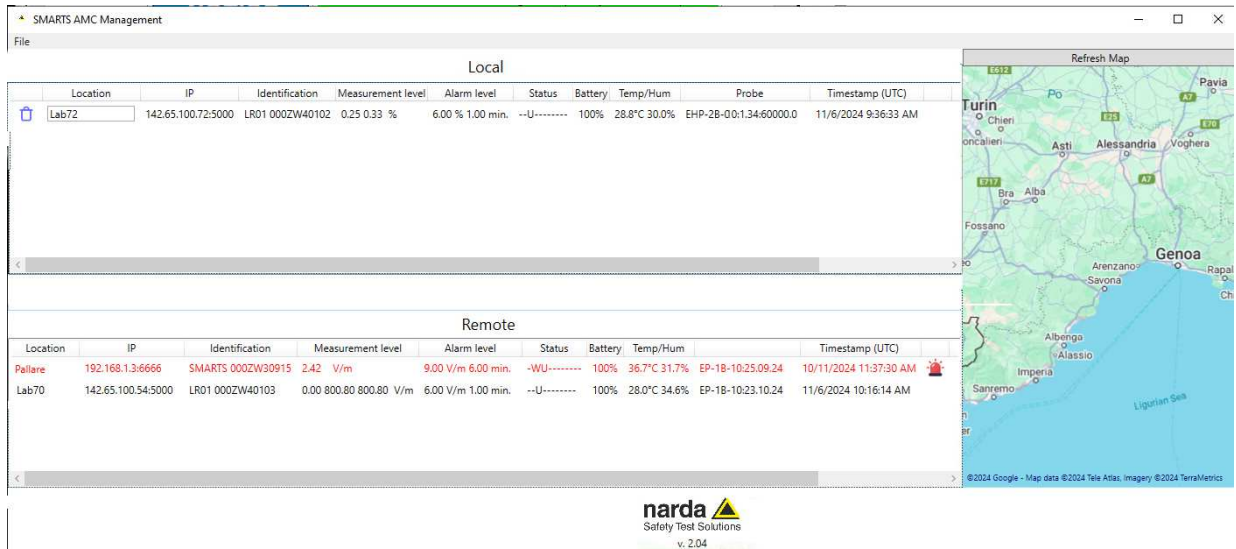


In case of the operator needs to manage a SMARTS AMC listed on your Local Area Network, just click on  delete button to cancel the AMC from the list and provide him the same ShareCode name and API Url.

Settings and Calendar

The SMARTS AMC on the Local and Remote Area Network can be queried by double mouse clicking; the following **Device Details** window will appear:



The User can display and modify the settings of the Area Monitor Compact present in Local Area Network only.

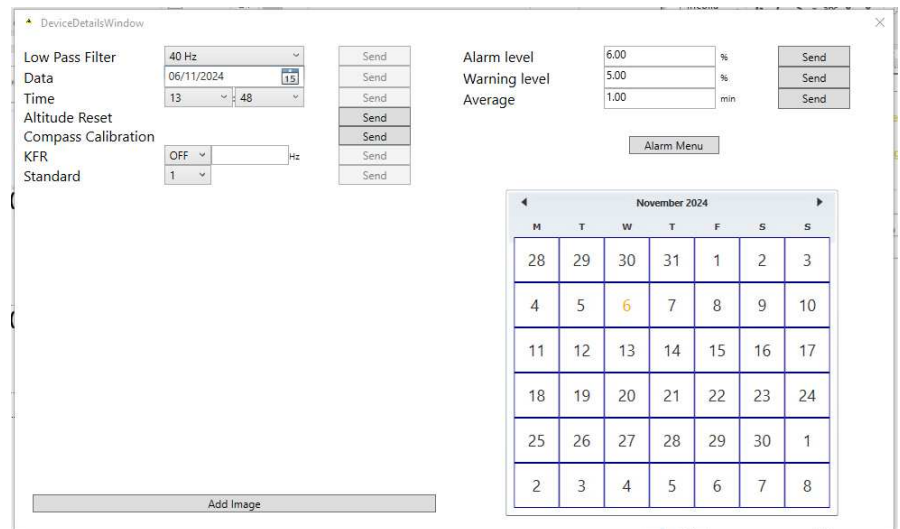


The data are automatically called up by the program on the basis of the day chosen in the **Calendar** tool.

The **Add Image** button allows to upload a photo (.png, .jpg, .jpeg format) of the site monitored.



These are the basic operations to follow to work with the SMARTS AMC Management software. All additional information and explanations can be found on chapter 4.

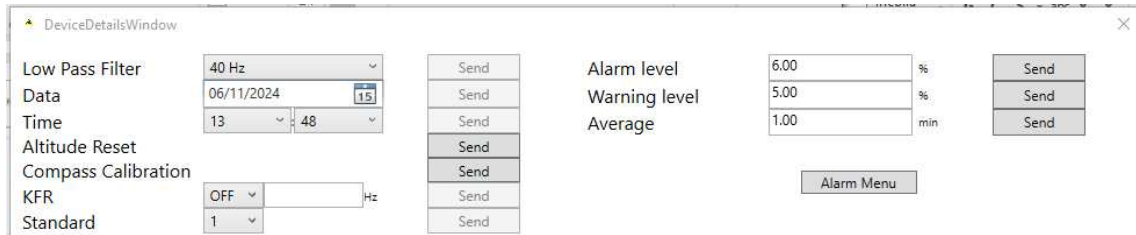

Device Details window allows to:

- Set the **Low Pass Filter** for fast readings
- Set the AMC internal clock with the **Date** and **Time** of the PC.
- Set to zero the internal **Altitude** reference.
- Calibrate the internal **Compass Calibration** for more accuracy.
- Recall the **Frequency correction factor (KFR)** (in Hz) or OFF
- **Standard**: Load a default standard limit saved into the EHP-2B probe memory at the factory. The limit list depends on the EHP-2B model probe connected, as follows:
 - EHP-2B-05 and EHP-2B-06 Standard limit list:
 - 1 → ICNIRP 1998 Occupational;
 - 2 → ICNIRP 1998 General Public;
 - 3 → SC6 2015 Controlled;
 - 4 → SC6 2015 Uncontrolled.
 - EHP-2B-07 and EHP-2B-08 Standard limit list:
 - 1 → ICNIRP 2020 Occupational;
 - 2 → ICNIRP 2020 General Public;
 - 3 → FCC-96 326 Occupational;
 - 4 → FCC-96 326 General Public.



The **Standard** function is enable only when an EHP-2B model probe is connected to the AMC.

- **Warning Level**: set the field level threshold for Warning notification.
- **Alarm Level**: set the field level threshold for Alarm notification
- **Average**: set Time period on which the averaged field will be calculated
- **Alarm menu** button to select which alarms and device(s) should be active

The new settings can be saved pressing the corresponding **Send** button; once the value is stored, the button is disable.

Select  button to return to the Main window.


Display and Export measurements

By selecting a day shown in orange in the **Calendar** tool, the window presents the data in a graphical form.


Scroll up/down the mouse wheel for zoom in/out operation or keep pressing the left button to move around the graph or keep pressing the mouse wheel and release to zoom a specific area.

Using the check box on the right (✓) the user can show the field and/or Alarms.

In the example below, it is possible to notice the vertical red band indicating any Alarm occur.

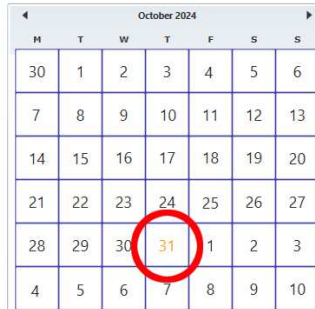


M	T	W	T	F	S	S
30	1	2	3	4	5	6
7	8	9	10	11	12	13
14	15	16	17	18	19	20
21	22	23	24	25	26	27
28	29	30	31	1	2	3
4	5	6	7	8	9	10

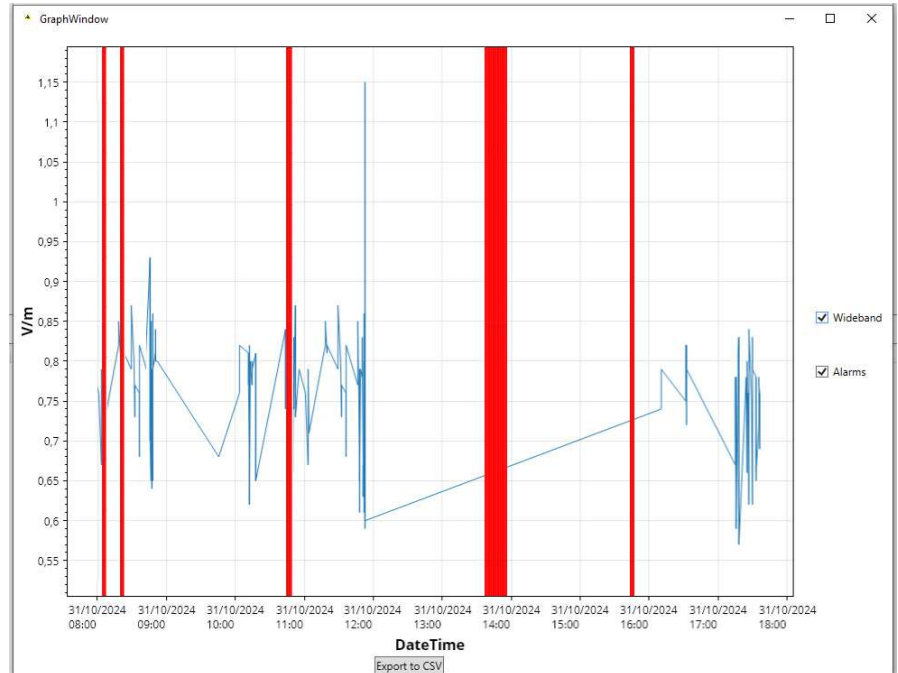


Export to CSV

The **Export to CSV** button is located on the bottom of the graph and save measurements in .CSV format

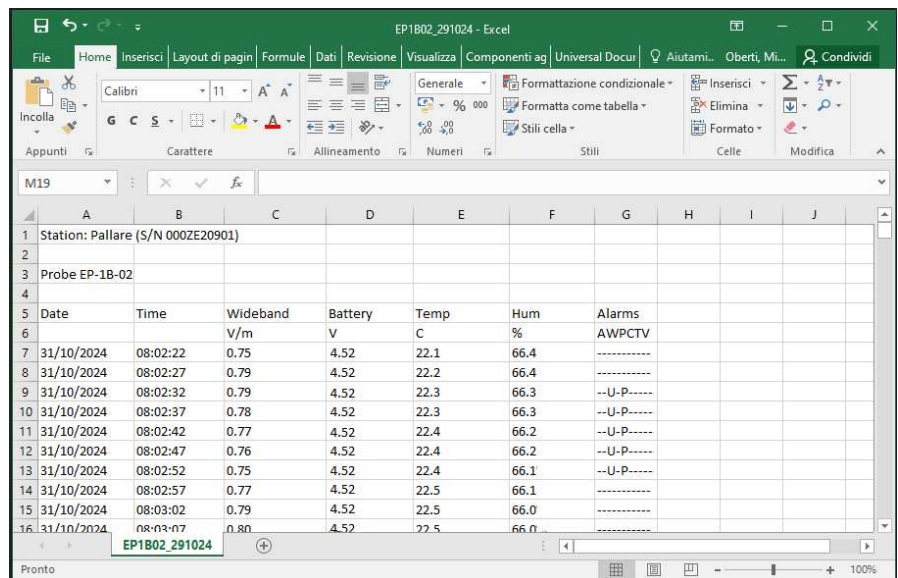


The screenshot shows an Excel spreadsheet with the following data:

Date	Time	Wideband	Battery	Temp	Hum	Alarms
31/10/2024	08:02:22	0.75	4.52	22.1	66.4	AWPCTV
31/10/2024	08:02:27	0.79	4.52	22.2	66.4	-----
31/10/2024	08:02:32	0.79	4.52	22.3	66.3	--U-P----
31/10/2024	08:02:37	0.78	4.52	22.3	66.3	--U-P----
31/10/2024	08:02:42	0.77	4.52	22.4	66.2	--U-P----
31/10/2024	08:02:47	0.76	4.52	22.4	66.2	--U-P----
31/10/2024	08:02:52	0.75	4.52	22.4	66.1	--U-P----
31/10/2024	08:02:57	0.77	4.52	22.5	66.1	-----
31/10/2024	08:03:02	0.79	4.52	22.5	66.0	-----
31/10/2024	08:03:07	0.80	4.52	22.5	66.0	-----

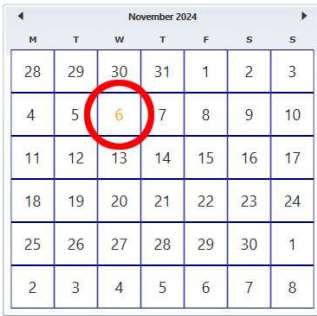

In case of using DualBand Electric and Magnetic probe, both field can be included in the same graph (in this example any Alarm occur is shown with vertical violet bar)

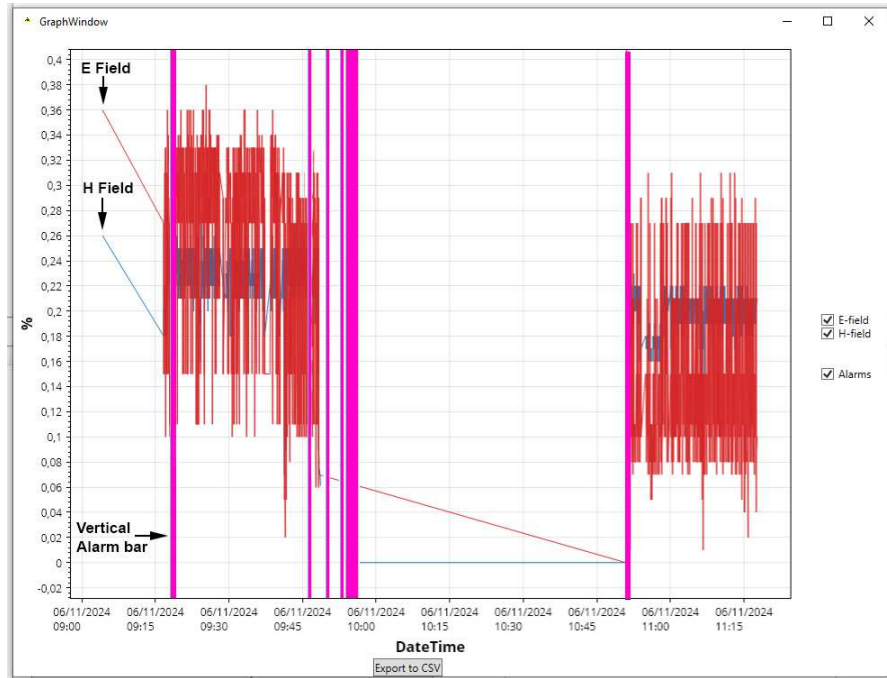

Export to CSV

The **Export to CSV** button is located on the bottom of the graph and save measurements in .CSV format

Date	Time	E-field	H-field	Battery	Temp	Hum	Alarms
06/11/2024	09:04:18	0.26	0.36	4.52	28.7	66.4	--U-----
06/11/2024	09:16:50	0.18	0.27	4.52	28.7	66.4	--U-P-----
06/11/2024	09:16:50	0.18	0.27	4.52	28.7	66.4	--U-P-----
06/11/2024	09:16:51	0.18	0.27	4.52	28.7	66.4	--U-P-----
06/11/2024	09:16:52	0.18	0.27	4.52	28.7	66.4	--U-P-----
06/11/2024	09:16:53	0.20	0.15	4.52	28.7	66.4	--U-P-----
06/11/2024	09:16:54	0.22	0.15	4.52	28.7	66.4	--U-----
06/11/2024	09:16:54	0.22	0.15	4.52	28.7	66.4	--U-----
06/11/2024	09:16:56	0.19	0.31	4.52	28.7	66.4	--U-----
06/11/2024	09:16:57	0.19	0.27	4.52	28.7	66.4	--U-----
06/11/2024	09:16:58	0.21	0.21	4.52	28.7	66.4	--U-----

6 – Update Firmware

6.1 Update Firmware

This section provides the information necessary to update the AMC firmware.

It is important to update the AMC firmware in order to use all the new functions added and eliminate any bugs in the software.



To obtain firmware or program updates for AMC, please contact your NARDA distributor or download it directly from the NARDA Web site <http://www.narda-sts.it>

The AMC cannot be update via USB wired or Wireless connection.

To update the AMC firmware proceed as follows:

- Connect the AMC to PC via Fiber Optic connection (through USB-OC).
- Turn off the AMC
- Click the **LR-01UP** icon on desktop.




Alternatively **Start → All Programs → Narda Safety → LR-01 Update Firmware**




- This window is displayed. Pressing the **USB-OC** button, the LR-01UP utility automatically detects the COM port to which AMC is connected.




- Once selected the **USB-OC** button, make sure the AMC has enough battery level to perform the Update Firmware and proceed with **Yes**.

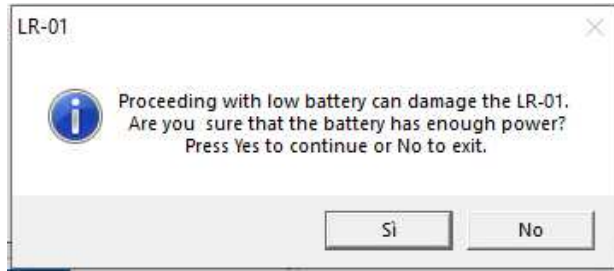

- A message will inform to turn the AMC off. Press **OK** to confirm.

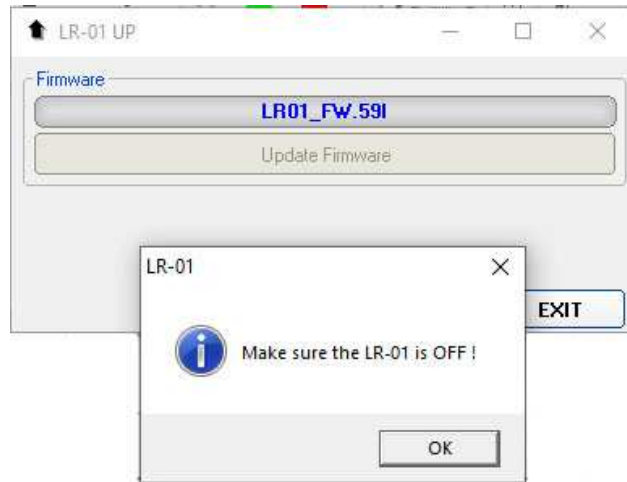


- Then switch the AMC on, check the data and big led status and press **OK** to continue.

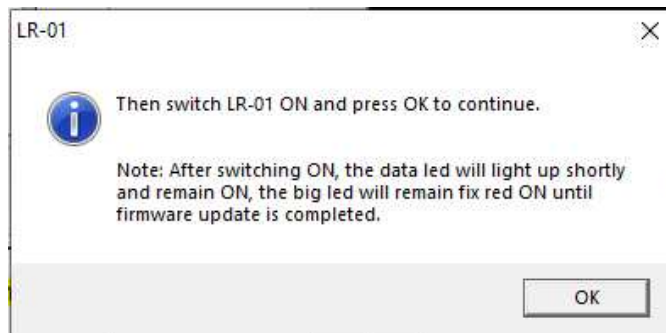

- A window is displayed. Click on **Update Firmware** button to proceed.



Once a link has been established, a colored progress bar indicating the process.

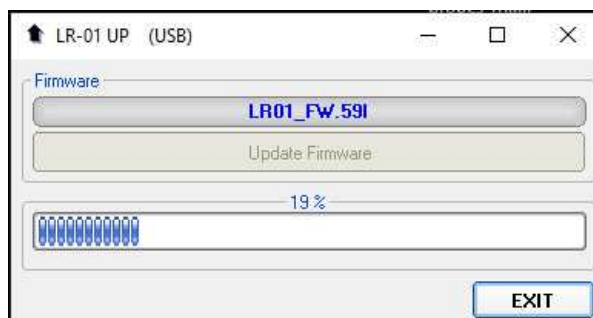

At the end of the process, the following message will appear. Turn the LR-01 off, press **OK** and turn it on again.



The new firmware release can be displayed in the Probe Manager software (see chapter 4).

This page has been left blank intentionally

7 – Uninstalling driver and software


7.1 Uninstalling driver for the USB-OC for the USB-OC

It is possible to remove the USB-OC driver from the PC according to the following procedure:


Open the Windows Control Panel.




The following procedure shows how to remove the driver in Windows 10 and Windows 11 environment. It may be different depending on the operating system in use.

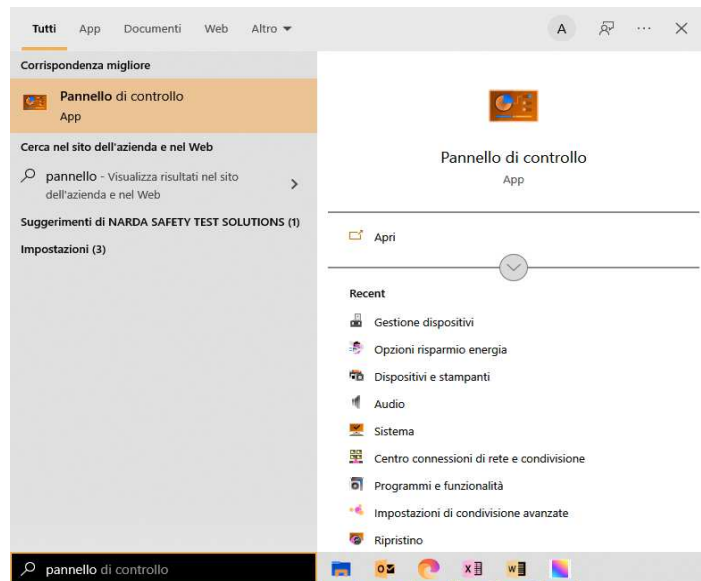

Double click “Programs and Features”.

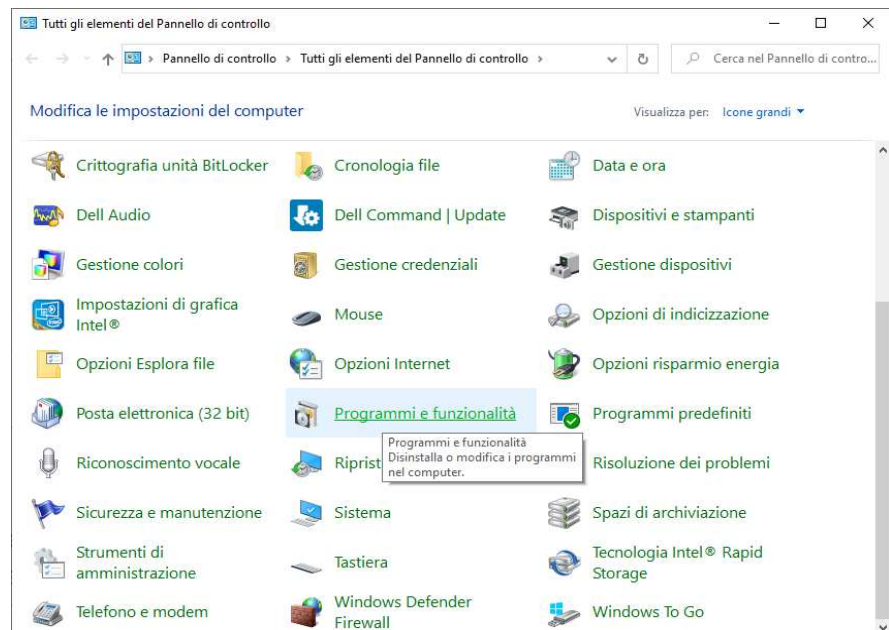


From the application list select “PL-2303 USB-to-Serial”, click “Uninstall” and follow the instructions.

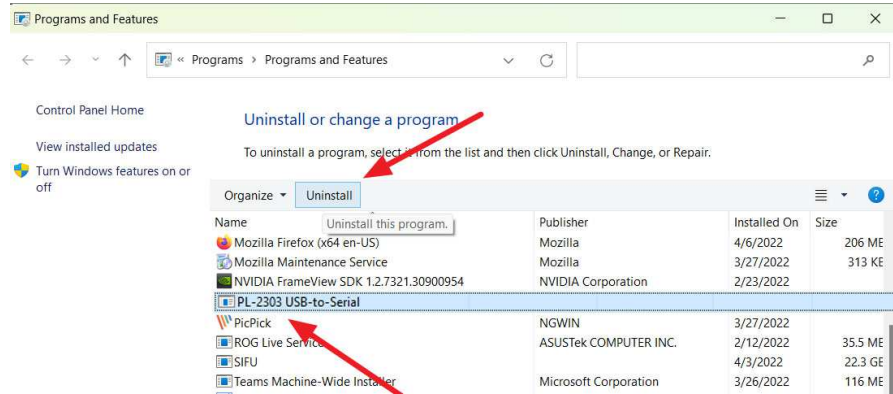


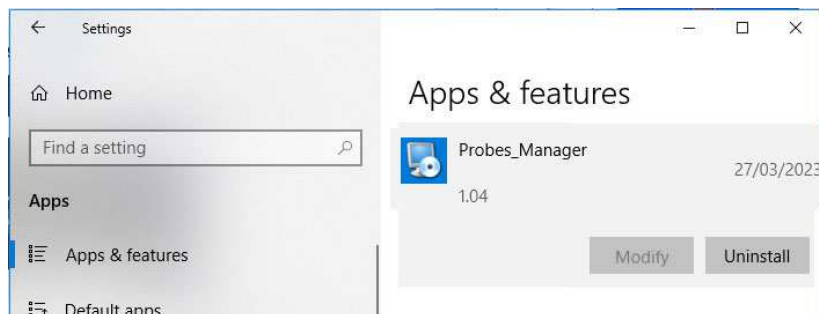
7.2 Uninstall Narda Probes Manager

Press **EXIT** to quit Narda Probes Manager, disconnect the AMC from the PC and uninstall the software.

In Win7 click **Windows** , **NardaProbesManager**, then **Uninstall Probes_Manager** and follow the instructions.



In Win10 and Win11 click **Start** , **Settings, App&Features**, find and select **Probes_Manager**, click **Uninstall** and follow the instructions.



NOTICE

When asked if removing the shared files, answer **NO** to prevent other programs not to run correctly.

8 – LR01 Manager APP Operating instructions

8.1 Introduction

Narda introduces an innovative way to perform the AMC measurements on mobile device by a dedicated App. This section provides the information necessary to use the LR01 Manager application.

8.2 Installation

Download and install the LR01 Manager application on your device from Google or Apple store. Once the application is successfully installed, the LR01 Manager icon is displayed on home screen.



NOTICE

Android release 10.0 or higher must be installed on the device to use the LR01 Manager App.

NOTICE

iOS release 11.0 or higher must be installed on the device to use the LR01 Manager App.

NOTICE

Make sure turning on the Bluetooth on AMC and the device.

NOTICE

To active the Bluetooth communication on the AMC the user must connect the Area Monitor Compact to Narda Probe Manager software and enable the BLE function (see §4.2.7.2 Bluetooth connection).

NOTICE


To active the Bluetooth communication on the device, refer to the instructions of its manufacturer.

NOTICE

If the App has already been installed on the device, before starting the App make sure the software is not running to avoid communication errors.

Turning on AMC, the Visual led begins **flashing red** for 30 seconds and then **blinks red** every 5 seconds to indicate the Area Monitor Compact is ready to communicate (see §2.7)

Clicking on the icon to run the application, the Bluetooth pairing request will appear. Select **“Pair”** to confirm.

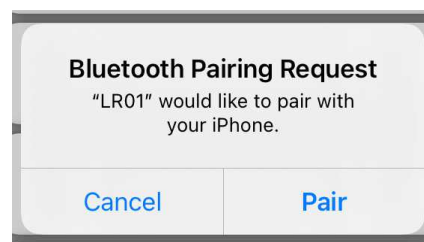


8.3 LR01 Manager Main window

Once the link has been successfully established, the LR-01 Manager app provides the following features:

- Changing AMC settings.
- Performing live measurements.
- Logging and saving data.



These are the basic operations to follow to work with the LR01 Manager. All additional information and explanations can be found on chapter 4.

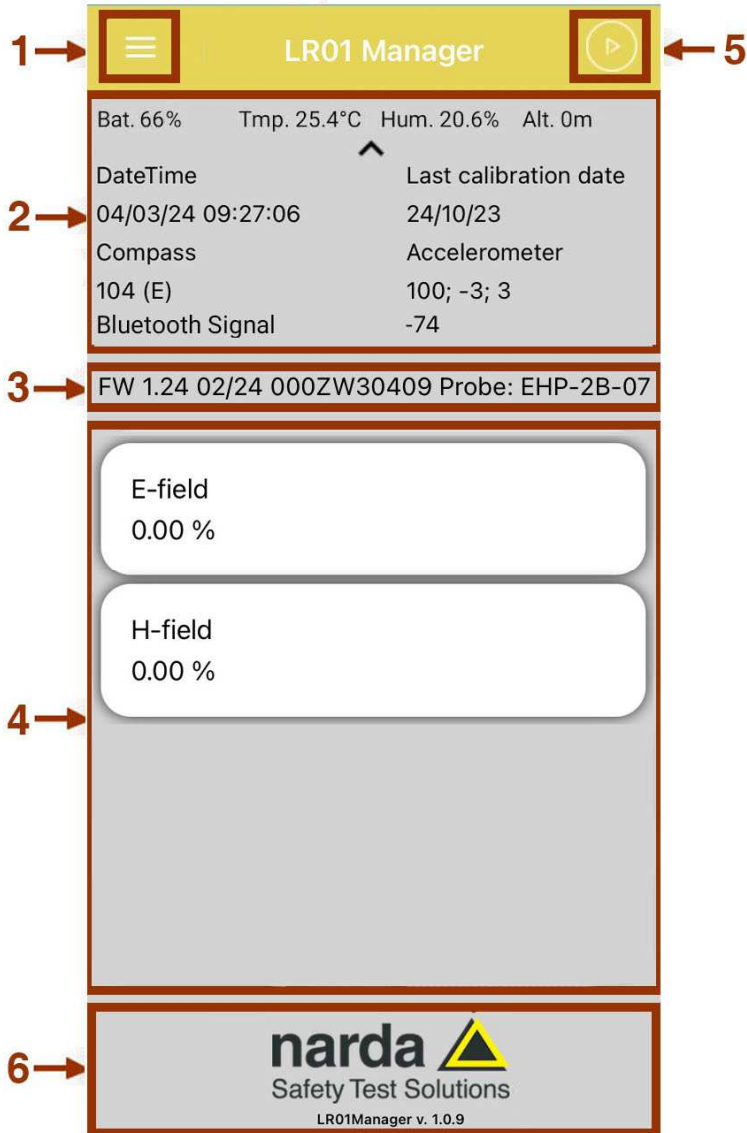

Commands description:

1. Menu
2. Technical data
3. Unit's identifier and Probe type
4. Measurements window
5. Logger button
6. Info

8.3.1 Menu

-  **Device**
-  **Settings**
-  **Save**

Commands:


- **Device:** to display the Main window.
- **Settings:** allows to modify the AMC settings.
- **Save:** allows to take a photo of the site monitored and generates an email with attached the last working session log file and the picture.

8.3.1.1 Settings

Settings window allows to:

Settings		
Low Pass Filter	40 Hz	Send
Data	18/03/2024	Send
Time	12:42	Send
Altitude Reset		Send
Compass Calibration		Send
KFR	OFF Hz	Send
Sampling Time	900 ms	Save
Standard	1	Send

- Set the AMC internal clock with the **Date** and **Time** of the PC.
- Set to zero the internal **Altimeter** reference.
- Calibrate the internal **Compass Calibration** for more accuracy.
- Recall the **Frequency correction factor** (in Hz) stored in the AMC memory or OFF when disabled. When the KFR is ON the measured field value turns blue in the main window (for further information see §4.3.3).

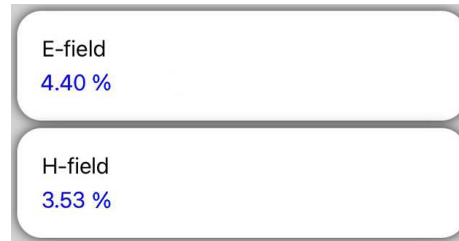

- **Sampling time:** Set the time interval (in milliseconds) between subsequent readings.

- **Standard:** Load a default standard limit saved into the EHP-2B probe memory at the factory.

The limit list depends on the EHP-2B model probe connected, as follows:

- EHP-2B-05 and EHP-2B-06 Standard limit list:

- 1 → **ICNIRP 1998 Occupational;**
- 2 → **ICNIRP 1998 General Public;**
- 3 → **SC6 2015 Controlled;**
- 4 → **SC6 2015 Uncontrolled.**

- EHP-2B-07 and EHP-2B-08 Standard limit list:

- 1 → **ICNIRP 2020 Occupational;**
- 2 → **ICNIRP 2020 General Public;**
- 3 → **FCC-96 326 Occupational;**
- 4 → **FCC-96 326 General Public.**



The Standard function is enable only when an EHP-2B model probe is connected to the AMC.

The new setting can be saved pressing the corresponding **Send** or **Save** button; once the value is stored, the button turns blue.

Select **Menu** button  and then **Device** to return to the Main window.


8.3.2 Technical data

Bat. 66%	Tmp. 25.4°C	Hum. 20.6%	Alt. 0m
DateTime		Last calibration date	
04/03/24 09:27:06		24/10/23	
Compass		Accelerometer	
104 (E)		100; -3; 3	
Bluetooth Signal		-74	


In the upper part of the main screen, some technical data are shown.

- **Bat:** It shows the residual autonomy during measurements and the achieved autonomy during charging.
- **Tmp:** followed by the temperature in degrees Celsius.
- **Hum:** followed by the percentage of relative humidity.
- **Alt:** followed by the relative altitude in meters.
- **DateTime:** Date and time set on AMC.
- **Last Calibration date:** Latest probe calibration.
- **Compass:** followed by the compass heading in degrees and cardinal directions.
- **Accelerometer:** Gravitational acceleration is expressed in hundredths of g for each of the three axes. For Accelerometer axes orientation see §2.7.
- **Bluetooth Signal:** It shows the quality of the Bluetooth connection

In situations where the Bluetooth connection is poor, a red “**bluetooth signal is weak**” message will be display on the top of the LR-01 Manager main window.

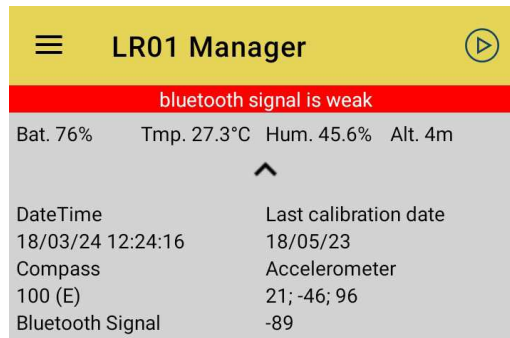

Instead, If the Bluetooth connection get lost, the following message is shown:

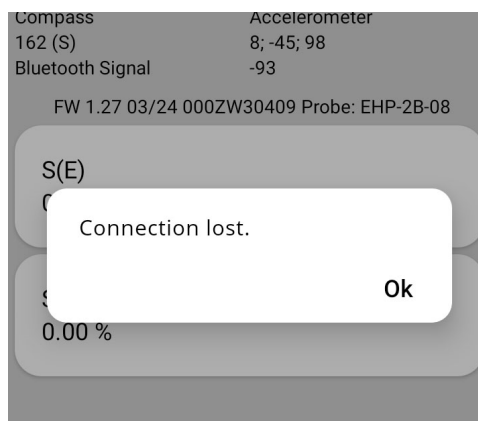


Click “**Ok**”.
When the Bluetooth communication with the AMC is established again, the pairing request will appear.

8.3.3 Live Measurements The mobile device performs live measurements and display the data with all other related information in the LR-01 Manager main window.

The screen show the percentage indication of the standard in power density (quadratic scale) calculated on electric “**S(E)**” and magnetic “**S(H)**” field strength in far field condition or Electric “**E-field**” and magnetic “**H-field**” (linear scale).

The chapter 1 of this manual includes the list of the field probes available and their technical specifications.

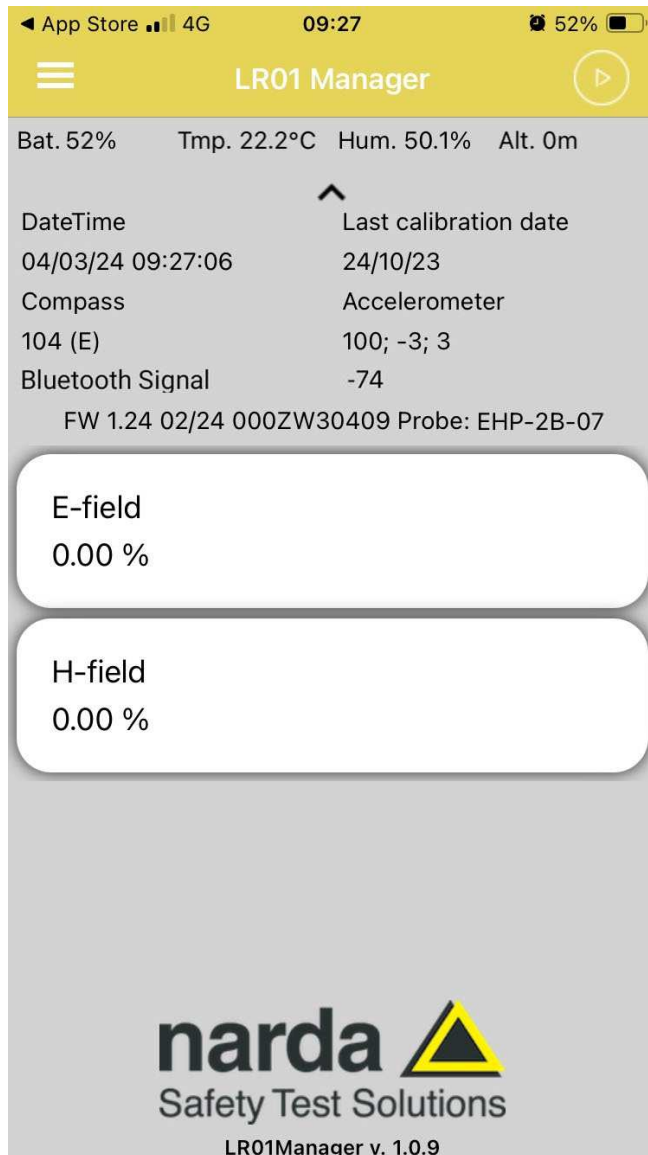


These are the basic operations to follow to work with the LR01 Manager. All additional information and explanations can be found on chapter 4 .

8.3.4 Logger and Save Measurements




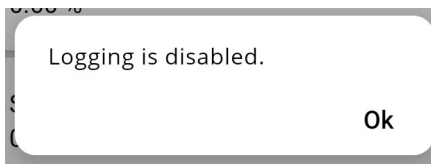
In addition to the live measurements, the App allows logging measurements on mobile phone, saving on its internal memory and sending by email in a simple and reliable way:



Click the button  in the upper-right main window to start the measurements log. The following message will appear:



Clicking the button  causes the end of measurements log and a message pops up telling:



NOTICE

Starting a new log, all the data of the previous one will be deleted. No data is saved in the internal memory of AMC; see §4.6 Storing measurements on the AMC memory (Logger)




Save

After stopping the Log, the measurements acquired can be downloaded pressing the **Save** button (Menu → Save) otherwise will not be available anymore. This button allows to take a photo of the site monitored and generates an email with attached the .txt data log file and the picture.

NOTICE

On Android device only, when the working session is stopped the data and, if taken, the picture are saved in the **Download** directory. A new **.TXT** file will be created with a specific name: **LR01_Record_yyyymmddhhmmss.txt**.

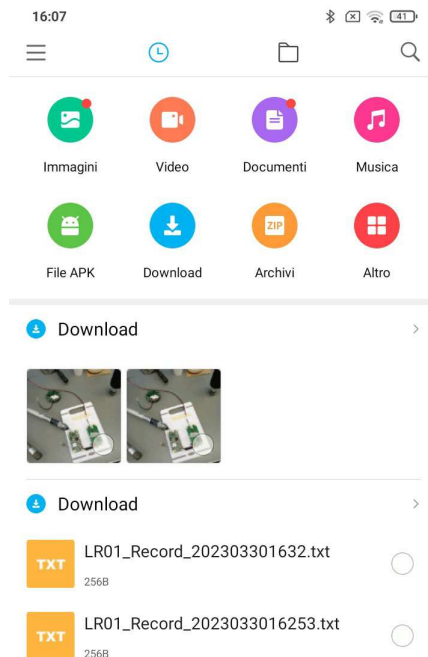

When the file is saved in .txt format and the table is opened, a huge amount of data are available. For every working session (from starting to closing logging) the following headline will be created in the txt file:

```
FW 1.21 01/24 000ZW30304 Probe: EHP-2B-07 - Unit: % - GPS: 44.07489013, 8.15974998 - Date: 05/02/2024
Time      E-field  H-field
```

- Firmware version and released data (**FW 1.21 01/24**)
- AMC Serial Number (**000ZW30304**)
- Probe connected to the AMC (**Probe EHP-2B-07**)
- Measurement unit (**Unit: %**)
- Measurements GPS coordinates (**GPS: 44.07....., 8.15.....**)
- Working session date in dd/mm/yyyy format (**Date: 05/02/2024**)
- Hour, minute, second of the measurement acquisition (**Time**)
- **S(E) / E-field** **S(H) / H-field**: Power density calculated in far field condition and Electric/Magnetic field strength. Between brackets is reported the unit.

Example with EHP-2B-07 probe

```
FW 1.21 01/24 000ZW30304 Probe: EHP-2B-07 - Unit: % - GPS: 44.07489013, 8.15974998 - Date: 05/02/2024
Time      E-field  H-field
18:07:25  0.00    0.00
18:07:26  0.00    0.00
18:07:27  0.70    0.00
18:07:28  0.00    1.00
18:07:29  0.00    0.00
18:07:30  0.90    0.00
18:07:31  0.00    1.10
```



The recorded data can be viewed either as a graph or as a table using common software as an example Word or Excel application.

8.3.5 Info

Contents:

- Manufacturer information and Software release;




This page has been left blank intentionally

9 – Using of LR-01 with WearOS (Smartwatch) Operating instructions

9.1 Introduction

This section provides the information necessary to use the AMC SMARTS Area Monitor Compact with the optional Smartwatch.

9.2 Installation

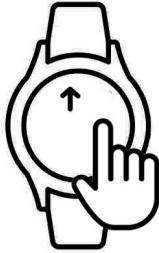

Download and install the LR01 Manager application on your smartwatch from Google or Apple store.


Once the application is successfully installed, swipe **Upwards** on the watch screen the user will be able to view the LR01 Manager icon displayed on the **Apps screen**.



NOTICE

WearOS release 3.0 or higher must be installed on the Smartwatch to use the LR01 Manager .

NOTICE

If the App has already been installed, tap on **Recent Apps**  and make sure the software is not running to avoid communication errors (see §9.4 Close the App).



NOTICE

Also make sure turning on the Bluetooth on AMC and Smartwatch.

To active the Bluetooth communication on the AMC, the user must connect the Area Monitor Compact to Narda Probe Manager software and enable the BLE function (see §4.2.7.2 Bluetooth connection).

Turning on AMC, the Visual led begins **flashing red** for 30 seconds and then **blinks red** every 5 seconds to indicate the Area Monitor Compact is ready to communicate (see §2.7)

Tap on the LR01 Manger icon to run the application; a welcome screenshot will show for a few seconds, then the “Searching for LR01” indication appears.

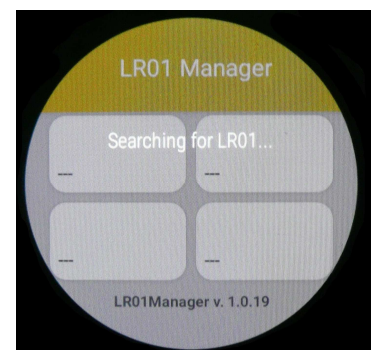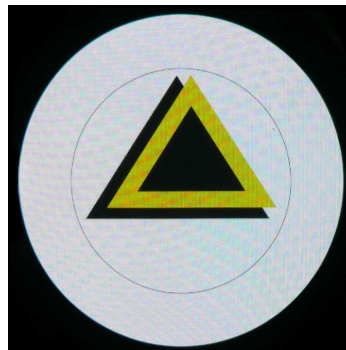

9.3 Operations



These are the basic operations to follow to work with the LR01 Manager. All additional information and explanations can be found on chapter 4

9.3.1 Live Measurements

Once the link has been successfully established, the Main window is displayed showing the live measurements together with software release.




The screen show the percentage indication of the standard in power density (quadratic scale) calculated on electric "**S(E)**" and magnetic "**S(H)**" field strength in far field condition or Electric "**E-field**" and magnetic "**H-field**" (linear scale)

The chapter 1 of this manual includes the list of the field probes available and their technical specifications.




Swipe to the left or right to enter on **Technical data** or **Settings** panel; see the upcoming paragraph.

9.3.2 Technical data

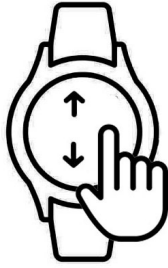


Enter on the **Technical data** panel.

Swiping upwards or downwards on the screen, further technical data are shown:

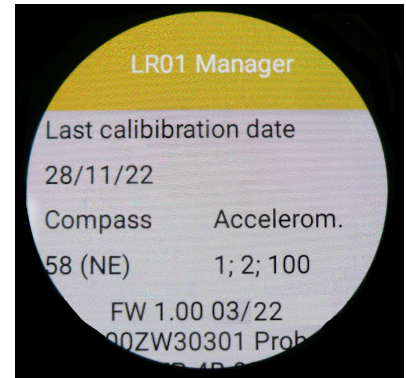

- **Bat:** It shows the residual autonomy during measurements and the achieved autonomy during charging.
- **Tmp:** followed by the temperature in degrees Celsius.
- **Hum:** followed by the percentage of relative humidity.
- **Alt:** followed by the relative altitude in meters.
- **DateTime:** Date and time set on AMC
- **Last Calibration date:** Latest probe calibration
- **Compass:** followed by the compass heading in degrees and cardinal directions.
- **Accelerometer:** Gravitational acceleration is expressed in hundredths of g for each of the three axes. For Accelerometer axes orientation see §2.7.
- **Bluetooth Signal:** It shows the quality of the Bluetooth connection

In situations where the Bluetooth connection is poor, a red “**bluetooth signal is weak**” message will be display on the top of the LR-01 Manager main window.

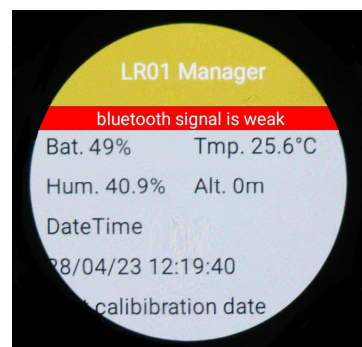

Instead, If the Bluetooth connection get lost, the message “**Connection lost**” is shown; click “**Ok**”.

When the Bluetooth communication with the LR-01 is established again, the pairing request will appear.



- Firmware and data release, Serial Number and Probe model

9.3.3 Settings



Enter on the **Settings** panel.

Swiping upwards or downwards on the screen, all settings are shown:

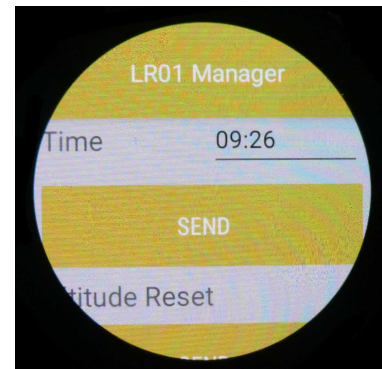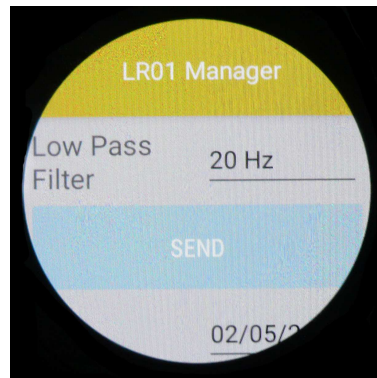

- Set the internal digital **Filter**
- Set the AMC internal clock with the **Date** and **Time** of the PC
- Set to zero the internal **Altimeter** reference
- Calibrate the internal **Compass Calibration** for more accuracy
- Recall the **Frequency correction factor** (in Hz) stored in the AMC memory or OFF when disabled
- **Sampling time**: Set the time interval (in milliseconds) between subsequent readings
- **Standard**: Load a default standard limit saved into the EHP-2B probe memory at the factory.
The limit list depends on the EHP-2B model probe connected, as follows:
 - EHP-2B-05 and EHP-2B-06 Standard limit list:
 - 1 → **ICNIRP 1998 Occupational**;
 - 2 → **ICNIRP 1998 General Public**;
 - 3 → **SC6 2015 Controlled**;
 - 4 → **SC6 2015 Uncontrolled**.
 - EHP-2B-07 and EHP-2B-08 Standard limit list:
 - 1 → **ICNIRP 2020 Occupational**;
 - 2 → **ICNIRP 2020 General Public**;
 - 3 → **FCC-96 326 Occupational**;
 - 4 → **FCC-96 326 General Public**.




The Standard function is enable only when an EHP-2B model probe is connected to the AMC.

The new setting can be saved pressing the corresponding **Send** or **Save** button; once the value is set, the button will turn blue.

9.4 Close the App

On the **Apps** screen, tap  (Recent apps).

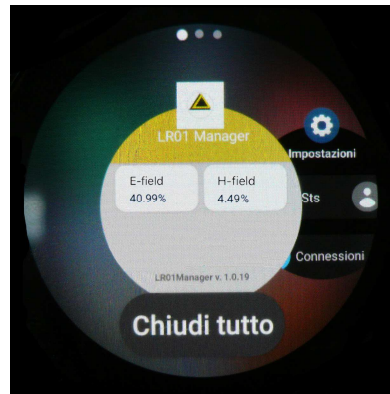

Use the bezel or swipe left or right on the screen to move to the app to close.

Swipe upwards on the app to close it or Tap on **Close all** to close all running apps.

This page has been left blank intentionally

10 - Command protocol

10.1 Introduction

This chapter provides the information required to control the SMARTS AMC Area Monitor Compact via one of the communication ports (e.g. the fiber optic) connected to a PC and by means of user's own PC software applications.

The communication between the host and the AMC can be in wired USB or Ethernet, in optic USB (USB-OC) or wireless (Wi-Fi or Bluetooth).

Serial communication protocol is the following:

- Baud: 115200 (default, or other speeds selectable)
- Parity: NONE
- Length: 8 bit
- Bit Stop: 1

The commands have the following general format:

#LRcommand* where:

#LR = opens the command string;

? = for query commands only;

Command = command string;

***** = closes the command string.



#LR prefix is a wildcard to establish a communication with every AMC unit. To connect to a specific unit, a #nn should be used instead. Where nn is the address of the unit desired, which can be set by the SADR command.

The commands available are divided into two main categories:

- **Query COMMANDs;**
- **Setting COMMANDs.**

Commands are made of ASCII strings delimited by the character “#” (0x23) and the character “*” (0x2A).

The replies are terminated with <CR><LF> (0x0D)(0x0A).

An example to request the unit's name is as follows: **#LR?IDN***

The answer is like: IDN=Cisano;000WE20501

Another example, to read the temperature at the unit with address 01:

#01?TMP*

The Baud Rate is set at 115200 baud as default.

To switch to one of the other speeds available, please refer to command SBDR.

It is possible to return to a 115200 bps by following the same procedure.

At power ON, AMC is automatically set to listen to both the USB and the optic port for incoming commands.

The optic port will be always available for communicating with the unit.

User's own software can ask for measurement data when desired or can switch the Area Monitor Compact to master mode where measurement data are continuously sent over the communication port, without the need of asking for each.

At any time the operation mode can be switched back to slave mode.

While operating in slave mode, AMC sends answers to the received commands, according to the communication protocol described below.



If Area Monitor Compact is not supplied by USB-C cable or PoE Injector, the SMARTS AMC automatically turns off 30 minutes after receiving the last command.



Please, do not try any commands not covered in this manual, as random poking can cause the system to crash or lose data and calibrations.

10.2 List of commands

Table 10-1 Query COMMANDs list

Syntax	Function
?ADR	Requests the unit's address.
?ALI	Requests Instant alarm status
?ALR	Requests alarm threshold.
?ALT	Requests relative altitude.
?AMC	Requests the Area Monitor Compact output status (for SMARTS AMC/00 only).
?AMS	Requests the Area Monitor Compact input status (for SMARTS AMC/00 only).
?AMV	Requests the Area Monitor Compact release and date.
?ANY	Requests the devices mask for alarm notification or Latched Alarm status
?AQ_	Requests logger settings.
?AVG	Requests the current averaging mode.
?BAT	Requests battery voltage.
?BDR	Requests the baud rate.
?BLE	Requests the state of the BLE connection.
?CKG	Requests GPS status.
?CLK	Requests date and time.
?CPS	Requests compass and accelerometer readings.
?DCM	Requests the Wireless communication mode
?DSA	Requests the Dual Standard Alarm status
?GCS	Requests the Real Time Clock setting status.
?GPS	Requests position information.
?IDN	Requests unit's identification.
?IDNF	Requests unit's extended identification.
?KFR	Requests the Correction frequency status.
?LAN	Requests the Ethernet connection status.
?LFA[S]	Requests the latest average field value.
?LOG	Requests binary log file via wired connection.
?LPF	Requests Low Pass Filter setting for passive probes.
?LST	Requests Logger status.
?MAC	Requests the MAC address.
?MES	Requests the instantaneous field level.
?MESS	Requests the instantaneous field level with continuous transmission.
?MESR[v]	Requests the instantaneous field level + position and sensors data with continuous transmission
?MESSs	Disables continuous transmission activated by MESS and MESR[v] command.
?MSK	Requests the alarms mask.
?NET	Requests the list of the Wi-Fi available networks.
?PRB	Requests probe information.
?S/NO	Requests the unit's serial number.
?SID	Requests the stored Wi-Fi network name.
?SNS	Requests environment sensor data: temperature, relative humidity and pressure.
?SST	Requests the Wi-Fi signal level.
?STA	Requests all alarms status.
?STAR	Disable the Latched Alarm activated by ?ANY command
?STM	Requests masked alarms status.
?STS	Requests the reference standard (for EHP-2B model probe only).
?TMP	Requests environment temperature and relative humidity.
?VST[V]	Requests power supply and battery charging status.
?WCM	Requests the Wi-Fi IP configuration (DHCP or Static).
?WFI	Requests the state of the Wi-Fi connection.
?WGY	Requests the Gateway address (for static WiFi configuration only).
?WIP	Requests the IP address of the unit (for static WiFi configuration only).
?WLOG	Requests binary log file via wireless connection.
?WMEi[fv]	Requests % value related to i-th standard.
?WMK	Requests the Subnet mask (for static WiFi configuration only).
?WPT	Requests the number of the port used by the unit
?WRN	Requests warning threshold.
?WVR	Requests firmware version of the internal Wi-Fi + BLE module.


Table 10-2 Setting COMMANDs list


Syntax	Function
SADRa	Sets unit's address.
SALI	Set Instant alarm status
SALRs	Sets Alarm threshold.
SALT	Resets the reference altitude.
SAMCk para	Set the Area Monitor Compact output and alarm(s) (for SMARTS AMC/00 only).
SANY	Sets the device for alarm notification or enable the Latched Alarm
SAQ_m;x;t	Sets the logger parameters.
SAVGl;r	Selects the averaging time and type
SBDR b	Sets baud rate.
SBLEx	Switches Bluetooth ON or OFF.
SCLDd.m.y	Sets the RTC date.
SCLT h.m.s	Sets the RTC time.
SCPct	Runs compass calibration.
SDCMc	Sets the wireless communication mode
SDSA	Set the Dual Standard Alarm status
SGCSAh	Set automatic RTC synchronization
SGCSM	Set manual RTC update
SGOF	Switches OFF the GPS module.
SGOOFF	Switches OFF the unit.
SGOI	Switches ON the GPS module.
SIDN i	Sets the units identifier.
SKFR f	Sets the frequency correction value and makes it active.
SLPF f	Selects the Low Pass Filter for passive probes.
SLST l	Instantly activates or deactivates the log.
SMSKm	Sets the warnings and alarms mask.
SPWDp	Sets Wi-Fi password.
SREBOOT	Reboots the unit.
SRST	Restores default configuration.
SRSTR	Restores default configuration (logger rate included)..
SSIDi	Sets Wi-Fi network name.
SSTSi	Set the reference standard (for EHP-2B model probe only)
SWCMx	Sets the Wi-Fi IP configuration (DHCP or Static).
SWFIx	Set the Wi-Fi module ON/OFF or set the unit as Access Point.
SWGy	Sets the Gateway address (for static WiFi configuration only).
SWIP	Sets the IP address of the unit (for static WiFi configuration only).
SWMK	Sets the Subnet mask (for static WiFi configuration only).
SWPT	Sets the number of the port used by the unit.
SWRN s	Sets Warning threshold.


10.3 Query commands Using these commands the AMC can be queried with a series of requests to which the Area Monitor Compact responds.
Query commands are characterized by the character ? in the string.

TABLE 10-3 Query commands meaning

?ADR	<p>This query command #LR?ADR* requests the AMC's address that represents the additional prefix that can be set by the User to distinguish a specific unit. It will be accepted and recognized, by that specific SMARTS only, in the same way as the default prefix "LR" which is always valid for all Area Monitor Compact.</p> <p>The reply is a string showing a number between 0 and 99. Example of reply: ADR=00 which means that the address of the Area Monitor Compact is 00.</p>
?ALI	<p>This query command #LR?ALI* requests the Instant Alarm status .</p> <p>The reply indicates:</p> <p>ALI=ON the Warning/Alarm level threshold is compare with the instantaneous field value acquired by the unit without any RMS or arithmetic average (see SALIx command for Immediate function).</p> <p>ALI=OFF the Warning/Alarm level threshold is compare with the averaged field value (AVG or RMS) acquired by the unit during the Time period.</p> <p>See ?ALR e ?WRN command for the level threshold. See ?AVG command for the current averaging mode.</p> <p>Examples of reply: ALI=ON</p>
?ALR	<p>This query command #LR?ALR* requests the Alarm threshold followed by the time period (in minutes) on which the averaged field will be calculated.</p> <p>When the connected probe is a EHP-2B-xx, it returns the alarm threshold for the Electric Field. When the connected probe is a shaped model, the unit shown is %.</p> <p>Examples of reply: ALR=6.0 uT; 6.00 min. ALR=25000.00%; 30.00 min.</p> <p>If the Immediate function is ON (see SALIx command), the time period is replaced by the "I" character.</p> <p>Examples of reply: ALR=6.0 uT; I</p>
?ALT	<p>This query command #LR?ALT* requests the relative altitude.</p> <p>The reply provides the altitude in meters relative to the reference position which is acquired when the unit is switched on or when the SALT command is sent or when a new Log begins. The adopted formula is: $alt=(2.0*1006.0)/(7.0*9.81)*Tk*LN(ref_Press/cur_Press)$.</p> <p>Example of reply: ALT=30</p>

<p>?AMCk (for AMC/00 only)</p>  NOTE	<p>This query command #LR?AMCk* requests the output status of the SMARTS AMC/00. The argument “k” can be as following:</p> <ul style="list-style-type: none"> • k=B Request Buzzer status • k=1 Request A1 output status (Pin 2 and 8 on DB15 connector) • k=2 Request A2 output status (Pin 1 and 7 on DB15 connector) • k=R Request Relè output status (Pin 10,12,13,14,15 on DB15 connector) <p>Example of reply with #LR?AMCR* : AMCR----- In this case any alarm is not enable on Relè output</p> <p>Examples of reply with #LR?AMCB* : AMCB-W----- In this case the Warning level alarm is enable on the Buzzer; whenever the level exceed the threshold set, an acoustic alarm will be emitted.</p> <p>If the “k” index entered is A, all four output status are provided. Examples of reply with #LR?AMCA* : AMCR--U----- AMC2----T----- AMC1---V----- AMCB-W-----</p> <p>Please, refer to SAMCk para command for Alarm and Warning masking.</p> <p>If the index ‘k’ entered is not correct or the Area Monitor Compact is not present, the reply is: AMCK=ERR</p> <p>See §1.7.1 for User’s Port HD-15 female connector pinout list .</p>
<p>?AMS (for AMC/00 only)</p>	<p>This query command #LR?AMS* requests the C4 and C3 input status of the SMARTS AMC/00. The format is as follows: AMS=C4[OFF/ON]; C3[OFF/ON];</p> <p>ON OFF indicates if the related input is triggered or not.</p> <p>Examples of reply with #LR?AMS* AMS:C4=OFF; C3=OFF; <13><10></p>
<p>?AMV</p>	<p>This query command #LR?AMV* requests the SMARTS AMC release version and date.</p> <p>Examples of reply with #LR?AMV* AMV:A.10;19/01/23<13><10></p> <p>If the Area Monitor Compact is not present, the reply is: AMV:Fail</p>
<p>?ANY</p>	<p>This query command #LR?ANY* requests the device mask for field strength alarm notification or Latched alarm status. The reply format is: ANY=BLV where:</p> <ul style="list-style-type: none"> • B = Buzzer; • L = Visual Led • V = Vibration • H = Alarm Hold <p>A dash “-“ means that specific Device is not enable.</p> <p>Examples of reply : ANY=BL- which means that the field strength alarm will be notify by Buzzer (B) and Visual Led (L) but not with Vibration</p> <p>Examples of reply: ANY=--H which means that the permanent alarm status is active and will remain enable until the command ?STAR is sent.</p>

<p>?AQ_</p>	<p>This query command #LR?AQ_* requests the Logger settings.</p> <p>The reply format is: AQ_ =m; x; t where:</p> <ul style="list-style-type: none"> • m is the Logger acquisition mode: A= AVG; R=RMS; I=Instantaneous • x represents the logger rate, in seconds, The minimum value is 1s; the maximum value is 900s in instantaneous mode and it vary according to the AVG or RMS setting (please refer to SAVG command). When x=0, the Logger is disabled. When x=-1, the Logger is triggered only by pressing the Button and, just in case, by the Alarm (please refer to MSK command). • t is the Logger format: 32 = compact, 64 = extended <p>Example of reply: AQ_ =R; 30; 32 which means that the AMC is set to store data every 30 seconds, the averaging is RMS and the Log format is Compact type where each record has a size of 32 bytes and does not contain position information.</p>
<p>?AVG</p>	<p>This query command #LR?AVG* requests the current averaging mode.</p> <p>The reply is as follows: AVG=L;R where: L is the averaged time period in minutes R shows the acquisition mode setting: A= AVG; R=RMS</p> <p>Example of reply: AVG=6.00;A which means that the unit is averaging over 6 minutes and the average type is AVG.</p>
<p>?BAT</p>	<p>This query command #LR?BAT* requests the current battery voltage.</p> <p>The reply provides the battery voltage in Volt with 10 mV resolution, formatted as BAT=V.vv</p> <p>Example of reply: BAT=3.82</p>
<p>?BDR</p>	<p>This query command #LR?BDR* requests the current Baud Rate of the optical port, where the code returned indicates:</p> <ul style="list-style-type: none"> • 10: 9600 bps • 11: 38400 bps • 12: 57600 bps • else: 115200 bps <p>Example of reply: BDR=3 which means that the optic serial port is set to 115200 bps.</p>
<p>?BLE</p>	<p>This query command #LR?BLE* requests the status of the Bluetooth Low Energy module.</p> <p>The reply indicates: BLE=ON internal BLE module is switched ON BLE=OFF internal BLE module is switched OFF BLE=WIFI internal BLE module is switched ON in WIFI mode</p> <p>Example of reply: BLE=OFF which means that the internal BLE module is switched OFF.</p>
<p>?CKG</p>	<p>This query command #LR?CKG* requests the status of the GPS module.</p> <p>The reply indicates:</p> <ul style="list-style-type: none"> • 2: GPS locked • 1: GPS connection in progress • 0: GPS switched OFF • -2: GPS not available <p>Example of reply: CKG=0</p> <p> NOTE Whenever the SMARTS AMC is switched on, the GPS is turned on as well allowing thus tracking the position. The GPS remains always active even if a fix is made or the time out occurs (4 minutes) or the SGOF command is sent.</p>

<p>?CLK</p>	<p>This query command #LR?CLK* requests the date and time to the internal RTC.</p> <p>The reply provides the requested information formatted as: CLK=HH.mm.ss;DD.MM.YY</p> <ul style="list-style-type: none"> • HH: hours • mm: minutes • ss: seconds • DD: day • MM: month • YY: year (last two digits) <p>Example of reply: CLK=20.02.09;19.05.22</p>
<p>?CPS</p>	<p>This query command #LR?CPS* requests the compass and accelerometer readings.</p> <p>The reply is formatted as following: Heading: bearing (orientation); G:x; y; z</p> <p>Bearing shows the cardinal directions and the corresponding angle in degrees. G refers to Gravitational acceleration expressed in hundredths of g (cm/s²) for each of the three axes.</p> <p>Note: The Optic link port represents the compass needle.</p> <p>Note: it is advisable to query this command at a rate lower than 3 times per second.</p> <p>Example of reply: Heading: 35 (NE); G:-1; 100; 7</p> <p> NOTE For Accelerometer axes orientation see §2.7.4 .</p>
<p>?DCM</p>	<p>This query command #LR?DCM* requests the setting for the preferred wireless communication channel at power on.</p> <p>The reply provides the preferred channel at power on, as follows:</p> <ul style="list-style-type: none"> • DCM=0 for wireless channel disabled at power on; • DCM=1 for Wi-Fi communication enabled at power on; • DCM=2 for BLE communication enabled at power on. <p>This setting is saved in the internal flash memory.</p> <p>Example of reply: DCM=2 which means that each time the unit will be turned on, the BLE module will be activated.</p> <p>If DCM=1 or DCM=2, the corresponding wireless communication channel will be kept active for 10 minutes. Any command received via the wireless channel will keep it active for another 10 minutes. Otherwise, at the end of this period, the communication is deactivated.</p>
<p>?DSA (for EHP-2B model probe only)</p>	<p>This query command #LR?DSA* requests the Dual Standard Alarm status.</p> <p>The reply indicates:</p> <p>DSA=OFF (default): the Alarm Level notification depends on the <u>S(E)</u> limit value, while the Warning Level notification is based on exceeding the <u>S(H)</u> thresholds of the selected standard.</p> <p>DSA=ON the Alarm Level notification depends on the S(E) S(H) limit value of <u>the selected standard</u>, while the Warning Level notification is based on exceeding the S(E) S(H) thresholds <u>of the unselected exposure category</u>.</p> <p>Examples of reply: DSA=OFF</p>

<p>?GCS</p>	<p>This query command #LR?GCS* requests the Real Time Clock setting status.</p> <p>The reply is as follows:</p> <ul style="list-style-type: none"> • M for manual time setting (refer to SCLT and SCLD commands) • A:x for automatic time setting where x is the time zone (integer value between -12 and 12) <p>Examples of reply: GCS=M which means that RTC is set manually GCS=A:2 which means that RTC is set automatically and +2 hours time zone (Rome, in summer time).</p>
<p>?GPS</p>	<p>This query command #LR?GPS* requests the latest RMC and GGA NMEA phrases (NMEA 0183 ver 3.01) detected by the internal GPS module.</p> <p>RMC NMEA strings are reported in full, starting with \$GPRMC and/or \$GNRMC, and ending with the checksum followed by CR LF.</p> <p>GGA NMEA strings are reported in full, starting with \$GPGGA and/or \$GNGGA, and ending with the checksum followed by CR LF.</p> <p>When a position has not yet been acquired, the reply is:-----VOID</p> <p>Example of reply: \$GPRMC,154452.000,A,4404.4843,N,01047.9412,E,0.28,152.18,27012,.,,A*6E \$GPGGA,154453.000,4341.1507,N,01047.9413,E,1,7,1.00,6.2,M,47.8,M,,*5B</p> <p>The format for NMEA coordinates is ddm.mmmm (d=degrees and m=minutes); The NMEA degrees minutes can be convert to decimal degree as follows: 4404.4843 → Take the NMEA Latitude position. 0.4843 * 60 = 29.058 → Multiply by 60 the NMEA Latitude second part. 440429.058 → The product is added to the NMEA Latitude first part for making 6 digits long first part. 04 * 60 = 240 → Take the second two digits of the first part and multiply by 60. (240+29.058)/3600=0.074738 → The product is added to the last first part and the total divided by 3600. 44+0.074738 → Add the result to the first two digits. The total is Latitude expressed in decimal degree.</p>
<p>?IDN</p>	<p>This query command #LR?IDN* requests the unit's identifier.</p> <p>The reply provides the unit's name followed by the serial number, in the format: IDN=name;S/N where name is the identification string stored with command SIDN, and S/N is the serial number of the unit, factory stored.</p> <p>Example of reply: IDN=Cisano;000WE20501</p>
<p>?IDNF</p>	<p>This query command #LR?IDNF* requests the extended AMC's identifier .</p> <p>The reply provides the Area Monitor's name followed by additional information as follows:</p> <ul style="list-style-type: none"> • name • model • firmware release • Serial Number <p>A semicolon ; is used as separator between fields.</p> <p>The format is: IDN=name;model;R.rr MM/YY;S/N Where: Name is the identification string stored with command SIDN, Model is the type of the Area Monitor Compact, R.rr shows the firmware version and MM/YY its date of release, S/N is the serial number of the Area Monitor Compact, factory stored.</p> <p>Example of reply: IDN=Cisano;LR01;A0.0 10/21;000WE20501 which identifies the unit named Cisano, model LR-01, with firmware version A0.0 released on October 2021. Its serial number is 000WE20501.</p>

<p>?KFR</p>	<p>This query command #LR?KFR* requests the Frequency correction status. The reply is:</p> <ul style="list-style-type: none"> • KFR=OFF when the correction is not active • KFR=NA when the correction is not available • KFR=f ; [fH] u when the correction is active at the frequency f expressed in the unit u. If an Electric and Magnetic probe is connected, also the frequency correction for magnetic measurement is shown. <p>Examples of reply: KFR=6.500 MHz KFR=6.500;1.000 MHz</p>
<p>?LAN</p>	<p>This query command #LR?LAN* requests the Ethernet connection status.</p> <p>The reply indicates: LAN=ON Ethernet connected. LAN=OFF Ethernet not connected.</p> <p>Examples of reply: LAN=OFF</p>
<p>?LFA[S]</p>	<p>This query command #LR?LFA* requests the latest average field value. The reply provides the value (or values) with current unit, followed by the averaging period in minutes (the same as per AVG command).</p> <p>When a passive probe is installed, the command provides the field levels of the three axes, followed by the total value.</p> <p>When the special probe EP-333 (RMS type) is in use, the command provides the RMS level.</p> <p>In case of Electric and Magnetic Field probe EHP-2B-xx, the command provides the levels for both fields.</p> <p>Examples of reply: LFA= V/m;58.56;58.56;58.56;101.43;1 min. which means that the average level for the latest 1 minute is 58.56 V/m for each axes (X, Y, Z) and the total is 101.43 V/m. LFA= V/m;1.23; 0.868 uT; 6 min. which means that the average field level for the latest 6 minutes is 0.868 μT (H) and 1.23 V/m (E).</p>
<p>?LOG</p>	<p>This query command #LR?LOG* requests the binary Log file.</p> <p>NOTE: It works via USB and Optic port only. Please, refer to command ?WLOG to download data via one of the wireless connections.</p> <p>The reply starts with string LOG_S and is terminated by the string LOG_E. The first 128 bytes (LOG_S included) represent the header; the following data represent the records of 32 (or 64) bytes each.</p> <p>Please, refer to the binary Log file paragraph at the end of this chapter for further details about the binary file.</p>

?LPF	<p>This query command #LR?LPF* requests Low Pass Filter setting for passive probes.</p> <p>The reply is the index value, for the selected filter, related to the list:</p> <ul style="list-style-type: none"> • 0: 10 Hz • 1: 20 Hz • 2: 40 Hz (default) • 3: 80 Hz <p>Example of reply: LPF=2 which means that a 40 Hz low pass filter is applied.</p>
?LST	<p>This query command #LR?LST* requests the Logger status.</p> <p>The reply is:</p> <ul style="list-style-type: none"> • LST=1 Logger active • LST=0 Logger disabled <p>Example of reply: LST=1 which means that the Logger function is running.</p>
?MAC	<p>This query command #LR?MAC* requests the MAC address assigned by the manufacturer.</p> <p>Example of reply: MAC=60:8A:10:D2:71:02</p>
?MES	<p>This query command #LR?MES* requests the instantaneous (not averaged) field level.</p> <p>The reply is the elementary value for each band, in the format:</p> <p>Three-band probe: MES=W;L;H;V/m; where:</p> <ul style="list-style-type: none"> • W is the wideband probe field level; • L is the low-pass probe field level (e.g. < 862 MHz) • H is the high-pass probe field level (e.g. > 933 MHz) • V/m is the measurement unit label <p>Four-band probe: MES=W;A;B;C;V/m; where:</p> <ul style="list-style-type: none"> • W is the wideband probe field level; • A is the band-1 probe field level (e.g. 2140 MHz) • B is the band-2 probe field level (e.g. 1800 MHz) • C is the band-3 probe field level (e.g. 900 MHz) • V/m is the measurement unit label <p>Single-band probe: MES=W;;V/m; where:</p> <ul style="list-style-type: none"> • W is the field level; • V/m is the measurement unit label <p>Passive probe/USB EFD: MES=T;X;Y;Z;U where:</p> <ul style="list-style-type: none"> • T is the Total field level; • X is the X axes field level; • Y is the Y axes field level; • Z is the Z axes field level; • U is the measurement unit label <p>Electric and Magnetic probe EHP-2B-xx: MES=E;H;%; where:</p> <ul style="list-style-type: none"> • E. is the Electric field level; • H is the Magnetic field level; • % is the measurement unit label <p>It should be noted that, due to the delay for data transfer from probe -> unit -> Optic, USB, Ethernet, wireless, the reading refers to the acquisition value of the previous sampling (minimum ≥ 3 seconds, maximum < 6 seconds).</p> <p>Example of reply: MES=10.76; ; V/m;</p>

<p>?MESS n</p>	<p>This query command #LR?MESS* activates the continued issuing of the instantaneous (not averaged) field level. Adding the optional argument n the user set at which Reading Rate (in seconds) display the instantaneous field value. Example: #LR?MESS 10* the instantaneous field value is displayed at the interval of 10 seconds. The command #LR?MESS 0” disable the reading rate and restore the maximum reading speed.</p> <p>For example, this command can be useful to record separately all the elementary data used by the AMC.</p> <p>The reply is the elementary value for each band, like ?MES command, but with enabling for the continuous transmission as soon as they are available, in the format:</p> <p>Three-band probe:</p> <ul style="list-style-type: none"> • MES=W;L;H;V/m; where: • W is the wideband probe field level; • L is the low-pass probe field level (e.g. < 862 MHz) • H is the high-pass probe field level (e.g. > 933 MHz) • V/m is the measurement unit label <p>Four-band probe:</p> <ul style="list-style-type: none"> • MES=W;A;B;C;V/m; where: • W is the wideband probe field level; • A is the band-1 probe field level (e.g. 2140 MHz) • B is the band-2 probe field level (e.g. 1800 MHz) • C is the band-3 probe field level (e.g. 900 MHz) • V/m is the measurement unit label <p>Single-band probe:</p> <ul style="list-style-type: none"> • MES=W;;V/m; where: • W is the field level; • V/m is the measurement unit label <p>Passive probe:</p> <ul style="list-style-type: none"> • MES=T;X;Y;Z;U where: • T is the Total field level; • X is the X axes field level; • Y is the Y axes field level; • Z is the Z axes field level; • U is the measurement unit label <p>Electric and Magnetic probe EHP-2B-xx:</p> <ul style="list-style-type: none"> • MES=E;H;%; where: • E. is the Electric field level; • H is the Magnetic field level; • % is the measurement unit label <p>The reply is terminated by the string “-->” followed by date and time from the AMC.</p> <p>Example of reply: MES=7.81;4.42;4.65;7.81 V/m; 3.77V; ;; -->28/01/22 09:26:36*</p> <p>To disable the continuous transmission, simply send command ?MESSs</p>
-----------------------	---

<p>?MESR[v] n</p>	<p>This query command #LR?MESR* activates the continued issuing of the instantaneous (not averaged) field level with position (GPS) and other sensors information (compass, thermometer, hygrometer, barometer, and accelerometer).</p> <p>Adding the optional argument n the user set at which Reading Rate (in seconds) display the field value. Example: #LR?MESR 10* the instantaneous field value is displayed at the interval of 10 seconds. The command #LR?MESR 0* disable the reading rate and restore the maximum reading speed.</p> <p>For example, this command can be useful to record separately all the elementary data used by the AMC.</p> <p>The reply is the elementary value for each band, like ?MES command, plus GPS (and sensors) information, with enabling for the continuous data transfer as soon as they are available, in the following format.</p> <p>Three-band probe:</p> <ul style="list-style-type: none"> • MES=W;L;H;V/m; where: • W is the wideband probe field level; • L is the low-pass probe field level (e.g. < 862 MHz) • H is the high-pass probe field level (e.g. > 933 MHz) • V/m is the measurement unit label <p>Four-band probe:</p> <ul style="list-style-type: none"> • MES=W;A;B;C;V/m; where: • W is the wideband probe field level; • A is the band-1 probe field level (e.g. 2140 MHz) • B is the band-2 probe field level (e.g. 1800 MHz) • C is the band-3 probe field level (e.g. 900 MHz) • V/m is the measurement unit label <p>Single-band probe:</p> <ul style="list-style-type: none"> • MES=W;;V/m; where: • W is the field level; • V/m is the measurement unit label <p>Passive probe:</p> <ul style="list-style-type: none"> • MES=T;X;Y;Z;U where: • T is the Total field level; • X is the X axes field level; • Y is the Y axes field level; • Z is the Z axes field level; • U is the measurement unit label <p>Electric and Magnetic probe EHP-2B-xx:</p> <ul style="list-style-type: none"> • MES=E;H;%; where: • E. is the Electric field level; • H is the Magnetic field level; • % is the measurement unit label
--------------------------	--


	<p>Following is the standard NMEA GPRMC and/or GNRMC string that reports the information:</p> <ul style="list-style-type: none"> • Time (UTC) • Navigation receiver warning A = OK, V = warning • Latitude (deg. min North/South) • Longitude (deg. min East/West) • Speed over ground (Knots) • Course Made Good • Date (UTC) • Magnetic variation (deg) • Mandatory checksum <p>Following is the standard NMEA GPGGA and/or GNGGA string that reports the information:</p> <ul style="list-style-type: none"> • Time (UTC) • Latitude (deg. min North/South) • Longitude (deg. min East/West) • Position Fix • Satellites in use • Horizontal Dilution of Precision • MSL Altitude in m • Geoid Separation in m • Mandatory checksum <p>The reply is terminated by the string "-->" followed by date and time from the AMC.</p> <p>Example of reply: MES=10.66; ; V/m; 3.53V; \$GPRMC,144550.000,A,4341.1465,N,01047.9383,E,1.38,185.31,280122,,,A*67 ;\$GPGGA,144551.000,4341.1462,N,01047.9386,E,1,6,1.29,16.9,M,47.8,M,,*60 ;-->28/01/22 15:45:50*</p> <p>The NMEA degrees minutes can be convert to decimal degree (see ?GPS command).</p> <p>Note: to disable the continuous transmission, simply send command ?MESs</p> <p>Adding the "v" character, so that the command becomes ?MESRv, it is possible to include in the automatic response string the additional values of heading (degrees), acceleration (g), temperature (° C) and humidity (%)</p> <p>Example of reply: MES=10.68; ; V/m; 3.53V; \$GPRMC,144457.000,A,4341.1494,N,01047.9397,E,0.21,191.83,280122,,,A*6F ;\$GPGGA,144458.000,4341.1493,N,01047.9397,E,1,6,1.30,16.4,M,47.8,M,,*63 ;Heading: 164 (S); g:-15; 76; 68;24.95;36.41*; -->28/01/22 15:44:57*</p>
?MESs	<p>This query command #LR?MESs* disables the continuous data transmission set with ?MESS, ?MESR or ?MESRv command.</p> <p>It produces a single reply as per the ?MES command.</p>

<p>?MSK</p>	<p>This query command #LR?MSK* requests the alarms Mask.</p> <p>The reply provides a string with every armed alarm, with the format: MSK=AWUVPTCawvp SERIAL ALRTRG where the meaning of the symbols is similar to the ?STA command, as follows:</p> <ul style="list-style-type: none"> • A = Field Level exceeded Alarm; • W = Field Level exceeded Warning; • U = USB cable connected Alarm; • V = Low Battery Alarm; • P = Probe failure Alarm; • T = OverTemperature Alarm; • C = Relative Humidity Alarm; • a = end of Field Level Alarm situation; • w = end of Field Level Warning situation; • v = end of Low Battery Alarm; • p = end of Probe Alarm; • SERIAL = Alarms or logger transmission enabled via the serial port • ALRTRG = any Alarm or warning triggers the Logger, if enabled. <p>A dash “-“ means that specific Alarm (or warning) is not armed.</p> <p>The presence of the “SERIAL” string means that any Alarm will be transmitted via the serial port (optical and USB) formatted as the reply to ?STA command.</p> <p>If the LOGGER is active, the presence of the “SERIAL” string means that the binary data, relating to each single acquisition, will be sent to the serial port.</p> <p>The presence of the ALRTRG string means that, if the LOGGER is active, the alarm triggers the saving of the measurement record, either on a time basis (AQ_ with a rate greater than zero) or continuously (AQ_ with a rate of -1).</p> <p>Example: MSK=AW-VPTCawvp which means that all Alarms and Warnings are armed, except for the USB cable connection Alarm. They are not sent automatically via the serial port. The Logger is not triggered by alarms.</p>
<p>?NET</p>	<p>This query command #LR?NET* requests the list of the Wi-Fi networks available.</p> <p>Note: to work, the command needs the module to have been powered up via the SWFI command. If not so, the unit replies with: NET=ERR.</p> <p>Example of reply: NET=OK [] SSID:Redmi Note 8 Pro -41dB [X] SSID:FRITZ!Box 7490 -79dB [] SSID:DWR-921-B5BC -83dB [] SSID:TP-LINK_F788 -67dB</p> <p>[X] mark indicates the default network but not the successful connection.</p> <p>Please refer to command ?WFI to find out the connection status.</p>

?PRB	<p>This query command #LR?PRB* requests information of the connected probe.</p> <p>The reply provides probe model, latest calibration date, measurement unit, divider in the following format:</p> <ul style="list-style-type: none"> • Three-band probe: PRB=Name:Dd.Mm.Yy; Unit:Divider:Range:MinLevel:MinFreq:MaxFreq:CorrFreqUnit • Four-band probe: PRB=Name:Dd.Mm.Yy; Unit:Divider:Range:MinLevelWide:MinFreq:MaxFreq:CorrFreqUnit:4:MinLevelSubBand • Single-band probe: PRB=Name:Dd.Mm.Yy; Unit:Divider:Range:MinLevel:MinFreq:MaxFreq:CorrFreqUnit:S • Electric and Magnetic probe EHP-2B-xx: PRB=Name:Dd.Mm.Yy; Unit:Divider:RangeE:MinLevelE:MinFreqE:MaxFreqE:RangeH:MinLevelH:MinFreqH:MaxFreqH:CorrFreqUnit:S • USB EFD probe PRB=Name:Dd.Mm.Yy; Unit:Divider:Range:MinLevel:MinFreq:MaxFreq:FreqUnit:S <p>Note: If the Frequency correction is not available, CorrFreqUnit field will be "---".</p> <p>Examples of reply: PRB=EP-3B-01:14.09.15; V/m:100.00:200.00:0.20:0.09:3000.00:MHz PRB=EP-4B-02:08.07.19; V/m:10.00:200.00:0.10:0.09:3000.00:MHz:4:0.02 PRB=HP-1B-01:15.07.19; uT :100.00:200.00:0.04:9.99:5000.00:Hz :S PRB=EP745:04.10.19; V/m:100.00:450.00:0.35:0.09:7000.00:MHz:S PRB=EP645:15.07.09; V/m:10.00:360.00:0.01:0.09:3000.00:MHz:S PRB=EHP-2B-03:12.09.22;%:10.00:1000.00:0.10:4.99:9250.00:1000.00:0.50:1.00:1000.00:MHz:S PRB=EFD-0391-V1.1:01.01.01; V/m:2.00:320.00:0.20:0.10:3000.00:MHz:S</p>
?S/NO	<p>This query command #LR?S/NO* requests the serial number of the unit.</p> <p>Example of reply: S/NO=000WE20501</p>
?SID	<p>This query command #LR?SID* requests the Wi-Fi network Service Set Identifier, that is to say the name stored in memory.</p> <p>The reply is in the format: SID=stringSSID</p> <p>Example of reply: SID=Redmi Note 8 Pro</p> <p>When a network name has not yet been stored, the stringSSID corresponds to DEMO_AP</p>

<p>?SNS</p>	<p>This query command #LR?SNS* requests data from the environmental sensor.</p> <p>The reply, in the format SNS=T;H;P provides:</p> <ul style="list-style-type: none"> • T: Temperature, in Celsius degrees (°C) • H: Relative Humidity in percentage (%) • P: Atmospheric Pressure (hPa) <p>Example of reply: SNS=23.9;38.8;1013.6</p>
<p>?SST</p>	<p>This query command #LR?SST* requests the level of the signal for the wireless channel.</p> <p>The reply is in the format: SST=I where I is the RSSI value, expressed in dBm, for the wireless network which the unit is connected to.</p> <p>Example of reply: SST=-67</p> <p>When no network is detected, or the Area Monitor is disconnected, it returns SST=ERR</p>
<p>?STA</p>	<p>This query command #LR?STA* requests the alarms status, regardless of the MSK setting.</p> <p>The reply provides a string showing the following labels: STA=AWUVPTCawvp</p> <ul style="list-style-type: none"> • W: Warning level exceeded; • A= Alarm level exceeded; • w= end of Warning situation; • a= end of Alarm situation; • P= Probe failure Alarm; • p= end of Probe Alarm; • V= Low Battery Alarm; • v= end of Low Battery Alarm; • T= OverTemperature Alarm; • U= USB Connection Warning; • C= Relative Humidity Alarm. <p>Note: each alarm is replaced by dash "-" when not active.</p> <p>Note: when an EHP-2B-xx probe is connected, "W" refers to the alarm in field H and "A" refers to the alarm in field E .</p> <p>Please, refer to ?MSK command for alarm masking.</p> <p>Example of reply: STA=-W-V----- which means that the alarms for Field level Warning and for Low Battery voltage are active. The probe has just detected a level exceeding the Warning threshold and the battery voltage is lower than 3.0 V, that is to say it is almost exhausted.</p>
<p>?STAR</p>	<p>If the permanent alarm status is enable (see SANY), it can be deactivated by the command #LR?STAR*.</p> <p>Example of reply STA=-----</p>

<p>?STM</p>	<p>This query command #LR?STM* requests the active alarms condition.</p> <p>The reply provides a string showing the active alarms (they must be activated by SMSK command) as following: STM=AWUVPTCawvp</p> <ul style="list-style-type: none"> • W: Warning level exceeded; • A= Alarm threshold exceeded; • w= end of Warning situation; • a= end of Alarm situation; • P= Probe failure Alarm; • p= end of Probe Alarm; • V= Low Battery Alarm; • v= end of Low Battery Alarm; • T= OverTemperature Alarm; • U= USB Connection Warning; • C= Relative Humidity Alarm. <p>Note: each alarm is replaced by dash "-" when not active.</p> <p>Note: when an EHP-2B-xx probe is connected, "W" refers to the alarm in field H and "A" refers to the alarm in field E.</p> <p>Please, refer to ?MSK command for alarm masking.</p> <p>Example of reply: STM=-W-V----- which means that the alarms for Field level Warning and for Low Battery voltage are active. The probe has just detected a level exceeding the warning threshold and the battery voltage is lower than 3.0 V, that is to say it is almost exhausted.</p>
<p>?STS (for EHP-2B model probe only)</p>	<p>This query command #LR?STS* requests the index of the standard for EHP-2B-xx probes.</p> <p>The reply is in the format: SST=i where i is index of the covered standards list.</p> <p>This value affects Alarms and Warnings, the value saved in the log and the reply to the ?MES command.</p> <p>Example of reply: STS=1</p>
<p>?TMP</p>	<p>This query command #LR?TMP* requests temperature and humidity to the AMC.</p> <p>The reply, in the format TMP=T;H provides:</p> <ul style="list-style-type: none"> • T: Temperature, in Celsius degrees (°C) • H: Relative Humidity in percentage (%) <p>Example of reply: TMP=23.9;38.8</p>
<p>?VST[V]</p>	<p>This query command #LR?VST* requests the power supply status.</p> <p>The reply provides the code as follows:</p> <ul style="list-style-type: none"> • 0 for battery supply • 1 for external supply connected and battery charge completed • 2 for external supply connected and battery under charging <p>Example of reply: VST=1 which indicates the external 5V supply is connected and the battery is fully charged.</p> <p>Note: Adding the "V" character, so that the command becomes ?VSTV*, it is possible to obtain the information including the description.</p> <p>Example of reply: VST=0 (Battery)</p>

?WCM	<p>This query command #LR?WCM* requests the Wi-Fi IP configuration (DHCP or Static) stored in the unit Flash memory. The reply is as follows:</p> <p>WCM=DHCP the unit is set to connect automatically to a Wi-Fi network. WCM=STATIC the unit is set to connect to a Wi-Fi network according the User setting.</p> <p>Examples of reply: WCM=DHCP</p>
 NOTE	<p>This query command #LR?WFI* requests the status of the Wi-Fi module</p> <p>The reply is as follows:</p> <ul style="list-style-type: none"> • WFI=OFF when the module is switched OFF; • WFI=BLE when the Bluetooth LE is active; • WFI=ON SSID : stringSSID Signal Strenght : dBm Local IP Address : IPv4_Address:Port <p>If no IP address has yet been assigned to the unit, or it has not been possible to connect to the network, Local IP Address shows “waiting for connection”.</p> <p>Examples of reply: WFI=ON SSID : Redmi Note 11 Signal Strenght : -87 Local IP Address : 192.168.0.21:6666</p> <p>Which means that Wifi module is switched ON, the unit is connected to the Redmi Note 11 Wi-Fi network, the radio signal strength is -87 dBm, the assigned IP address is 192.168.0.21 and the connection is through the port 6666.</p> <p>The SMARTS AMC/00 has a configurable port by ETH Tools (default 5000); in addition, the Area Monitor Compact keeps open the port 50001 to communicate with the chip by ethernet configuration software.</p>
?WGY	<p>This query command #LR?WGY* requests the Gateway address used for static WiFi connection and stored in the unit Flash memory.</p> <p>Examples of reply: WGY=192.168.165.214</p>
?WIP	<p>This query command #LR?WIP* requests the unit IP address used for static WiFi connection and stored in the unit Flash memory</p> <p>Examples of reply: WIP=192.168.165.68</p>
?WLOG	<p>This query command #LR?WLOG* requests the binary Log file via wireless communication.</p> <p>NOTE: It works via BLE and Wi-Fi ports only. Please, refer to command ?LOG to download data via fiber optic or USB connection.</p> <p>The reply starts with string LOG_S and is terminated by the string LOG_E. The first 128 bytes (LOG_S included) represent the header; the following data represent the records of 32 (or 64) bytes each.</p> <p>Please, refer to the binary Log file paragraph at the end of this chapter for further details about the binary file.</p>

<p>?WMEifv (for EHP-2B model probe only)</p>	<p>This query command #LR?WMEi* requests the instantaneous % level related to the desired standard.</p> <p>i=1: Reference Standard (same reading as per ?MES command) i=2: Standard 2 i=3: Standard 3 i=4: Standard 4</p> <p>The order of the standards is: - for 01/02/05/06 model: ICNIRP98OCC, ICNIRP98GP, SC6CONTR, SC6UNCONTR. - for 03/04/07/08 model ICNIRP2020OCC, ICNIRP2020GP, FCCCONTR, FCCUNCONTR.</p> <p>The reply is in the format: WME=E.EE;H.HH;Unit;*; where:</p> <ul style="list-style-type: none"> • E.EE is the value for the Electric field; • H.HH is the value for the Magnetic field • Unit % is the measurement unit label (the “%” change in “&” when the frequency correction is enabled and the percentage indication is linear rather than quadratic) <p>WME=NA for probes other than EHP-2B-xx</p> <p>Example of reply: WME=45.96;2137.43;%;*; which indicates the E field is at almost 46%, H field is 2137% of the selected standard.</p> <p>By adding the f character after the index i, it is possible to include battery voltage and GPS data to the reply.</p> <p>Following is the standard NMEA GPRMC and/or GNRMC string that reports the information:</p> <ul style="list-style-type: none"> • Time (UTC) • Navigation receiver warning A = OK, V = warning • Latitude (deg. min North/South) • Longitude (deg. min East/West) • Speed over ground (Knots) • Course Made Good • Date (UTC) • Magnetic variation (deg) • Mandatory checksum <p>Following is the standard NMEA GPGGA and/or GNGGA string that reports the information:</p> <ul style="list-style-type: none"> • Time (UTC) • Latitude (deg. min North/South) • Longitude (deg. min East/West) • Position Fix • Satellites in use • Horizontal Dilution of Precision • MSL Altitude in m • Geoid Separation in m • Mandatory checksum <p>The reply is terminated by the string “-->” followed by date and time from the AMC.</p> <p>Example of reply: WME=46.13;1969.20;%;*;3.78V; \$GPRMC,162842.710,A,4341.1585,N,01047.9364,E,0.09,255.44,190822,,A*69 ;\$GPGGA,162842.710,4341.1585,N,01047.9364,E,1,9,0.99,38.3,M,47.8,M,,*6A ; -->23/09/22 00:07:00*</p> <p>The NMEA degrees minutes can be convert to decimal degree (see ?GPS command)</p>
---	--


	<p>Adding the “v” character, at the end of the command, so that it becomes ?WMEifv, it is possible to include in the reply string the additional values of heading (degrees), acceleration (g), temperature (° C) and humidity (%)</p> <p>Example of reply: WME=46.47;1930.61;%;*;3.79V; \$GPRMC,163230.000,A,4341.1574,N,01047.9386,E,0.01,25.87,190822,,D*54 ;\$GPGGA,163305.992,,,,,0,3,,,M,,M,,*4B ;Heading: 209 (SW); G:18; -97; 48;0.00;0.00*; -->24/09/22 00:11:23*</p>
?WMK	<p>This query command #LR?WMK* requests the Subnet mask used for Static WiFi connection and stored in the unit Flash memory.</p> <p>Examples of reply: WMK=255.255.255.0</p>
?WPT	<p>This query command #LR?WPT* requests the Port number of the unit used for DHCP or Static WiFi connection and stored in its Flash memory.</p> <p>Examples of reply: WPT=6666</p> <p>The SMARTS AMC/00 has a configurable port by ETH Tools (default 5000); in addition, the Area Monitor Compact keeps open the port 50001 to communicate with the chip by ethernet configuration software.</p>
?WRN	<p>This query command #LR?WRN* requests the Warning threshold followed by the time period (in minutes) on which the averaged field will be calculated.</p> <p>When the connected probe is a EHP-2B-xx, it returns the alarm threshold for the Magnetic Field. When the connected probe is a shaped model, the unit shown is %.</p> <p>Examples of reply: WRN=6.0 uT; 6.00 min. WRN=25000.00%; 30.00 min.</p> <p>If the Immediate function is ON (see SALIx command), the time period is replaced by the “I” character. Examples of reply: ALR=6.0 uT; I</p>
?WVR	<p>This query command #LR?WVR* requests the firmware version of the WIFI+BLE WINC3400 internal module.</p> <p>The reply format is as follows: WVR=Major.Minor.Patch BuildDate BuildTime</p> <p>Note: to work, the command requires that the module has been turned on via one of the two SBLE or SWFI commands. Otherwise, it returns the reply: WVR=ERR.</p> <p>Example of reply: WVR=1.3.1 Jun 28 2019 13:46:26</p>



NOTE

10.4 Setting commands These commands are intended for making settings on the AMC.



TABLE 9-4 Setting commands meaning	
SADRa	<p>This setting command sets the specific address for the AMC. It represents the additional prefix that will be accepted and recognized by that specific unit only, in the same way as the default prefix "LR" which is always valid for all stations.</p> <p>The reply is: ADR=OK if the command has been granted ADR=ERR if the command has been refused</p> <p>Note: the address must be a numeric, two digits, value between 00 and 99.</p> <p>Example: #LRSADR00* which means that the address of the AMC will be 00.</p>
SALIx	<p>This setting command sets the Instant Alarm status. Argument x represents:</p> <ul style="list-style-type: none"> • x=1 (ALI ON) the Warning/Alarm level threshold is compare with the instantaneous field value acquired by the unit without any RMS or arithmetic average. • x=0 (ALI OFF) the Warning/Alarm level threshold is compare with the averaged field value acquired (AVG or RMS) by the unit during the Time period. <p>See SALR e SWRN command for setting the level threshold. See SAVG command for setting the averaging mode.</p> <p>Example: #LRSALI1* which means that the instantaneous field value is enable.</p> <p>The reply is: ALI=OK if the command has been granted ALI=ERR if the command has been refused</p>
SALRs	<p>This setting command sets the Alarm threshold. Argument s is the threshold value, expressed in the current unit.</p> <p>When the connected probe is a EHP-2B-xx, it refers to the Electric Field. When the connected probe is a shaped model, the unit is %.</p> <p>The reply is the same as per ?ALR command.</p> <p>Example: #LRSALR6* which means the new Alarm threshold will be 6 in the current unit.</p>
SALT	<p>This setting command resets the reference altitude. Just after having issued the command, the altitude at that location will be 0 meters.</p> <p>The reply is: ALT=OK if the command has been granted ALT=ERR if the command has been refused</p> <p>Example: #LRSALT*</p>

<p>SAMCk para (for AMC/00 only)</p>  NOTE	<p>The setting command #LRSAMCk para* set the output of the SMARTS AMC/00 and the alarm on which the output self works. The argument “k” can be as following:</p> <ul style="list-style-type: none"> • k=B Set Buzzer • k=1 Set A1 output (Pin 8 and 12 of DB15 connector) • k=2 Set A2 output (Pin 7 and 11 of DB15 connector) • k=R Set Relè output (Pin 2, 3, 4, 5, 10 of DB15 connector) <p>The parameter “para” allows user to set which alarm should be enabled:</p> <ul style="list-style-type: none"> • W= Warning level exceeded • A= Alarm level exceeded • P= Probe failure ALARM • V= Low Battery ALARM • T= OverTemperature ALARM • C= Relative Humidity ALARM • U= USB Connection Warning <p>The dot (-) means the specific alarm is not active</p> <p>For example, the command #LRSAMCB WT* enable the Warning Level and Alarm OverTemperature on the Buzzer and provide the response: AMB-W---T-----</p> <p>If the index ‘k’ entered is not correct or the SMARTS AMC/00 is not present, the reply is: AMCK=ERR</p> <p>See §1.7.1 for User’s Port HD-15 female connector pinout list.</p>
<p>SANY</p>	<p>The setting command #LRSANY k* allows the user to set which device(s) should be enabled for field strength Alarm notification or active the Latched alarm function. The argument “k” can be as following:</p> <ul style="list-style-type: none"> • B = Buzzer; • L = Visual Led • V = Vibration • H = Hold Alarm <p>A dash “-“ means that specific Device is not enable.</p> <p>For example, the command #LRSANY BL* enable the Buzzer and Visual Led to notify field strength alarm but not the Vibration. The reply is: ANY=BL-*</p> <p>If the argument H is entered with the command #LRSANY H* and any alarm condition occurred, the AMC will remain in permanent alarm status (Latched Alarm) even if the normal condition has been restored. The reply is: ANY=--H*</p> <p>The permanent alarm status can be deactivated by the command #LR?STAR* (see ?STAR).</p> <p>If the index ‘k’ entered is not correct, the reply is: ANY=SERR</p> <p>The command SANY will take effect only if sent before the alarm notification.</p>

<p>SAQ_m;x;t</p>	<p>This setting command sets the Logger parameters.</p> <p>Argument m represents the Logger acquisition mode: I=Instantaneous and M=Average. The Average time and type are settable by SAVG command and the alarm is compared on it.</p> <p>Argument x represents the storing rate in seconds. The minimum value is 1s; the maximum value is 900s in instantaneous mode and it varies according to the AVG or RMS settings (please refer to SAVG command).</p> <p>If x is set to -1, the Logger is activated but the trigger event becomes the pressing of the button or, if enabled (SMSK L), the exceeding of the alarm threshold. In other words, when x=-1 the logger does not have a fixed time rate.</p> <p>Please refer to command SMSK for the Alarm Mask and SALR for the field level threshold.</p> <p>If the Logger rate x is greater than 0, and the logger is armed on crossing the alarm threshold (SMSK L), the log is carried out with the predetermined time interval and only if the alarm threshold has been exceeded.</p> <p>If the Logger rate x=0 disables the Logger.</p> <p>Argument t represents the Logger format.</p> <ul style="list-style-type: none"> • t=32 selects the compact version of the log, with no position information. Each record occupies 32 bytes. • t=64 selects the extended version of the log, complete of GPS data. Each record takes 64 bytes. <p>The reply is the same as per ?AQ_ command.</p> <p>Example: #LRSAQ_M;30;32* which means that the Logger type is logger is set to save a measurement every 30 seconds, of the compact type (32 bytes).</p> <p>If it is set that the alarm is also generated on the serial port (S field in the SMSK command), the binary file corresponding to the record is sent to the serial port at the preset logger rate.</p> <p>Note: setting the Logger via the SAQ_ command does not correspond to the actual start of the Logger, which instead occurs by pressing the button for more than 5 seconds, or via the SLST 1 command. This event erases the entire memory and the previously acquired logs are deleted.</p> <p>The Log remains active until the unit is turned off or the maximum number of storable records is reached. This number depends on the Log format; i.e. 125k in compact mode and 250k in extended.</p>
<p>SAVGl;r</p>	<p>This setting command sets the averaging time and type.</p> <ul style="list-style-type: none"> • l is the time length in minutes, between 0.25 and 30 with 0.25 minutes resolution up to 1 minute; 1 minute up to 15 minutes and always 30 minutes over 15. • r is the averaging type. A for AVG, R for RMS . <p>Example: #LRSAVG1;R* which means the unit is set to average over 1 minute with a RMS average type.</p> <p>The reply is the same as per ?AVG command.</p>

<p>SBDR b</p>	<p>This setting command sets the optical port baud rate. The parameter b is a code for the bit rate; in details:</p> <ul style="list-style-type: none"> • b=10: 9600 bps • b=11: 38400 bps • b=12: 57600 bps • else: 115200 bps <p>The reply is: BDR=OK if the command has been granted BDR=ERR if the command has been refused</p> <p>Example: #LRSBDR 10* which means the optical port speed is set to 9600 bps.</p> <p>Default speed is 115200 bps. The parameter is also kept when the unit is switched OFF. Like other essential settings, it can be reset when the AMC is turned on by keeping the button pressed.</p>
<p>SBLEx</p>	<p>This setting command switches the internal BLE (Bluetooth Low Energy) module ON or OFF as following:</p> <ul style="list-style-type: none"> • x = ON switches the module ON and starts the "advertising" procedure, making the unit visible to other Bluetooth devices. • x = OFF closes any open channel and turns OFF the module. <p>The reply BLE=OK indicates that the command has been granted.</p> <p>Once the pairing process has started, the password to connect is "123456".</p> <p>Example: #LRBLEOFF* which means that any open wireless channel will be closed and the module will be turned off.</p> <p>If the Wireless firmware release is older than 1.3.0, the reply is preceded by the string: ***WARNING LEGACY WIRELESS FIRMWARE***\r\n</p>
<p>SCLDd.m.y</p>	<p>This setting command sets the date of the Real Time Clock. Each parameter must be two digits, as following:</p> <ul style="list-style-type: none"> • d is the day (01 to 31) • m is the month (01 to 12) • y is the year (00 to 99) <p>The reply is the same as per ?CLK command.</p> <p>Example: #LRSCLD31.05.22* which means that the RTC date will be set to May, 31th 2022.</p>
<p>SCLTh.m.s</p>	<p>This setting command sets the time of the Real Time Clock. Each parameter must be two digits, as following:</p> <ul style="list-style-type: none"> • h for hours (00 to 23) • m for minutes (00 to 59) • s for seconds (00 to 59) <p>The reply is the same as per ?CLK command.</p> <p>Example: #LRSCLT16.25.00* which means that the RTC time will be set to 4:25 PM.</p>

<p>SCPCt</p>	<p>This setting command is used to start the compass calibration procedure. In order for the compass to be accurate, it must first be calibrated using the appropriate command where t is the calibration time in seconds. During this period, the unit must be oriented in all possible directions in order to extrapolate the magnetic offset. A count down is displayed on the terminal to help understanding both the frequency of the readings and the time left. Calibration is stored in the internal flash memory.</p> <p>A typical reply is: Compass found (code 0xC7): Magnetometer calibration: Please rotate the device next 30 seconds (90 Readings)</p> <pre>89 88 87 ... 0 Calibration Done</pre> <p>Then calibration data for debug purposes are added.</p> <p>Note: The Optic link port represents the compass needle</p> <p>Example: #LRSCPC30* which means that the RTC time will be set to 4:25 PM.</p>
<p>SDCMc</p>	<p>This setting command selects the wireless communication channel active at power on, as follows:</p> <ul style="list-style-type: none"> • c=0 to disable all wireless channels at power on; • c=1 to enable Wi-Fi module at power on; • c=2 to enable BLE module at power on. <p>If DCM=1 or DCM=2, the corresponding wireless communication channel will be kept active for 10 minutes. Any command received via the wireless channel will keep it active for another for 10 minutes. Otherwise, at the end of this period, the communication is deactivated.</p> <p>This setting is saved in the internal flash memory.</p> <p>Note: before any setting, with the unit blank, the communication is enabled, by default, on both channels.</p> <p>The reply DCM=OK indicates that the command has been granted.</p> <p>Example: #LRSDCM1* which means that each time the AMC will be turned on, the Wi-Fi module will be automatically activated.</p>
<p>SDSAx (for EHP-2B model probe only)</p>	<p>This setting command select the Dual Standard Alarm mode, as follows. Argument x represents:</p> <ul style="list-style-type: none"> • x=1 (DSA ON) the Alarm Level notification depends on the S(E) S(H) limit value of <u>the selected standard</u>, while the Warning Level notification is based on exceeding the S(E) S(H) thresholds <u>of the unselected exposure category</u>. • x=0 (DSA OFF) the Alarm Level notification depends on the S(E) limit value, while the Warning Level notification is based on exceeding the S(H) thresholds of the selected standard.. <p>Example: #LRSDSA1* The reply is: ALI=OK if the command has been granted ALI=ERR if the command has been refused</p>

<p>SGCSAh</p>	<p>This setting command selects the automatic RTC synchronization, taking advantage of the GPS signal. The argument h represents the time zone, an integer value in hours between -12 and 12. Please set your Country time zone and pay attention to the possible daylight saving time.</p> <p>The reply is: GCS=OK if the command has been granted GCS ERROR if the command has been refused (e.g. the value was out of range). In this case the RTC will be set for manual update.</p> <p>The success of the RTC update operation depends on the quality of the GPS signal received. Each time the clock update operation is successful, the complete list of all available events is updated with a string like: Auto Set:hh:mm:ss;dd/mm/yy</p> <p>Example: #LRSGCSA2* which sets the automatic RTC synchronization, using GPS module and a +2 hours time zone (Rome, in summer time).</p> <p>Note: the command for manual RTC setting is SGCSM</p>
<p>SGCSM</p>	<p>This setting command #LRSGCSM selects the manual RTC update. Choosing this mode, time and date must be set using SCLT and SCLD commands.</p> <p>The reply GCS=OK indicates that the command has been granted.</p> <p>Example: #LRSGCSM* which sets the manual RTC setting.</p> <p>Note: the command for automatic RTC setting is SGCSA</p>
<p>SGOF</p>	<p>This setting command switches immediately off the internal GPS module.</p> <p>The reply GOF=OK indicates that the command has been granted.</p> <p>Example: #LRSGOF*</p> <p> NOTE Whenever the SMARTS AMC is switched on, the GPS is turned on as well allowing thus tracking the position. The GPS remains always active even if a fix is made or the time out occurs (4 minutes) or the SGOF command is sent.</p>
<p>SGOOFF</p>	<p>This setting command turns immediately off the unit.</p> <p>Note: since the unit goes suddenly off after having received the command, no reply is returned.</p> <p>Example: #LRSGOOFF*</p>
<p>SGOI</p>	<p>This setting command turns immediately on the internal GPS module. It will stay on up to the first FIX or until the timeout of 4 minutes will expire.</p> <p>The reply GOI=OK indicates that the command has been granted.</p> <p>Example: #LRSGOI*</p> <p> NOTE Whenever the SMARTS AMC is switched on, the GPS is turned on as well allowing thus tracking the position. The GPS remains always active even if a fix is made or the time out occurs (4 minutes) or the SGOF command is sent.</p>
<p>SIDN i</p>	<p>This setting command sets the unit's identifier. Its maximum length is 20 characters.</p> <p>The reply is the same as per ?IDN command.</p> <p>Example: #LRSIDN Cisano* which means that the unit name will become Cisano.</p>

<p>SKFR f</p>	<p>This setting command sets the frequency for flatness correction. Argument f represents the frequency in Hz at which the correction is to be applied, or 0 whenever it is desired to disable the correction.</p> <p>In the case of an Electric and Magnetic probe, both correction frequencies are set to the indicated value. These values will then be adapted according to the frequency limits of the probe itself and therefore may differ.</p> <p>The reply is: KFR=OK in case the correction in frequency was set successfully KFR=NA in case the correction in frequency was not available</p> <p>Example: #LRSKFR 100000* which enables the correction factor associated to the frequency of 1 MHz.</p>
<p>SLPF f</p>	<p>This setting command sets the Low Pass Filter for the passive probes. The argument f must be between 0 and 3 and represents the index of the following list of available filters:</p> <ul style="list-style-type: none"> • 0: 10 Hz • 1: 20 Hz • 2: 40 Hz (default) • 3: 80 Hz <p>The reply is: LPF=OK if the command has been granted LPF=ERR if the command has been refused</p> <p>Example: #LRSLPF 2* sets the filter to 40Hz, which is the fastest filter able to cut the disturbances coming from the mains network.</p>
<p>SLST l</p>	<p>This setting command activates or stops the Logger immediately.</p> <p>The argument l must be:</p> <ul style="list-style-type: none"> • 0: stops the Log immediately • 1: starts the Log immediately <p>Note: starting the Logger (l=1) causes the immediate deletion of the Log previously saved in memory. SLST 1 is equivalent to a prolonged pressure (longer than 5s) of the button.</p> <p>The Logger parameters must be set via the SAQ_ command before sending this starting command.</p> <p>Example: #LRSLST 1* starts the Logger, deleting the previous saved one. The reply is: LST=OK if the SLST 1 command has been granted</p> <p>Example: #LRSLST 0* stop the Logger. The reply is: LST=OK\r\nLog Ended – SLST 0 if the SLST 0 command has been granted</p> <p>The reply is: LST=SERR when issuing a SLST 0 command while the unit was not running in Logger mode.</p>

<p>SMSKm</p>	<p>This setting command sets the Alarms and Warnings mask. The mask must contain the mnemonic symbols that represent the individual alarms as shown in the following table. They can be written in any order.</p> <ul style="list-style-type: none"> • W = Warning level exceeded; • A = Alarm threshold exceeded; • w = end of Warning situation; • a = end of Alarm situation; • P = Probe failure Alarm; • p = end of Probe Alarm; • V = Low Battery Alarm; • v = end of Low Battery Alarm; • T = OverTemperature Alarm; • U = USB connected Warning; • C = Relative Humidity Alarm; • L = Logger activation; • S = Alarm notification via serial port enable. <p>Note: if any symbols is not entered, all alarms and warnings are disarmed.</p> <p>Adding the S symbol, any Alarm will be transmitted via the serial port (Optical, USB and Ethernet) formatted as the reply to ?STA command. If the LOGGER is active (AQ_ command), with the S label the binary data, relating to each single acquisition, will be sent to the serial port.</p> <p>Adding the L symbol, if the LOGGER is active, the alarm triggers the saving of the measurement record, either on a time basis (AQ_ with a rate greater than zero) or continuously (AQ_ with a rate of -1).</p> <p>Please, refer to ?STA command for reading alarm status.</p> <p>The reply is the same as per the ?MSK command.</p> <p>Examples: #LRSMSK* disarms all alarms and warnings; #01SMSKAV* tells unit 01 to arm the Field level Alarm and the Low Battery Alarm.</p>
<p>SPWDP</p>	<p>This setting command sets the password for the Wi-Fi connection. The security is under the standard WPA-PSK.</p> <ul style="list-style-type: none"> • p = alphanumeric password up to 64 characters long. <p>The parameter is kept when the AMC is switched OFF.</p> <p>The reply PWD=OK indicates that the command has been granted.</p> <p>Example: #LRSPWDP@\$\$w0rd* which sets P@\$\$w0rd as the Wi-Fi password.</p>
<p>SREBOOT</p>	<p>This setting command forces the unit to reboot.</p> <p>Note: since the AMC goes suddenly in reset procedure after having received the command, no direct reply is returned.</p> <p>During restart, the Area Monitor Compact outputs to the serial ports the results of the initial diagnostics.</p> <p>Example: #LRSREBOOT*</p>

<p>SRST</p>	<p>This setting command restores the default configuration. The command resets the main parameters as follows:</p> <ul style="list-style-type: none"> • All Alarms masked; • Averaging period of 6 minutes; • Running average cleared; • Averaging type: RMS; <p>The reply RST=OK indicates that the command has been granted.</p> <p>Example: #LRSRST* restarts the unit.</p>
<p>SRSTR</p>	<p>This setting command restores the default configuration, logger rate included. The command resets the main and logger parameters as follows:</p> <ul style="list-style-type: none"> • Logger rate of 6 minutes; • All Alarms masked; • Averaging period of 6 minutes; • Running average cleared; • Averaging type: RMS; <p>The reply “Reset to Default Factory Setting and Reboot” indicates that the command has been granted, and is followed by the restarting diagnostics.</p> <p>Note: extreme attention must be used as this command invalidates any data already stored making them meaningless.</p> <p>Example: #LRSRSTR* resets the logger and restarts the unit.</p>
<p>SSIDi</p>	<p>This setting command sets the Wi-Fi network name for wireless 802.11 b/g/n connection. it is an alphanumeric string, up to 64 characters long.</p> <p>The parameter is kept also when the unit is switched OFF.</p> <p>The reply is: SID=OK if the command has been granted SID=ERR if the command has been refused</p> <p>Example: #LRSSIDNardaWIFI* which means that the SSID of the access point to connect to is NardaWIFI.</p>
<p>SSTSx (for EHP-2B model probe only)</p>	<p>Set the reference standard for EHP-2B probe The format is as follows: #LRSSTSx* where X is an index that goes from 1 to 4: “1” = Standard 1 (ICNIRP98OCC for EHP-2B-01/02/05/06 and ICNIRP2020OCC for 03/04/07/08) “2” = Standard 2 (ICNIRP98GP for EHP-2B-01/02/05/06 and ICNIRP2020GP for 03/04/07/08) “3” = Standard 3 (SC6CONTR for EHP-2B-01/02/05/06 and FCCCONTR for 03/04/07/08) “4” = Standard 4 (SC6UNCONTR for EHP-2B-01/02/05/06 and FCCUNCONTR for 03/04/07/08)</p> <p>Example #LRSSTS1* returns the response: #LRSSTS=OK* confirming that the EHP-2B probe is set to Standard 1; as default, the Alarm Level notification depends on the S(E) limit value, while the Warning Level notification is based on exceeding the S(H) thresholds of the selected standard.</p> <p>If the Dual Standard Alarm function is active, the Alarm level notification depends on the S(E) S(H) limit value of the <u>selected standard</u>, while the Warning level notification is based on exceeding the S(E) S(H) thresholds <u>of the unselected exposure category</u>.</p> <p>This index represents the reference standard for alarms, warnings, report and ?MES command response.</p> <p>The index is permanent and stored in the Flash. If not correct, the reply is STS=SERR</p>

SWCMx	<p>This setting command switches the unit to the desired Wi-Fi IP configuration and store the value in its Flash memory. The argument x can be as following:</p> <ul style="list-style-type: none"> • x=DHCP the unit is set to connect automatically to a Wi-Fi network. • x=STATIC the unit is set to connect to a Wi-Fi network according the User setting. <p>Example: #LRSWCM DHCP* returns the response WCM=OK</p> <p>If the command has been refused or the Wi-Fi connection is already active, the reply is: WCM =ERR</p>
SWFix	<p>This setting command switches the Wi-Fi module to the desired mode. The argument x can be as following:</p> <ul style="list-style-type: none"> • x= ON: turns on the module and starts the connection procedure; • x= OFF: closes any connection and turns off the module, including BLE; • x = AP to make a Wi-Fi network where the AMC acts as an access point (SSID DEMO_AP, no password) <p>SSID and password must be set before with commands SSID and SPWD.</p> <p>The reply is: WFI=OK if the command has been granted WFI=ERR if the command has been refused</p> <p>Example: #LRSWFION* which turns on the module and starts the connection</p> <p>Note: when the connection is established (parameter ON) the reply is followed by the IP address assigned to the unit, as in the following example: Wi-Fi IP is 192.168.0.9:6666</p> <p>If the Wireless firmware release is older than 1.3.0, the reply is preceded by the string: ***WARNING LEGACY WIRELESS FIRMWARE***\r\n</p>
SWGyx	<p>Set the Gateway address for Static Wi-Fi connection and store the value in unit Flash memory.</p> <p>Example: #LRSWGY 192.168.165.214* returns the response WGY=OK</p> <p>If the command has been refused or the Wi-Fi connection is active, the reply is: WGY=ERR</p>
SWIPx	<p>Set the IP Address for Static Wi-Fi connection and store the value in the unit Flash memory.</p> <p>Example: #LRSWIP 192.168.165.68* returns the response WIP=OK</p> <p>If the command has been refused or the Wi-Fi connection is active, the reply is: WIP=ERR</p>

10.5 Log file

Header

The binary file begins with a 128 bytes header, structured as follows:

- first 8 bytes are always 0x4C 0x4F 0x47 0x5F 0x53 0x20 0x0D 0x0A [0-7]
- 24 bytes reporting the serial number of the AMC (if it is shorter, a zero-padding is performed) [8-31]
- 94 bytes showing the name of the probe (if it is shorter, a zero-padding is done) [32-126]
- 1 bytes for Logtype of the Logger [127]

The LogType byte [127] encloses all the setting information.

A bit masking is needed to decode the settings, as follows:

(LogType & 1) is for the averaging mode (LSB)

- 0: Average (AVG)
- 1: Root Mean Squared (RMS)

(LogType & 2) is for compact or extended records

- 0: compact Log with 32 bytes records
- 2: extended Log with 64 bytes records, including position and speed data

(LogType & 4) is for averaged/instantaneous value

- 0: Average
- 4: Instantaneous value

(LogType & 8) is the Alarm activation flag

- 0: Log following an Alarm, disabled
- 8: Log following an Alarm, enabled

Data

The Log file contains, from the 129th byte [128], the records made up of 32 (Compact Log) or 64 (Extended Log) bytes each. Every type of probe contains a specific data structure capable of expressing all the values measured during the log, recorded in the first 32 bytes. Please, refer to paragraph Log File Data for details. Any additional 32 bytes contain the position and speed data. Please, refer to the Additional GPS Structure description paragraph for details.

End of Log file

The Log file ends with the checksum byte followed by the string "\r\nLOG_E\r\n\r\n" (corresponding to 0x0D 0x0A 0x4C 0x4F 0x47 0x5F 0x45 0x0D 0x0A 0x0D 0x0A).

The checksum byte consists of the modulo 256 sum of the hexadecimal values of all the bytes sent, related to the data. In other words, all bytes that make up the measurement records, starting from [128] are added together.

10.5.1 Log file data

All figures in this document are **BIG ENDIANNESS**.

**10.5.1.1 Passive Probes
Structure description**

Tot_avg		Tot_Peak		Reserved			
Hi Byte 1	Lo Byte 2	Hi Byte 3	Lo Byte 4	Byte 5	Byte 6	Byte 7	Byte 8
Battery	Temp.	Alarm	PERTS	MISC	DateTime		
Byte 9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14	Byte 15	Byte 16
X_avg		X_Peak		Y_avg		Y_Peak	
Hi Byte 17	Lo Byte 18	Hi Byte 19	Lo Byte 20	Hi Byte 21	Lo Byte 22	Hi Byte 23	Lo Byte 24
Z_avg		Z_Peak		Altitude		Seconds	RH
Hi Byte 25	Lo Byte 26	Hi Byte 27	Lo Byte 28	Byte 29	Byte 30	Byte 31	Byte 32

**10.5.1.2 Single and Three
Bands Active Probes
Structure description**

**(Bands in red are present
only for three band
Probes)**

Wide_avg		Wide_Peak		Reserved			
Hi Byte 1	Lo Byte 2	Hi Byte 3	Lo Byte 4	Byte 5	Byte 6	Byte 7	Byte 8
Battery	Temperature	Alarm	PERTS	MISC	DateTime		
Byte 9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14	Byte 15	Byte 16
L_B_Avg		L_B_Peak		H_B_Avg		H_B_Peak	
Hi Byte 17	Lo Byte 18	Hi Byte 19	Lo Byte 20	Hi Byte 21	Lo Byte 22	Hi Byte 23	Lo Byte 24
Reserved		Reserved		Altitude		Seconds	RH
Byte 25	Byte 26	Byte 27	Byte 28	Byte 29	Byte 30	Byte 31	Byte 32

**10.5.1.3 4-Bands Active
Probes Structure
description**

Wide avg		Wide Peak		Reserved			
Hi Byte 1	Lo Byte 2	Hi Byte 3	Lo Byte 4	Byte 5	Byte 6	Byte 7	Byte 8
Battery	Temperature	Alarm	PERTS	MISC	DateTime		
Byte 9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14	Byte 15	Byte 16
2140_Avg		2140_Peak		1842_Avg		1842_Peak	
Hi Byte 17	Lo Byte 18	Hi Byte 19	Lo Byte 20	Hi Byte 21	Lo Byte 22	Hi Byte 23	Lo Byte 24
942_avg		942_Peak		Altitude		Seconds	RH
Hi Byte 25	Lo Byte 26	Hi Byte 27	Lo Byte 28	Byte 29	Byte 30	Byte 31	Byte 32

**10.5.1.4 EHP2B Electric
Magnetic Active
Probe Structure
description**

E_avg		E_Peak		H_avg		H_Peak	
Hi Byte 1	Lo Byte 2	Hi Byte 3	Lo Byte 4	Byte 5	Byte 6	Byte 7	Byte 8
Battery	Temperature	Alarm	PERTS	MISC	DateTime		
Byte 9	Byte 10	Byte 11	Byte 12	Byte 13	Byte 14	Byte 15	Byte 16
Reserved		Reserved		Reserved		Reserved	
Hi Byte 17	Lo Byte 18	Hi Byte 19	Lo Byte 20	Hi Byte 21	Lo Byte 22	Hi Byte 23	Lo Byte 24
Reserved		Reserved		Altitude		Seconds	RH
Byte 25	Byte 26	Byte 27	Byte 28	Byte 29	Byte 30	Byte 31	Byte 32

10.5.2 Field data

Field data are represented as 16 bit. Such a figure should be considered as a big-endian unsigned 15 bit integer multiplied by the typical probe divider (see dedicated **?PRB** command). In the particular case in which the figure is equal to **0xFFFF** then the value must be considered invalid (AMC was not able to get a measure) and all the data (all 32 bytes) are meaningless.

If, for example, 16 bit figure named **Tot_avg** is 0x0244 and the divider 100 then the **RMS** (or **AVG**) field strength value related to broadband channel will be 5.80 (0x0244 in decimal notation is 580).

Most significant bit (D15) **INFL** flag gives the information whether in the period the measurement was influenced (Bit High) or not (Bit Low) by external cable or disturbing activity. Therefore it is not part of field strength and has to be masked.

Indeed, this is just a flag which informs that the measure could have been influenced by the system itself.

Bit 15 is INFL flag which informs the user that the measurement could have been **influenced** by a sum of external issues such as Wireless transmission, charging cable, USB cable & activity.

INFL flag is the LR of all single flags which refer to its own disturbing part (see **PERTs** byte).

Note that the presence of this flag informs the measurement can be heavily disturbed and thus could not be reliable at all.

Battery is the voltage of the battery. The number should be considered as an unsigned 8 bit integer. To get the correct value of the battery voltage the following formula is used: Volt = **Voltage*(0.132)**

If, for example, 8 bit figure named **Battery** is 0x1A (decimal 26) then the battery voltage will be 3.4 V

Temp is the Temperature recorded in the interval. The number should be considered as an unsigned 7 bit integer. In order to avoid negative figure an offset of 40 degrees centigrade is added thus, to get the correct value of the temperature, the following formula is used: T Centigrade = **Temp - 40**.

SPR Flag is a reserved one and should be masked (for example **Temp & 0x7F**).

If, for example, 8 bit figure named **Temp** is 0x3f (decimal 63) then the temperature will be 23°C

Alarm is the block of alarms recorded in the interval. Each bit should be considered individually as follows:

- Bit D07 When High it flags that the battery voltage was out of the safe limits.
- Bit D06 When High it flags that the relative humidity is out of working range.
- Bit D05 When High it flags that the temperature was out of working range.
- Bit D04 When High it flags that the USB cable was connected.
- Bit D03 Reserved
- Bit D02 When High it flags that a Probe failure was detected.
- Bit D01 When High it flags that the broadband field value overcame Warning threshold.
- Bit D00 When High it flags that the broadband field value overcame Alarm threshold.

PERT is the block of every single perturbing occurrence recorded in the interval. Each bit should be considered individually as follows:

- Bit D07 Reserved
- Bit D06 Reserved
- Bit D05 Reserved
- Bit D04 Reserved
- Bit D03 Reserved
- Bit D02 When High it flags that the USB connection was ON during sampling.
- Bit D01 When High it flags that the external Charger was connected by cable during sampling.
- Bit D00 Reserved

Note that the presence of one of the above flags indicates that the record has been perturbed by external influence and the result, in the best case, could be unreliable.

Figures **MISC** and **DateTimes** must be read together.

The 16 bit figure named **MISC** is shown as follows:

	D07	D06	D05	D04	D03	D02	D01	D00	D07	D06	D05	D04	D03	D02	D01	D00
MISC Byte 13/14	Reserved	AVGPeriod_Dec 2 bit uint	NOB		AVGPeriod Min 4 bit unsigned integer				MONTHS 7 bit unsigned integer							

This figure (**MISC**) should be considered as four different data as follows:

- Reserved. The Most significant bit is reserved.
- **AVGPeriod_Dec** is a 2 bit unsigned integer which shows the decimal part of the interval value related to the time span used to get the average (RMS or AVG). This figure is expressed in 15s, i.e., 01 means 15s.
- **NOB** is a 2 bit unsigned integer which informs how many bands (fields for EHP2B) are present in the record.
- **AVGPeriod Min** is a 4 bit unsigned integer which shows the interval (expressed in minute) related to the time span used to get the average (RMS or AVG). An exception is **AVGPeriod = 0** in which case the averaging time is 30 minute.
- **MONTHS** is a 7 bit unsigned integer which indicates how many months have been elapsed since 1st January 2022. Being the range limited to 127 the overlapping period is more than 10 years.

If, for example, **MISC** is **0x0083** then the meaning will be:

- **AVGPeriod**=1 (1 minute). Indeed (**0x0083 >> 7**) & **0xF** = **0x01**
- **MONTHS** =3 (April 2022). Indeed **0x0083 & 0x7F** = **0x03**

The 16 bit figure named **DateTime** is shown as follows:

	MI15	MI14	MI13	MI12	MI11	MI10	MI9	MI8	MI7	MI6	MI5	MI4	MI3	MI2	MI1	MI0
DateTime Byte 15/16	DateTime															

DateTime should be considered as a big-endian unsigned 16 bit integer and indicates how many minutes have been elapsed since the beginning of the current month (previous **MONTHS** data).

If, for example, **DateTime** is 0x95AE (decimal 38318) then the record will be related to the 27th of the month at 14:38.

Indeed :

$$\text{Day} = 1 + \text{Int}(\text{DateTime} / 1440) = 1 + \text{Int}(38318 / 1440) = 27$$

$$\text{Hour} = \text{Int}((\text{DateTime} \text{ Mod } (1440)) / 60) = \text{Int}((38318 \text{ Mod } (1440)) / 60) = 14$$

$$\text{Minute} = (\text{DateTime} \text{ Mod } (1440)) \text{ Mod } 60 = (38318 \text{ Mod } (1440)) \text{ Mod } 60 = 38$$

Merging the data with **MONTHS** we can get the full date of acquisition which is 14:38 27/04/2022. Time indications with second resolution is given in **Seconds**.

Altitude value is the relative Altitude and is expressed in m. This value is referred to the altitude measured when the log has started. The number should be considered as a 16 bit integer.

Seconds represent the time in seconds (modulo 60) at which the log has been saved. The number should be considered as an unsigned 8 bit integer.

RH value is the relative Humidity and is expressed in percent . The number should be considered as an unsigned 8 bit integer.

If, for example, 8 bit figure named **RH** is 0x32 (decimal 50) then the value of RH would be 50%

Figures **Standard [byte 18]** reflects the standard used (same as ?WME*i* command)

**10.5.3 Additional GPS
Structure description**

RES	RES	RES	Validity	Acceleration X		Acceleration Y	
Byte 33	Byte 34	Byte 35	Byte 36	Byte 37	Byte 38	Byte 39	Byte 40

Acceleration Z		RES	RES	Speed		Reserved	
Hi Byte 41	Lo Byte 42	Hi Byte 43	Lo Byte 44	Hi Byte 45	Lo Byte 46	Hi Byte 47	Lo Byte 48

Latitude int		Latitude Fract		Longitude int		Longitude Fract	
degree Byte 49	minute Byte 50	Hi Byte 51	Lo Byte 52	degree Byte 53	minute Byte 54	Hi Byte 55	Lo Byte 56

MSL Altitude		Heading		RES	RES	RES	RES
Hi Byte 57	Lo Byte 58	Hi Byte 59	Lo Byte 60	Byte 61	Byte 62	Byte 63	Byte 64

Validity represents data validity – **0**:Valid **Else**:Unvalid.

Acceleration X, Y, Z expressed in hundredths of [g]. For Accelerometer axes orientation see §2.7

Speed value is expressed in tenths of knots, must be divided by 10 to get the speed in [kn]

Position information next page

MSL Altitude is the Mean Sea Level Altitude in tenths of meter, must be divided by 10 to get the altitude in [m]

Heading is the direction in tenths of degree, so 0° (or 360°) indicates a direction toward North

10.5.3.1 Position Information

The 16 bit figure named **Latitude int** is shown as follows:

Byte 49/50	Degree	N/S	V	Minute
---------------	--------	-----	---	--------

The figure named **Latitude int** is made of 4 fields and represents the integer part of the GPS Latitude.

- **Degree** is a 8 bit unsigned integer which indicates the degree of latitude.
- **N/S** (D7) is a flag which indicates whether the latitude is North or South. When referred to North N/S=0 while if N/S=1 the latitude is South.
- **V** (D6) is a flag, which indicates whether data is valid, or not. When coordinates are valid V=0. When V=1 the GPS was not able to correctly get the position.
- **Minute** is a **6 bit** unsigned integer which indicates the minute integer part of latitude.

The 16 bit figure named **Latitude Fract** is shown as follows:

	D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
Byte 51/52	Ten thousandths of a minute															

The figure named **Latitude Fract** is a **Big-endian** unsigned 16 bit integer and indicates the fractionary part of the GPS Latitude and it is expressed in Ten-thousandths of a minute.

Merging the previous data **Latitude int** and this figure the full latitude can be obtained.

If, for example, **Latitude int=0x2c04** and **Latitude Fract=0x12a9** then the GPS latitude would be: 44 degree, 04.4777 minute North.

Indeed, 0x2c=44, 0x04=04 and 0x12a9=4777. N/S is 0 then the latitude is North.

The 16 bit figure named **Longitude int** is shown as follows:

Byte 53/54	Degree	E/W	res	Minute
---------------	--------	-----	-----	--------

The figure named **Longitude int** is made of 4 fields and represents the integer part of the GPS Longitude.

- **Degree** is a 8 bit unsigned integer which indicates the degree of latitude.
- **E/W** (D7) is a flag which indicates whether the Longitude is East or West. When referred to East E/W=0 while if E/W=1 the Longitude is West.
- **D6** is reserved and have to be masked out.
- **Minute** is a **6 bit** unsigned integer which indicates the minute integer part of Longitude.

The 16 bit figure named **Longitude Fract** is shown as follows:

	D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0
Byte 55/56	Ten thousandths of a minute															

The figure named **Longitude Fract** is a **Big-endian** unsigned 16 bit integer and indicates the fractionary part of the GPS Longitude and it is expressed in Ten-thousandths of a minute.

Merging the previous data **Longitude int** and this figure the full Longitude can be obtained.

If, for example, **Longitude int=0x0809** and **Longitude Fract=0x16b3** then the GPS Longitude would be: 8 degree, 09.4777 minute East.

Note that position is valid only when **Flag V** of **Latitude int** is zero.

This page has been left blank intentionally

11 - Accessories

11.1 Introduction

This section provides information required for installing and using accessories of the SMARTS AMC Area Monitor Compact. Information is included regarding initial inspection, power requirements, interconnections, work environment, assembly, cleaning, storage and shipment.

The following general information is applicable to all accessories.

11.2 Preliminary inspection

Inspect the packaging for any damage.

NOTICE

If the packaging or anti-shock material have been damaged, check that the contents are complete and that the product has not suffered electric or mechanical damage.

Check that all the Accessories are there against the checklist found with the apparatus.

Inform the carrier and NARDA of any damage that has occurred.

11.3 Work environment

Unless otherwise specified, the work environment of the Accessories, must come within the following conditions:

- Temperature From -20°C to +55° C (0°C to 40°C for Battery Charger)
- Humidity From 5 to 95% relative

The Accessories must be stored in a clean and dry environment, free from dust, acids and humidity.

The storage environment must come within the range of the following conditions:

- Temperature From -30°C to + 75°C (-20°C to 60°C for Battery Charger)
- Humidity < 95% relative

11.4 Return for repair

When the Accessories need to be returned to NARDA for repair, please complete the questionnaire appended to this User's Manual, filling in all the data that will be useful for the service you have requested.

For reducing the period of time required for the repairs, it is necessary to be as specific as possible in describing the problem. If the problem only occurs in certain circumstances, please describe in detail how it happens.

If possible it is better to reuse the original packaging; making sure that the apparatus is wrapped in thick paper or plastic.

Otherwise, use strong packaging by using a sufficient quantity of shock absorbent material around all sides of the product to ensure that it is compact and does not move around inside the package.

In particular, take every precaution to protect the front and rear Main unit panels, Wall support bracket, Interface and Radome.

Finish the package by sealing it up tightly.

Apply a FRAGILE label to the package to encourage greater care in its handling.

11.5 Cleaning

Use a dry, clean and non-abrasive cloth for cleaning the instruments.

NOTICE

Do not use solvents, acids, turpentine, acetone or other similar products for cleaning the devices in order to avoid damaging them.

11.6

USB-OC Optical USB Converter

11.6.1 Introduction



USB-OC is a standard accessory of the SMARTS AMC Area Monitor Compact.

It converts the signals of some of the system's accessories, which are only connected via fiber optic, into USB-compatible signals. It, therefore, makes it possible to link the following items up to the USB port of any Personal Computer to operate them in conjunction with specific application software and for firmware updating.

The USB-OC is indispensable for updating the internal firmware via a Personal Computer and update software is available on NARDA's Web site at: <http://www.narda-sts.it>

11.6.2 Installation

Insert USB-OC in the connector of a free USB port of the PC, connect the fiber optic coming from the AMC or other accessories paying attention to the locating key.

Considering the very low consumption of the device, the power required by USB-OC is taken directly from the USB port of the PC. This means no maintenance is needed.

Table 11-1 Technical specifications of the USB-OC Optical USB Converter

Max. length of the fiber optic	40 m (standard 10 m; 2 to 40 m optional)
USB Connector	Type A Male

NOTICE

The link between USB-OC and a HUB USB device or USB cable extension could not work properly. It is advisable to connect the USB-OC directly to the PC.



Front view

Key:

Fiber optic RP-02 connector



Rear view

Key:

USB Type A Male

Fig. 11-1 USB-OC adapters

Power supply

USB-OC is powered directly from the USB port of the PC.

11.7

TR-02A Tripod

11.7.1 Introduction



TR-02A is an Optional Accessory of the SMARTS AMC Area Monitor Compact. It allows AMC to be easily supported during field measurements. Each of these instruments has a securing screw, usually placed on the bottom part of its container that enables it to be easily and quickly put into place through the 8053-SN swivel supplied with the tripod.

The design and materials of the TR-02A tripod have been specially selected to prevent it from disturbing the sensors and, therefore, the measurements taken.

The height of the tripod can be adjusted by means of its extendable legs and it is furnished with special feet that are able adapt to all surfaces thereby improving stability. The height of its central support can also be adjusted.

It is supplied with a small protective carrybag to make it easy to carry.

Table 11-2 Technical specifications of the TR-02A Tripod

• Legs	3 legs x 3 extendable sections
• Transport size:	76 x 12 x 12 cm
• Minimum height:	60 cm
• Maximum height:	180 cm
• Weight	2.8 kg
• Load capacity:	10 kg
• Tripod support	Threaded insert 1/4 "

Details of the mounting head of the central column of the support and its adjustments:

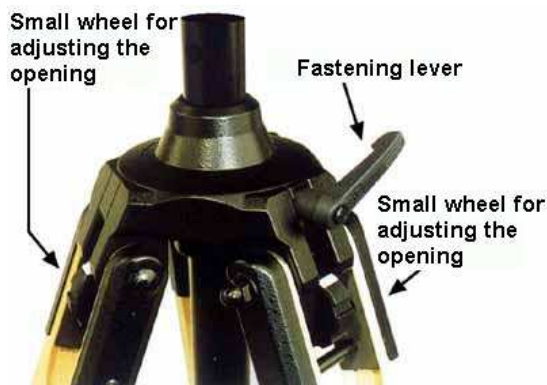


Fig. 11-2 TR-02A Tripod

The angle for opening each leg into three different positions can be adjusted by using special small adjustable wheels:

- fixed opening of 20°: White adjustment indicator is visible (as in the Figure);
- fixed opening of 45°: Red adjustment indicator is visible;
- variable opening: no indicator is visible.

The central support can be adjusted and blocked by means of a special fastening lever.

Details of the swivel for fastening to the **Tripod Joint**:

- full height: 8 cm
- weight: 160 g
- load capacity: 10 kg
- Threaded insert 1/4"

The adjustable swivel makes mounting and fastening the instrument easy as well as changing the angle in any directions via the locking knob.



Fig. 11-3 SMARTS AMC/00 on the TR-02A Tripod

11.8

AC/DC USB Power Supply and battery charger

11.8.1 Introduction

Wall plug regulated switchmode AC/DC power supply is a standard accessory of the SMARTS AMC Area Monitor Compact.

It is provided with the USB(A)/USB(C) cable to supply the AMC and for charging the internal battery.

This is a Class II / Double insulated device for indoor use only.

Please, adopt the terminal suitable for your Country, following the brief instructions in the picture.

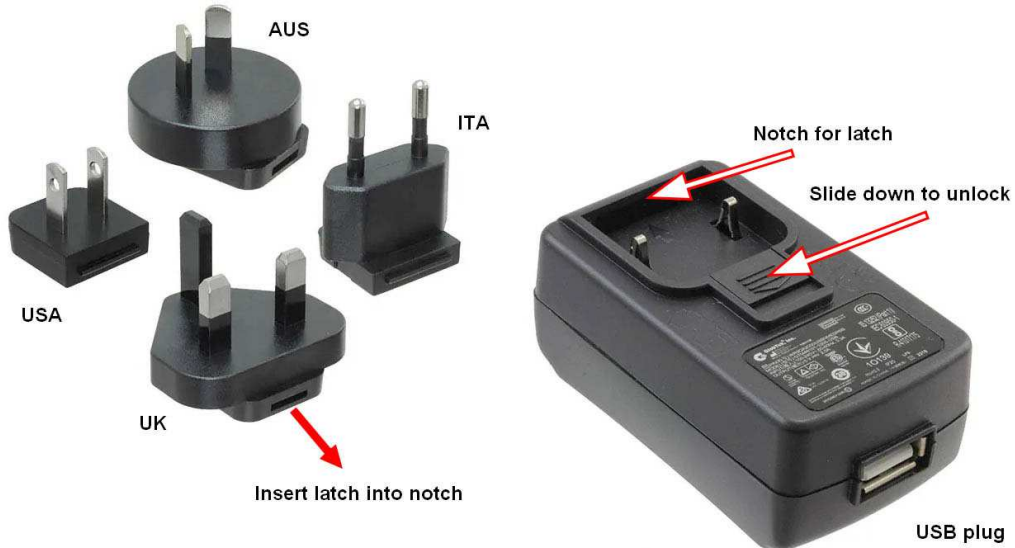


Fig. 11-4 AC/DC Power Supply / battery charger

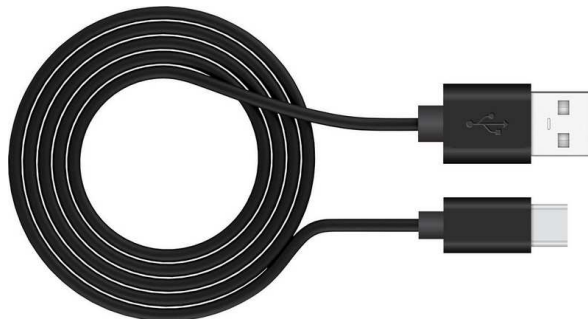


Fig. 11-5 USB Cable – USB(A)/USB(C)

Table 11-3 Technical specifications of the AC/DC Power Supply	
Rated Input	100 – 240 Vac; 50 – 60 Hz; 0,3 A
Volt output:	5.0 Vdc
Max current:	2.0 A
Power:	10 W
Output connector	USB-A Female; pin1=+V, pin2=NC; pin3=NC; pin4=GND

Table 11-4 Technical specifications of the USB Cable – USB(A)/USB(C)	
Input connector	USB-A male
Output connector	USB-C male
Max current:	2.0 A
Power:	10 W
Length	2 m

11.9

Carrying case

11.9.1 Introduction

Carrying case is an Optional Accessory of the SMARTS AMC Area Monitor Compact.

This hardy and sturdy case features a double handle for improved grip and an interior foam for a quick custom package of the the instrument and accessories; it also ensure enhanced protection for sensitive items, and impact resistance.



Fig. 11-6 Carrying case

Table 11-3 Technical specifications of the Carrying case	
External dimensions (Overall WxLxH)	482 x 375 x 184 mm
Weight	2,4 Kg only the case

11.10

PoE Injector (for SMARTS AMC/00 only)

11.10.1 Introduction

The Power Over Ethernet, such as TL-POE150S or equivalent products is an Optional Accessory of the SMARTS AMC/00 Area Monitor Compact. It delivers power, data and network connection over the same cable to the Area Monitor Compact through the Ethernet port available on the bottom of the AMC baseplate.



Fig. 11-7 PoE Injector

Table 11-5 Technical specifications	
Interface	n°1 10/100/1000 Mbps RJ45 LAN port (LAN IN) n°1 10/100/1000 Mbps RJ45 PoE port (Power+Data OUT) n°1 Power socket (DC IN)
Power supply	15.4W (Max. 48VDC)
Dimensions (W x D x H)	80.8 x 54 x 24 mm

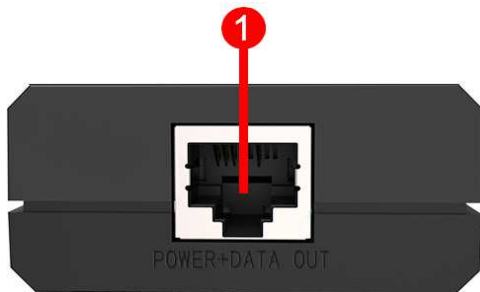


Fig. 11-8 TL-POE150S Front panel

TL-POE150S Front view

Key:

- 1) 10/100/1000 Mbps Power&Data Output Port

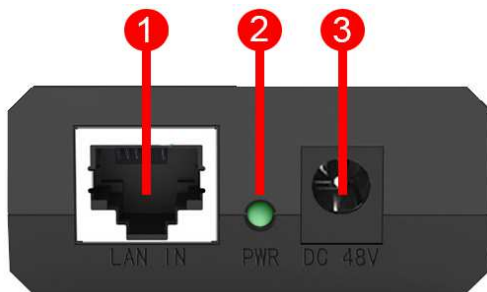


Fig. 11-9 TL-POE150S Rear panel

TL-POE150S Rear view

Key:

- 1) 10/100/1000 Mbps Data Input Port
- 2) Led Power
- 3) AC Power Input Socket



For additional information, refer to the instructions of its manufacturer.

This page has been left blank intentionally

12 – Service

12.1 Miscellaneous messages

There are some messages that are generated automatically in specific circumstances.

When the GPS module does not respond, the unit sends the string:

GPS Not Available

If Area Monitor Compact is not supplied by USB-C cable or PoE Injector and the internal battery voltage is low, the SMARTS AMC sends the string:

WRN: Low Battery

If Area Monitor Compact is not supplied by USB-C cable or PoE Injector and the internal battery voltage is below 3.0 V, the SMARTS AMC sends the string:

*****VOID BATTERY***
switching off**

Then, the SMARTS AMC is turned off.

If Area Monitor Compact is not supplied by USB-C cable or PoE Injector and does not receive any command for 30 minutes, and the Logger is not enabled, the AMC sends the string:

*****No ACTIVITY***
switching off**

Then, the SMARTS AMC is turned off.

12.2 Initial diagnostic

Just after turning on the AMC, it sends automatically the initial diagnostic results during the boot sequence.
The ASCII text is self-explained.

The following is an example where an Electric and Magnetic probe is connected to the AMC Area Monitor Compact.

```
#LR$OPTFRK*

LR01: FW 1.21 01/24, L A5.3 01/24, W 1.3 09/23
Sensing Flash memories
1 found
1 Flash Memory sensed

SNS=24.9;37.6;1024.5 [Cel.Deg., %, hPa]
Battery:4.52V
RTC: + 26.4 ppm Cal Date:15.31.34-01.03.23
USB:Connected
Compass found (code 0xC7): Heading: 42 (NE); G:0; -100; 36
AMC option:1.10;11/01/24
No LAN Connection Detected
Check Probe...

Loading active probe

PRB=EHP-2B-
05:08.06.22;#:100.00:1000.00:0.10:0.49:9250.00:1000.00:0.50
:20.00:1000.00:MHz:S
BLE=OK
```